


Network Video Camera NEIUS & NEIUS PLATINUM Series

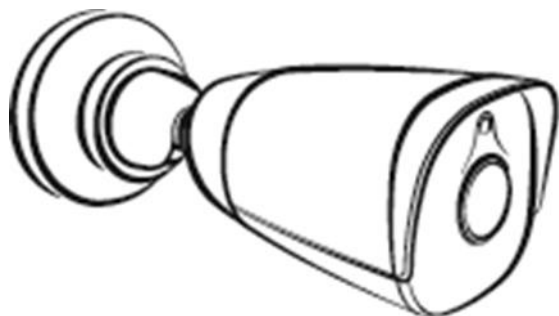

USER MANUAL

Thank you for selecting our products. Please read the User Manual carefully before using this product. This User Manual will provide you with correct instructions to set the camera.

Statement

- The Company has the right to update the contents of this Manual according to the enhancements and changes of product functions, and periodically improve the software and hardware products described in this Manual. Updated information may be reflected in the latest version of this Manual without prior notice.
- Product parameters may change because of continuously using new technologies without prior notice.
- This Manual is only used for providing reference and guidance for customers. It is not guaranteed to be completely consistent with the actual product, and the actual product may prevail during practical application.
- The information on the texts, forms and pictures in this Manual are protected by relevant national laws, and it shall not be used without permission.
- All the copyright and final interpretation right of this manual belong to our company.

Contents

1 PRECAUTIONS	6
2 PRODUCT OVERVIEW	8
3 INSTALLATION INSTRUCTIONS	9
3.1 PREPARATION FOR INSTALLATION	9
3.2 INSTALLATION METHODS	10
3.2.1. HD Network IR Integrated Machine (MINI)	10
3.2.2. HD Network IR Integrated Machine (MINI)	11
3.2.3. HD Network IR Dome Camera	13
3.2.4. HD Network IR Dome Camera (MINI)	15
3.2.5. HD Network Safe (Non-) IR Dome Camera	16
3.2.6. HD Network Gun Camera	18
3.2.7. HD Network Zoom IR Gun Camera	19
3.2.8. Dimensions of HD Network Zoom (Non-)IR Dome Camera	21
3.2.9. HD Network Special-shaped Safe IR Dome Camera	23
3.2.10. Thermal & Optical Bi-spectrum Network Bullet Camera	23
3.3 WATERPROOF CONSTRUCTION SPECIFICATIONS	28
4 INTERFACE DESCRIPTION	30
4.1 CAMERA TAIL CABLE INTERFACE DESCRIPTION	30
4.2 HD NETWORK ZOOM IR GUN CAMERA	35
4.3 DIMENSIONS OF HD NETWORK ZOOM (NON-)IR DOME CAMERA	37
4.4 NETWORK BOX CAMERA SERIES	39
4.4.1. Network Box Camera	39
5 WEB CLIENT	41
5.1 OPERATING ENVIRONMENT	41
5.2 IE SETTINGS	41
5.3 LOGIN DEVICE	43
5.4 LIVE VIEW INTERFACE	47
5.5 PLAYBACK	54
5.6 LOG	56
5.7 CONFIGURATION	57
5.7.1. Basic Set	58
5.8 AUDIO VIDEO SET	61
5.8.1. Stream	61
5.8.2. Audio	64
5.8.3. Image Setting	65
5.8.4. OSD	69
5.9 NETWORK	72
5.9.1. Basic set	72
5.9.2. Advanced Set	77

5.10	HUMAN BODY TEMPERATURE MEASUREMENT SETTING.....	85
5.10.1.	Human body temperature measurement setting.....	86
5.10.2.	Alarm on unacceptable body temp.....	87
5.11	EVENT SCHEDULE.....	89
5.11.1.	Event Management.....	89
5.12	VCA.....	94
5.12.1.	Create Rule.....	95
5.12.2.	Shield Area.....	113
5.12.3.	Advance Params.....	113
5.12.4.	Online VCA Log.....	114
5.12.5.	Facial Configuration.....	114
5.13	STORAGE.....	117
5.13.1.	Schedule Recording.....	117
5.13.2.	Picture settings.....	119
5.13.3.	Disk management.....	120
5.13.4.	NFS.....	121
5.13.5.	Face FTP.....	122
5.14	SYSTEM.....	123
5.14.1.	System.....	123
5.14.2.	Users.....	126
5.14.3.	Maintenance.....	127
5.14.4.	Local PC Settings.....	129
5.15	EW.....	130
6	SIMPLE TROUBLESHOOTING.....	132
6.1	SYSTEM FAILURE.....	132
6.2	NETWORK FAILURE.....	132
6.3	OPERATION FAILURE.....	134
6.4	CONTROL FAILURE.....	135
6.5	VIDEO FAILURE.....	135
6.6	AUDIO FAILURE.....	137
6.7	ALARM FAILURE.....	137
6.8	PARAMETERS DOES NOT TAKE EFFECT AFTER SETTINGS.....	137
6.9	OTHERS.....	138
	APPENDIX I LIGHTNING PROTECTION AND SURGE PROTECTION.....	139
	APPENDIX 2: DEFAULT PARAMETERS AND RECOMMENDED CONFIGURATION.....	141



1 Precautions

The purpose of this Manual is to ensure that users can operate the products properly, thus avoiding danger or property damage. Please read this Manual carefully and keep it properly for future reference before using the products.

The personnel responsible for the installation and routine maintenance of the equipment must have basic skills for safe operation. Please follow the safety specifications specified in the product manual during the operation of the equipment.

Before installing the camera, check its technical specifications to ensure that the IP rating is suitable for the environment in which it will be mounted. The IP rating is only guaranteed if the product is installed correctly.

As shown below, the precautionary measures are divided into two parts: “Warning” and “Note”:

	
Warning Alert users to prevent the potential danger of death or serious injury	(1) Note Alert users to prevent the potential danger of injury or property damage



Warning:

- (1) Please use a power adapter that meets the requirements of SELV (Safety Extra Low Voltage) and meets the Limited Power Source specified in IEC60950-1. Refer to the list of product parameters for the specific parameters of power adapter.
- (2) Do not disassemble or modify the equipment in any way. The problems caused due to unauthorized disassembly or modification are not covered by the warranty, and the Company is not responsible for all problems arising from this, please contact the dealer or the latest service center in case the equipment is unable to work properly.

- (3) To reduce the risk of fire or electric shock, do not expose indoor products to rain or moisture.
- (4) Installation shall be performed by professional service personnel in accordance with local regulations.
- (5) User-friendly power-off equipment shall be connected in series during the installation and wiring of building.
- (6) Ensure that the connection can bear the weight at least 4 times the weight of the product before installing the equipment on a wall or ceiling.
- (7) Do not directly touch the heat-dissipating parts of the integrated machine, to prevent burns.



Note:

- (1) Prevent operations that may cause damage to products during the transportation and storage, such as heavy pressure, severe vibration and immersion.
- (2) Please check whether the power supply is correct before powering on the camera.
- (3) Do not directly touch the image sensor with any object, and wipe off the dirt with a lens tissue or eyeglass cloth slightly wet with alcohol if necessary, and do not give it a vigorous wipe to prevent scratching.
- (4) Please prevent pointing the lens directly at strong light (such as lighting, sunlight, etc.), otherwise, over-brightness or glare (this is not a failure of camera) may be caused, and the service life of image sensor may be affected.
- (5) Laser beam may burn the image sensor. When laser device is used, please be careful not to expose the surface of image sensor to the laser beam.
- (6) Do not place it in humid, dusty, extremely hot or cold, or strong electromagnetic radiation places.
- (7) Please ensure a sufficient distance between the installation location and surrounding electromagnetic sensitive equipment, to prevent possible electromagnetic interference.
- (8) Avoid heat accumulation and keep the surroundings of camera well ventilated.

- (9) Do not allow water or any liquid to flow into the equipment during use.
- (10) Products shall be provided with original packaging of the factory when being delivered or returned to the factory, otherwise, the damage to the network camera during transportation is not covered by the warranty.
- (11) Accessories or products may be used abnormally due to the improper replacement of battery, so users are not recommended to replace them directly; please the battery recommended by the manufacturer (suitable for the equipment with a battery) if necessary.
- (12) After logging in for the first time, be sure to change the default login password, thus avoiding loss due to weak passwords.
- (13) The interfaces of the equipment supporting USB, SD card or micro SD card interfaces do not support hot plugging, please power off the equipment before plugging or unplugging; otherwise, the equipment may be damaged.
- (14) The camera setting interface and menu contents of different models are not identical. Please refer to the actual interface. If you have any questions, please consult the dealer or our after-sales service.

2 Product Overview

This series of webcam products adopt high-sensitivity sensor and advanced circuit design, aiming to provide super high quality, powerful and reliable audio and video monitoring solutions, which are suitable for security applications requiring high-performance cameras. The network camera adopts High performance, single chip SOC chip to realize audio and video collection, compression and transmission; the standard H.265 and H.264 high profile, and main profile encoding algorithm and the enhancement S+, ensures a clearer and smoother video transmission effect; the embedded web server allows users to easily realize real-time monitoring and remote control of front-end cameras through IE browser (the default IP address is 192.168.1.2, user name admin, password admin). Products with wide dynamic, strong light suppression, intelligent analysis, ultra-low illumination, IR enhancement and other features, can be applied to finance, telecommunications, supermarkets, hotels, governments,

schools, airports, factories, public security, judicial and other places requiring ultra-high-definition image quality.

3 Installation Instructions


3.1 Preparation for Installation

(1) Basic requirements

Ensure that all electrical work must be conducted in accordance with the latest electrical regulations, fire regulations and related regulations; check whether the packaging is damaged, equipment and accessories are complete, and determine whether the application places and installation methods of network camera product meet the requirements; please contact the dealer if necessary, please use the product according to the requirements of the working environment.

(2) Common installation tools:

Prepare the tools actually required according to the actual situations

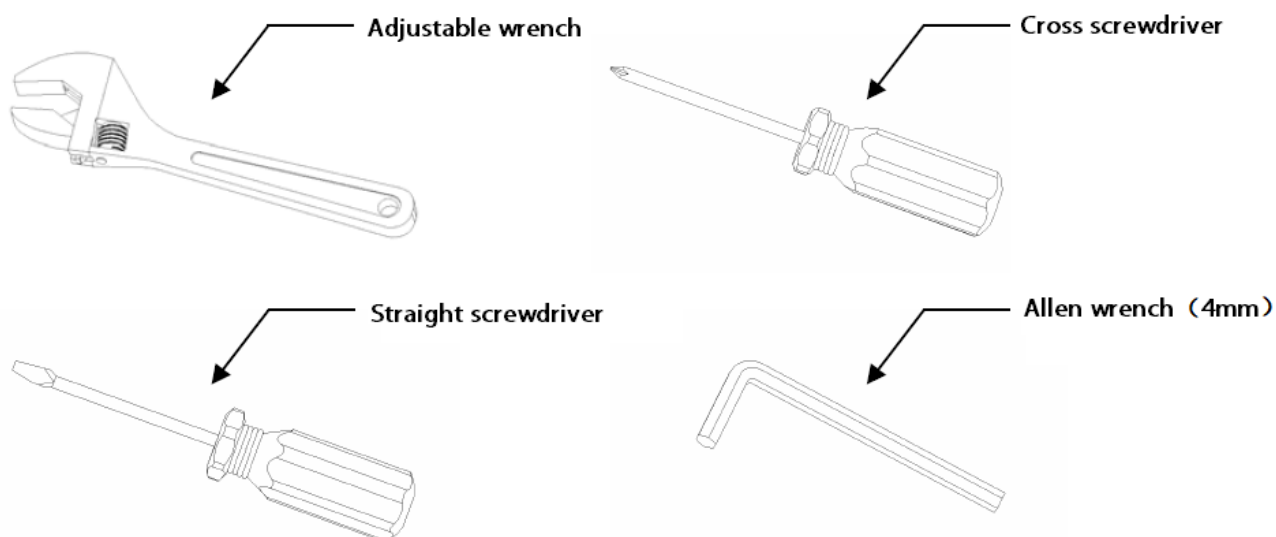

Common installation tools

(3) Check the strength of the construction of installation space and installation site

Confirm that there is enough space at the installation site to accommodate the product and its mounting structural part. Confirm that the carrying capacity of the ceiling, wall and

bracket on which the network camera is installed must be able to support the total weight of network camera and its mounting structural part, with a 4 times of safety factor.


Please keep all packaging materials of network camera

After unpacking the network camera, please keep the original packaging materials of network camera properly, and pack the network camera product properly using the packaging materials of network camera and return it to the supplier for handling in case of any problem.

Note: Non-original packaging materials may cause accidental damage during transportation.

3.2 Installation Methods

3.2.1. HD Network IR Integrated Machine (MINI)

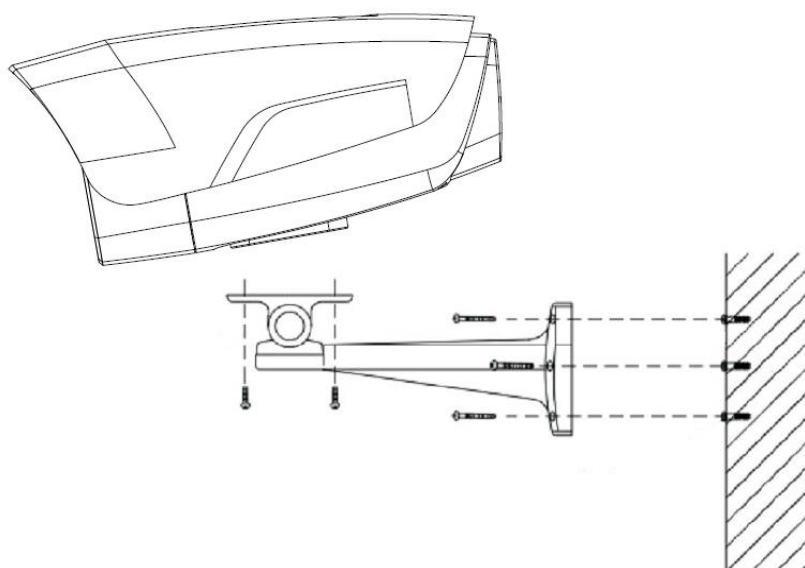

Installation diagram of HD network IR integrated machine

Steps:

1. Mark the positions of holes for mounting camera on the wall using an ink pen.
2. Make holes on the marked positions using an electric drill.
3. Drive the expansion rubber plug into the hole.
4. Fasten the wall mounting bracket on the wall with screws.
5. Take out the camera in the packaging box, and fasten the camera on the universal joint

of bracket with screws.


6. Adjust the universal joint of bracket to a proper position and then tighten the screws.

7. Finally, remove the protective film on the IR anti-reflection plate (some models are provided with IR anti-reflection plates, please clean the cleaning of the IR anti-reflection plate, to avoid oil stains and scratches).

Note:

- (1) Brackets must be purchased separately.
- (2) The mounting hole of camera is 5.5mm deep. Do not use excessively long screws.
- (3) The mounting surface of camera must have sufficient bearing capacity.

3.2.2. HD Network IR Integrated Machine (MINI)

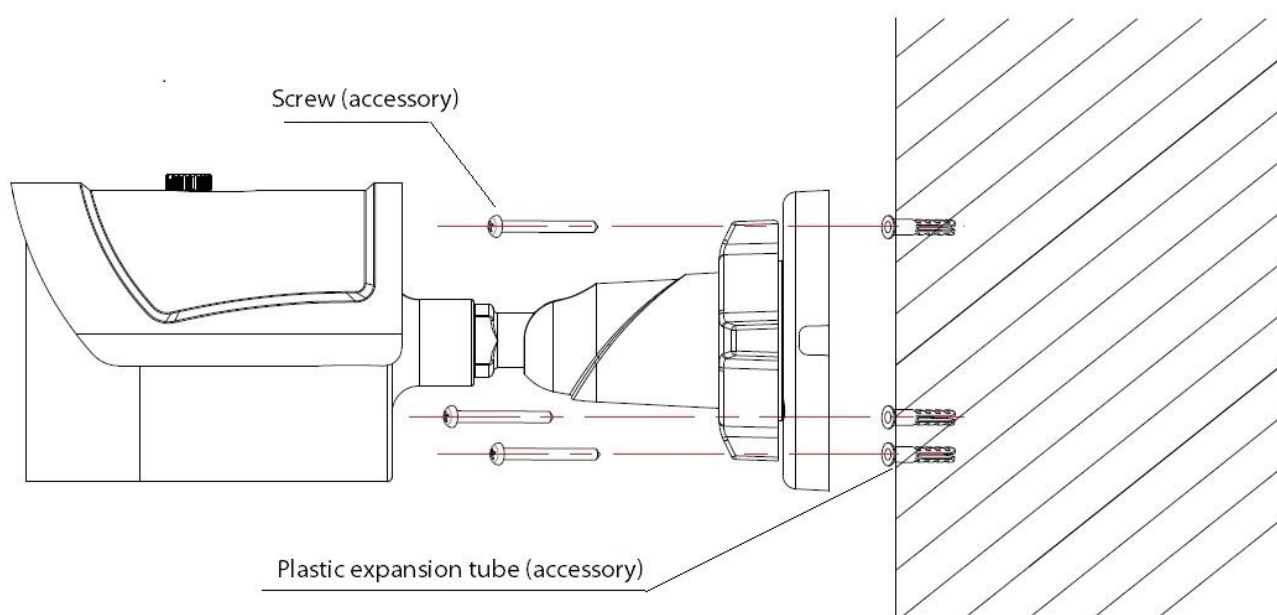


Installation Diagram of HD Network IR Integrated Machine (MINI) -V1.0

Steps:

- 1. Mark the positions of holes for mounting camera on the wall using an ink pen.
- 2. Make holes on the marked positions using an electric drill.
- 3. Drive the expansion rubber plug into the hole that has just been made.
- 4. Take out the camera in the packaging box and fasten the wall mounting bracket on the wall with 3 screws.

5. Adjust the universal joint of bracket to the proper position.

Note: The mounting surface of camera must have sufficient bearing capacity.

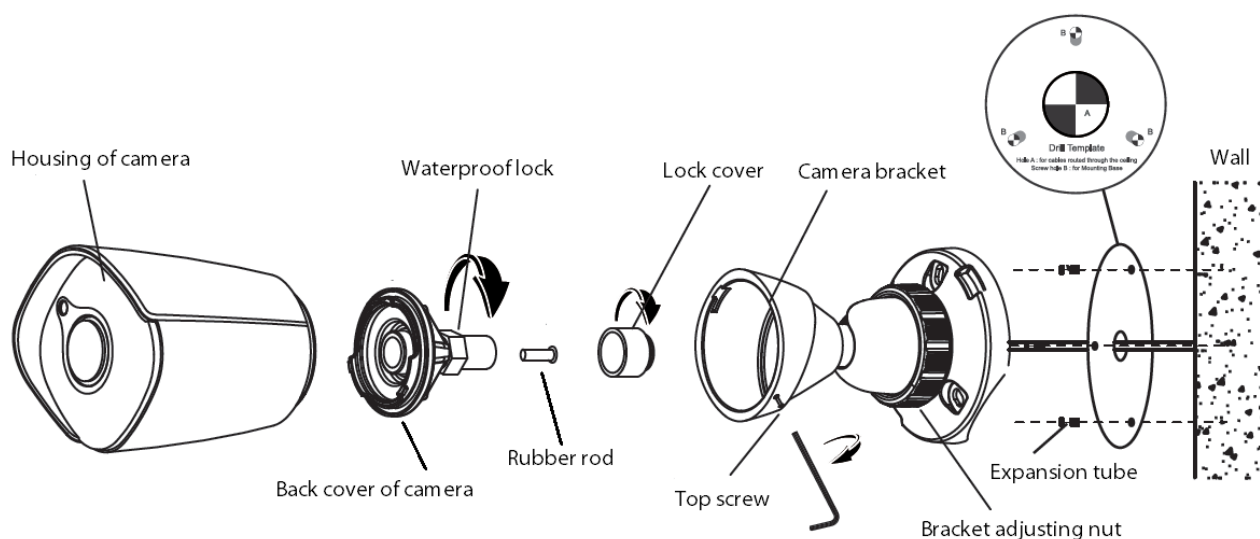


Installation Diagram of HD Network IR Integrated Machine (MINI) -V2.0

Steps:


1. Unscrew the top screw and remove the camera bracket. Unscrew the back cover of camera according to the mark, unscrew the waterproof lock on the back cover, and take out the rubber rod.
2. Paste the positioning stickers (accessories) on the wall where the camera needs to be installed, drill holes according to hole position B, and then drive the expansion tube (accessory) into the hole. Hole position A is the outlet hole. If necessary, drill holes according to the hole position. Pass the network cable through the camera bracket, and then fasten the bracket on the wall with 3 self-tapping screws (accessories). Pass the network cable through the waterproof lock and the back cover of camera.
3. Equip the network cable that has passed through the wire lock with RJ-45 terminal and power terminal.

If the camera is powered by means of POE, the wiring method of RJ-45 is as follows:

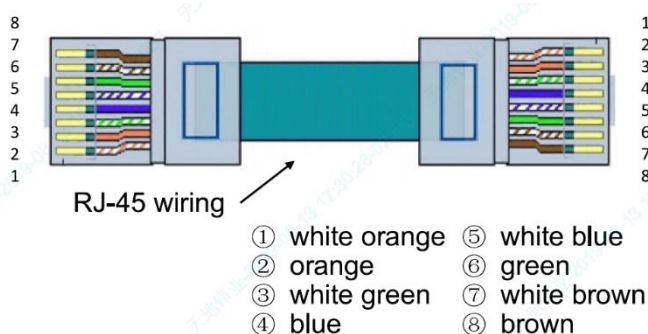

POE power supply-wire sequence diagram

If the camera is powered by means of non-POE, the wiring method of RJ-45 is as follows:

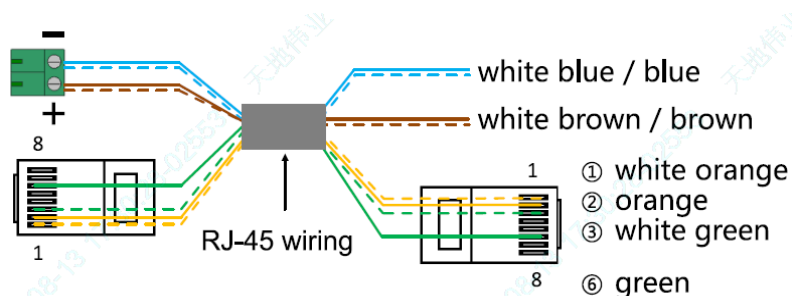

Non-POE power supply-wire sequence diagram


4. Tighten the back cover to the camera housing, adjust the length of cable, and then tighten the waterproof lock to the marked position. (Note: Please keep the back cover aligned with the scale on the camera housing during the adjustment of waterproof lock).

5. Fasten the camera housing to the bracket and tighten the top screw. Loosen the bracket adjusting nut on the camera bracket, adjust the camera angle, and tighten it after adjusting the picture to the required scene. Remove the protective film from the housing and complete the installation.


Note: The mounting surface of camera must have sufficient bearing capacity.

3.2.3. HD Network IR Dome Camera


(Unit: mm)

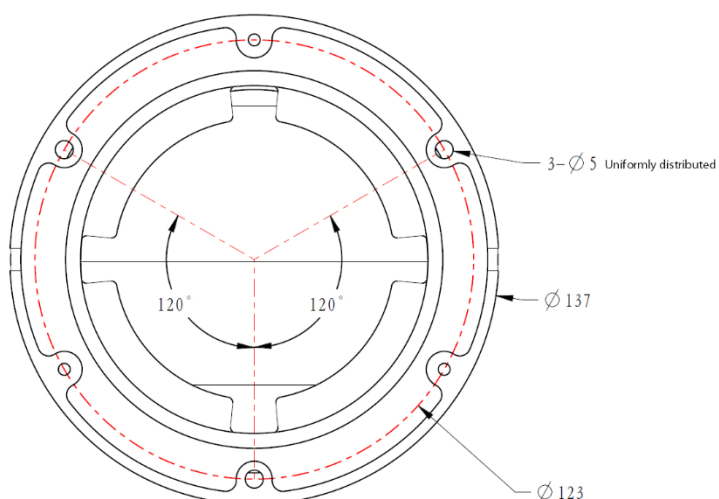

Installation Diagram of HD Network IR Dome Camera-V2.0

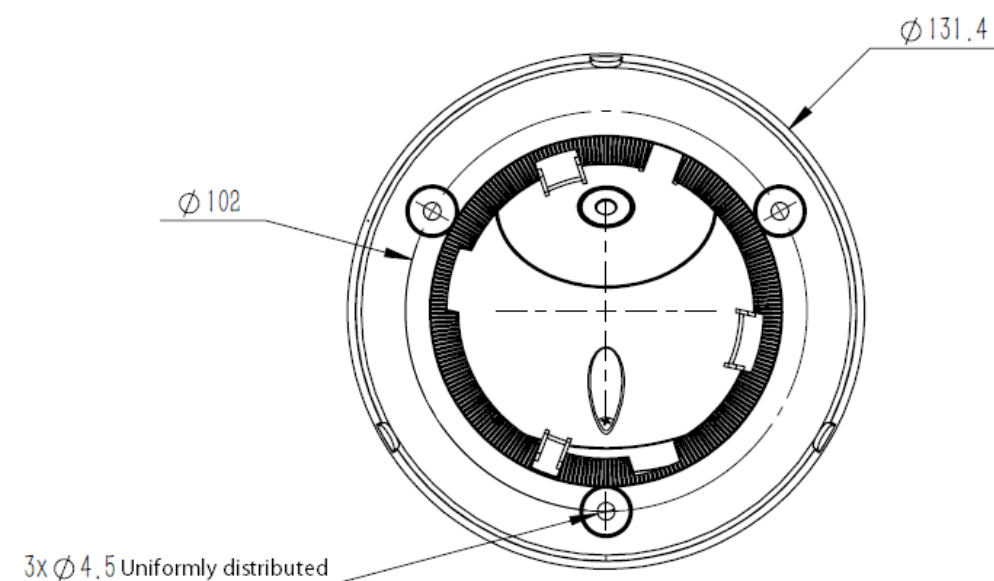

Installation Diagram of HD Network IR Dome Camera-V3.0/V4.0

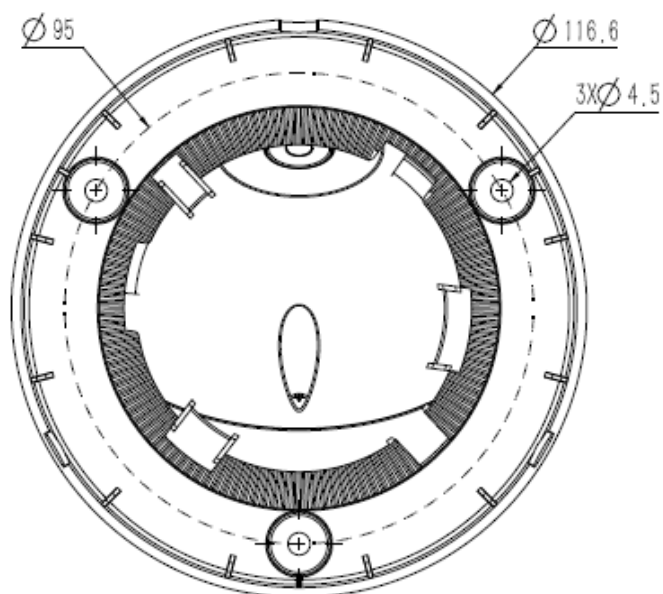

Installation Diagram of HD Network IR Dome Camera-V5.0

Steps:

1. Take out the camera in the packaging box, loosen the 3 mounting screws on the housing of V2.0 equipment, and remove the chassis. Rotate the chassis of V3.0/V4.0/V5.0 equipment to the indicated position and remove the chassis.
2. Mark the mounting hole position of camera on the wall with a ink pen, make holes on the


indicated hole position with a electric drill, and drive the expansion rubber plug into the hole that has just been made.

3. Fasten the chassis on the wall with screws. Reassemble the components removed in Step

4. Adjust the direction of camera to a suitable position, and tighten the 3 mounting screws on the housing of V2.0 equipment. Rotate the component of V3.0/V4.0/V5.0 equipment into the snap position and then fasten it.

Note: The mounting surface of camera must have sufficient bearing capacity.

3.2.4. HD Network IR Dome Camera (MINI)

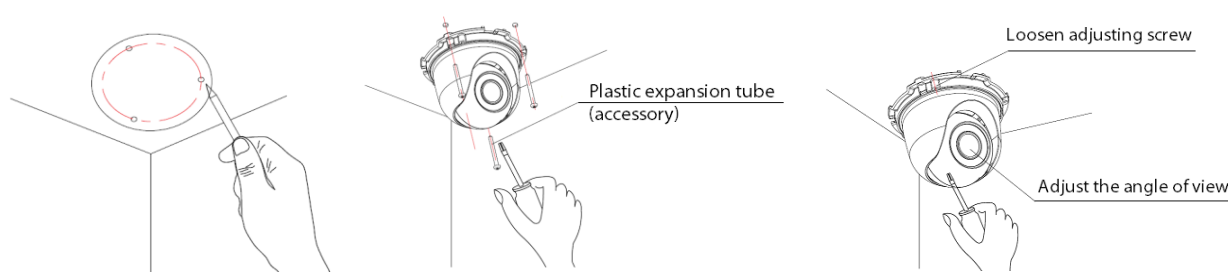


Installation Diagram of HD Network IR Dome Camera (MINI)

Steps:

1. Mark the positions of holes for mounting camera on the wall using an ink pen.
2. Make holes at the indicated position with an electric drill, and drive the expansion rubber plug into the hole.
3. Take out the camera in the packaging box, remove the dome cover, and fasten the dome to the ceiling with screws.
4. Loosen the adjusting screw, adjust the camera lens to an appropriate angle, and then re-fasten the adjusting screw.
5. Align the dome cover with the mounting position of the base, and then rotate and fasten it.

Note: The mounting surface of camera must have sufficient bearing capacity.

3.2.5. HD Network Safe (Non-) IR Dome Camera

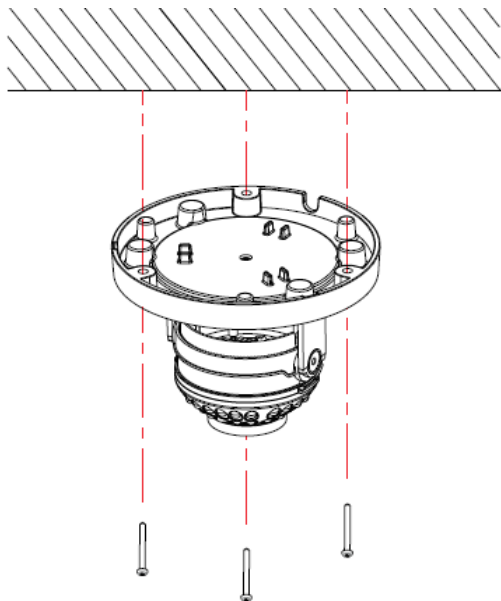


Installation Diagram of (Non-) Safe IR Dome Camera -V1.0

Steps:

1. Mark the positions of holes for mounting camera on the wall using an ink pen. Make holes on the marked positions using an electric drill, drive the expansion rubber plug into the hole.
2. Take out the camera in the packaging box, and remove the dome cover; and then fasten the dome to the ceiling using mounting screws.
3. Loosen the adjusting screw, adjust the camera lens to an appropriate angle, and then re-fasten the adjusting screw.
4. Align the dome cover with the mounting position of the base, and then fasten it by turning.
5. Finally, remove the protective film on the dome cover (please protect the transparent cover of dome, to avoid oil stains and scratches).

Note:

- (1) The mounting surface of camera must have sufficient bearing capacity.
- (2) Please use the dome camera as soon as possible after unpacking.
- (3) Fog may be caused when disassembling the equipment in wet environments.
- (4) To ensure the waterproof effect, please tighten the screws.

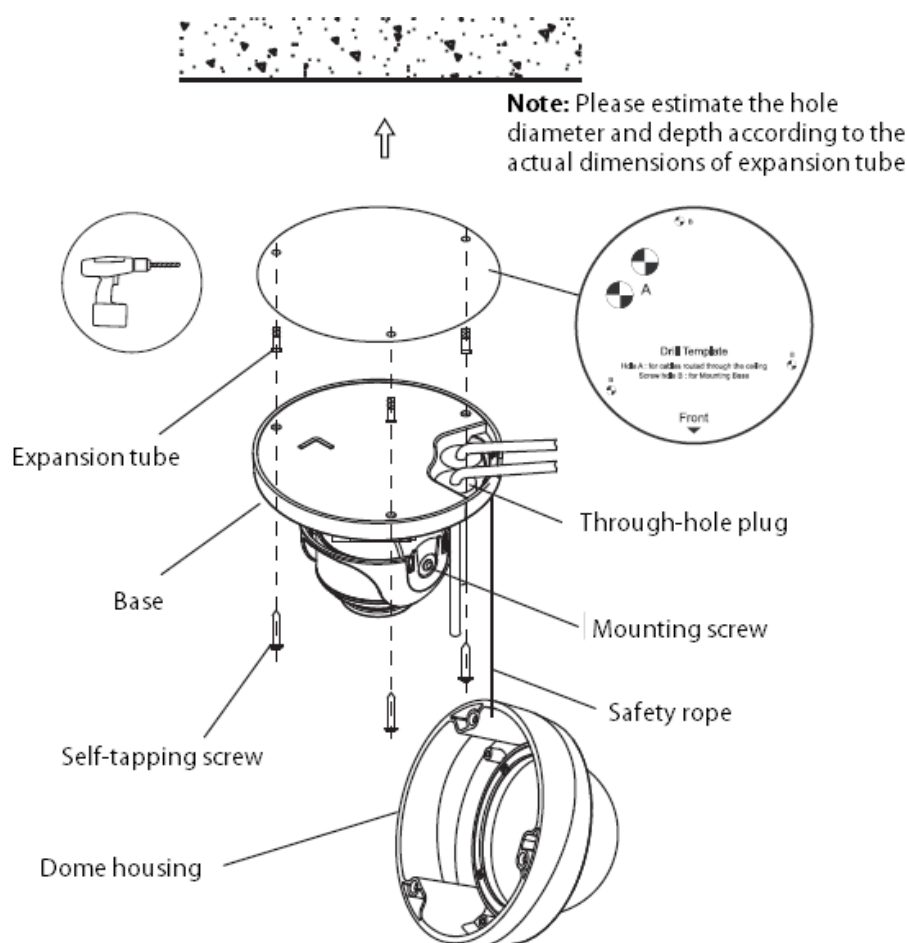

Installation Diagram of HD Network Safe (Non-) IR Dome Camera-V2.0

Steps:

1. Mark the mounting hole position of camera on the wall with a ink pen or positioning sticker, make holes on the indicated hole position with a electric drill, and drive the expansion rubber plug into the hole.
2. For models without a tail cable: loosen the screws, remove the dome housing, pass the power cord, audio cable (optional) and network cable through the cable hole plug at the base of dome, with a cable diameter of 3-5mm (Note: pull back after passing the cable to ensure water resistance), and then fasten the base of dome to the wall or ceiling. Connect the power cable and audio cable (optional) to the corresponding interface of camera. After making the plug of the network cable, insert it into the Ethernet interface of camera, and then fasten the base of dome base to the wall or ceiling.
3. For models with a tail cable: connect the power supply, network cable and other parts to the corresponding interface of camera. Loosen the screws, remove the dome housing, and fasten the base of dome to the wall or ceiling.


4. Adjust the lens to the required scene, and then tighten the two mounting screws. The recommended torque is 6-7kgf.cm.

5. Before installing the equipment in a humid environment, please replace the desiccant and then fasten the dome housing to the base of dome, and finally remove the protective film on the housing (Note: do not crimp when installing dome housing on the base).

Note:

- (1) The mounting surface of camera must have sufficient bearing capacity.
- (2) Fog may be caused when disassembling the equipment in wet environments.
- (3) To ensure the waterproof effect, please tighten the screws.

3.2.6. HD Network Gun Camera

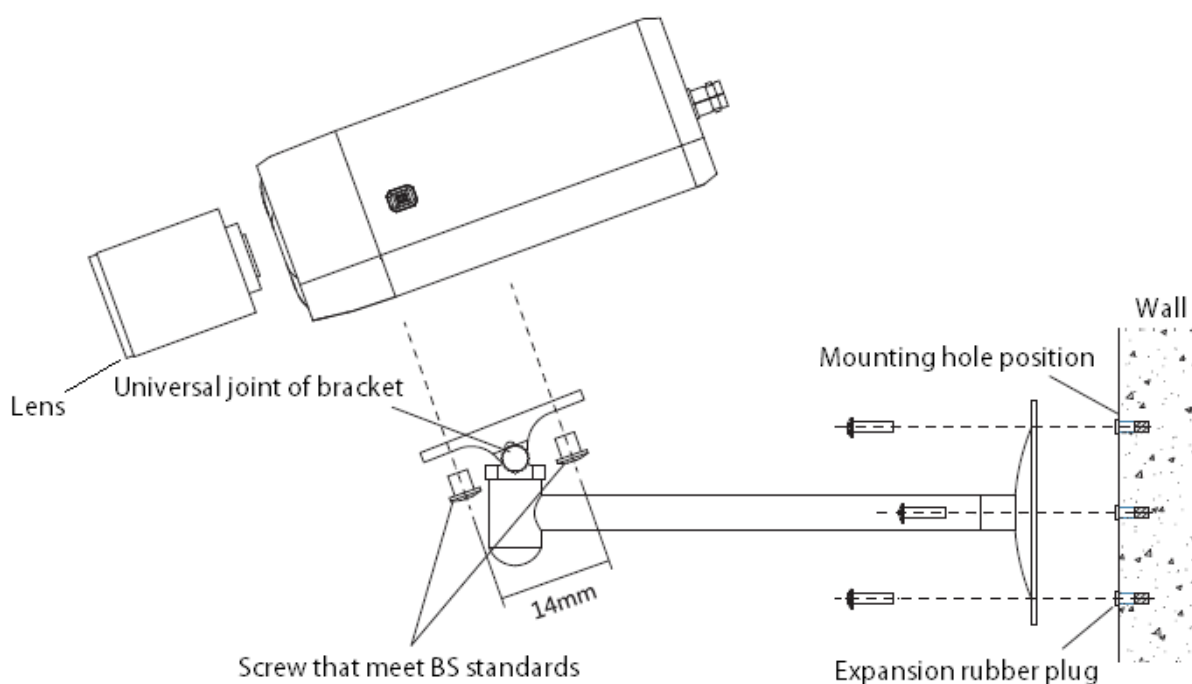

Installation Diagram of HD Network Gun Camera

Steps:


1. Mark the positions of holes for mounting camera on the wall using an ink pen.
2. Make holes on the marked positions using an electric drill.
3. Drive the expansion rubber plug into the hole.
4. Fasten the wall mounting bracket on the wall with screws.

5. Take out the camera in the packaging box, align the two screws with the camera screw mounting position, and then tighten them by turning.
6. Adjust the universal joint of bracket to a proper position and then tighten it.

Note:

- (1) Brackets must be purchased separately.
- (2) The mounting surface of camera must have sufficient bearing capacity.

3.2.7. HD Network Zoom IR Gun Camera

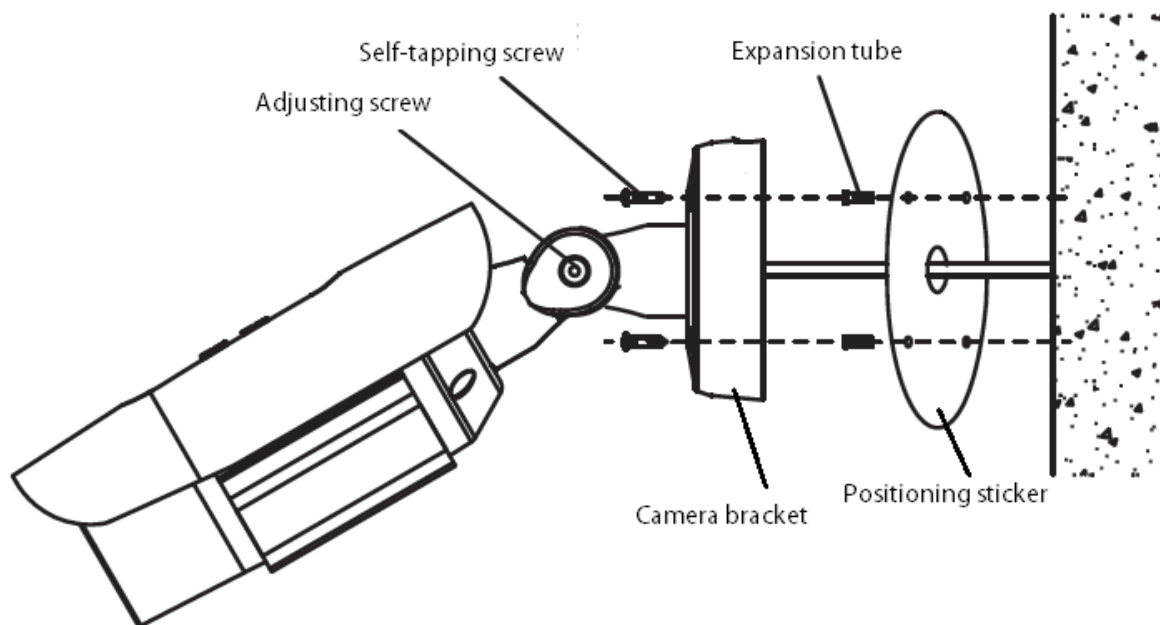


Installation Diagram of HD Network Zoom IR Gun Camera (with integrated bracket)

Steps:

1. Paste the positioning stickers on the wall.
2. Make holes on the marked positions using an electric drill.
3. Drive the expansion rubber plug into the hole.
4. Fasten the wall mounting bracket on the wall with screws.
5. Adjust the screw, rotate the angle to the target position, and then tighten the screw.
6. Adjust the sunshade back and forth, to avoid blocking video or IR light.

Note: The mounting surface of camera must have sufficient bearing capacity.

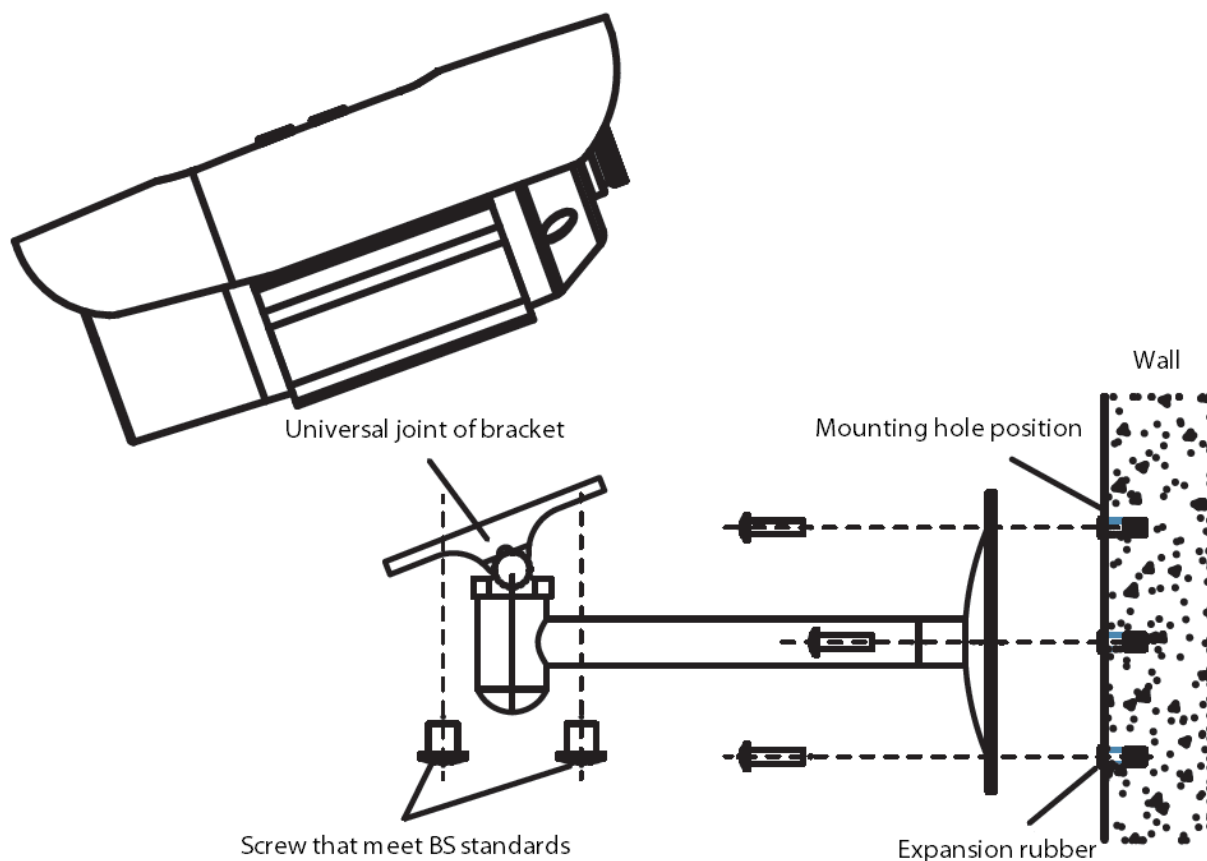

Installation Diagram of HD Network Zoom IR Gun Camera (without integrated bracket)


Steps:

1. Mark the positions of holes for mounting camera on the wall using an ink pen.
2. Make holes on the marked positions using an electric drill.
3. Drive the expansion rubber plug into the hole.
4. Fasten the wall mounting bracket on the wall with screws.
5. Align the two screws with the screw mounting position of camera, and then tighten them by turning.
6. Adjust the universal joint of bracket to a proper position and then tighten it.

Note:

- (1) Brackets must be purchased separately.
- (2) The mounting surface of camera must have sufficient bearing capacity.

3.2.8. Dimensions of HD Network Zoom (Non-)IR Dome Camera

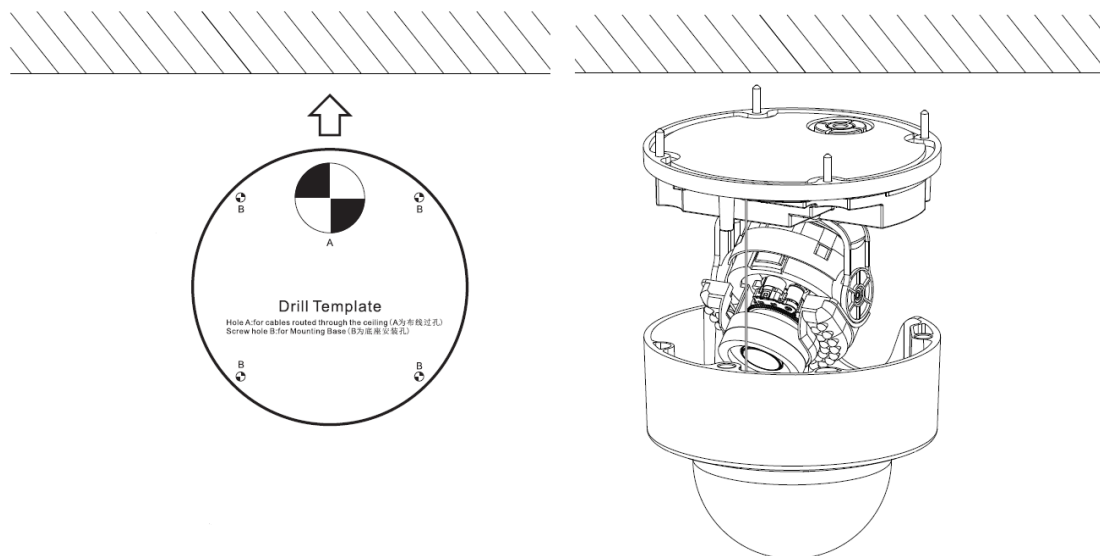


Installation Diagram of HD Network Zoom IR Dome Camera-V2.0

Steps:

1. Paste the positioning stickers on the wall.
2. Make holes on the marked positions using an electric drill.
3. Drive the expansion rubber plug into the hole.
4. Fasten the base of camera to the wall with screws.
5. Rotate the lens to the target angle.
6. Before installing the equipment in a humid environment, please replace the desiccant and then fasten the dome housing to the base of dome, and finally remove the protective film on the housing (Note: do not crimp when installing dome housing on the base).

Note:

- (1) The mounting surface of camera must have sufficient bearing capacity.
- (2) Fog may be caused when disassembling the equipment in wet environments.
- (3) To ensure the waterproof effect, please tighten the screws.

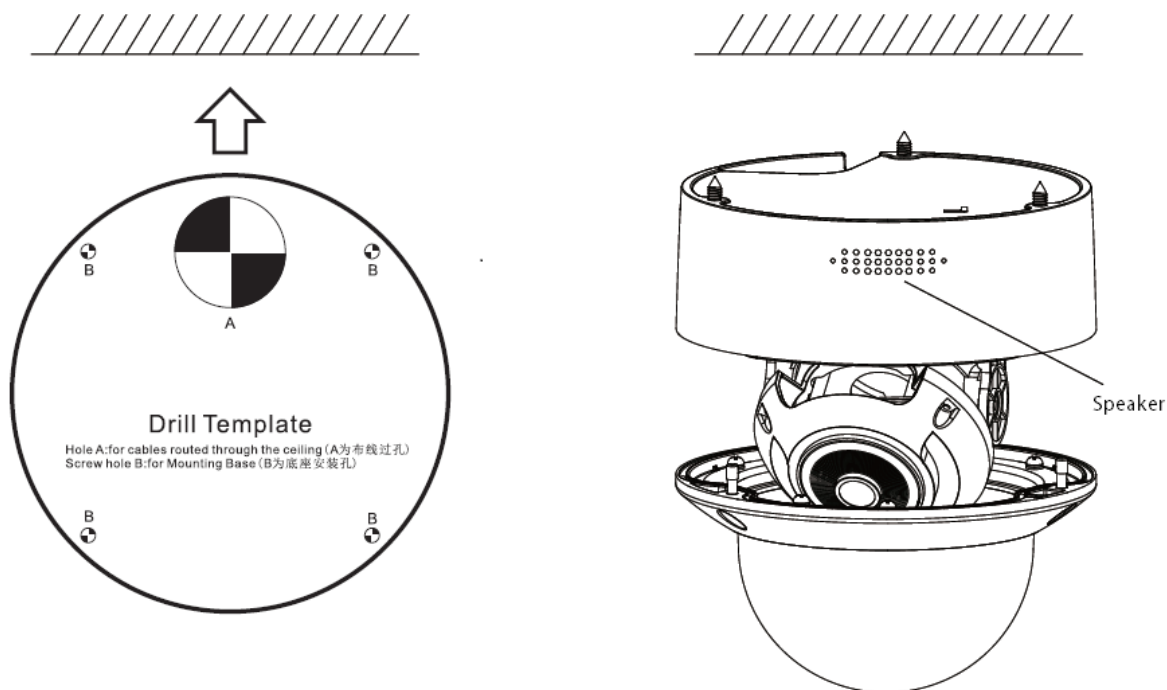

Installation Diagram of HD Network Zoom IR Dome Camera-V3.0speaker


Steps:

1. Paste the positioning stickers on the wall.
2. Make holes on the marked positions using an electric drill.
3. Drive the expansion rubber plug into the hole.
4. Fasten the base of camera to the wall with screws.
5. Rotate the lens to the target angle.
6. Before installing the equipment in a humid environment, please replace the desiccant and then fasten the dome housing to the base of dome, and finally remove the protective film on the housing (Note: do not crimp when installing dome housing on the base).

Note:

- (1) The mounting surface of camera must have sufficient bearing capacity.
- (2) Fog may be caused when disassembling the equipment in wet environments.
- (3) To ensure the waterproof effect, please tighten the screws.

3.2.9. HD Network Special-shaped Safe IR Dome Camera

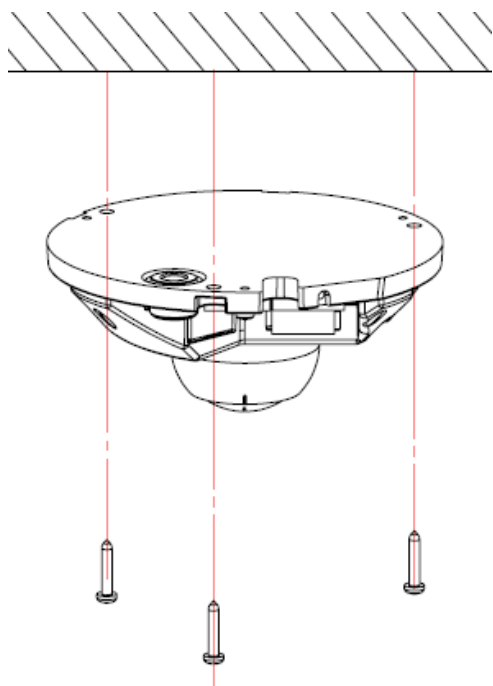

Installation Diagram of HD Network Special-shaped Safe IR Dome Camera

Steps:

1. Make a hole at the mounting position according to the dimensional drawing, and drive the expansion rubber plug into the hole.
2. Take out the camera in the packaging box, and remove the dome cover; and then fasten the dome to the ceiling using mounting screws.
3. Loosen the adjusting screw, adjust the camera lens to an appropriate angle, and then re-fasten the adjusting screw.
4. Align the dome cover with the mounting position of the base, press down the dome cover and fasten it with screws.
5. Finally, remove the protective film on the dome cover (please protect the transparent cover of dome, to avoid oil stains and scratches).

Note: The mounting surface of camera must have sufficient bearing capacity.

3.2.10. Thermal & Optical Bi-spectrum Network Bullet Camera


1. Environment Confirmation

- The visible light channel should be provided with sufficient lighting and free from the impact of such interference as the backlighting/reflected light/hard light variation/shielding/high temperature.
- The product should be installed in a stable place that is relatively isolated from the ambient conditions, instead of outdoors or any places connected to outdoor spaces, places with airflow, strong electromagnetic interference or vibration.
- Prohibited installation sites:

 <p>Insufficient light</p>	 <p>Backlight/connection to outdoor space</p>
 <p>With hats, long bangs, masks and glasses</p>	 <p>With high-temperature background like display devices</p>

2. Design of Installation Points

1. Installation height for thermal imaging temperature measuring camera (such as 1099/810) is 1.8~2.0 m and 1.8 m for black body; the straight-line distance is 1.5 m

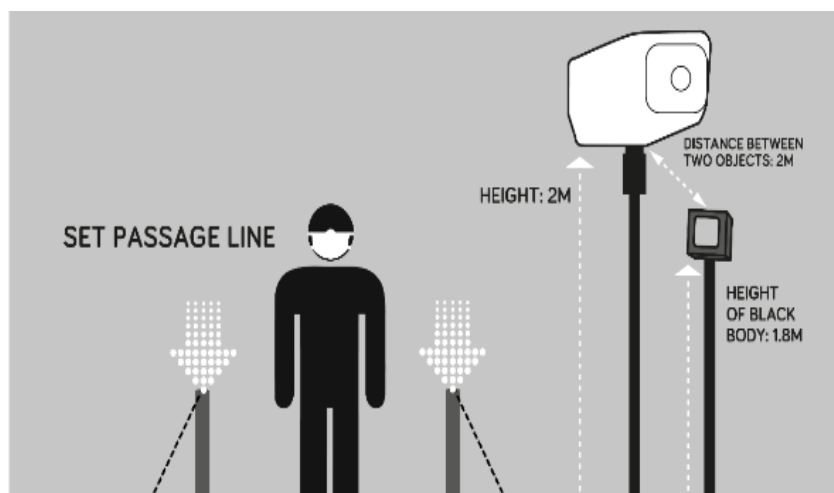

between the camera and black body, as shown in diagram below:

2. Install the camera at the same side of black body and avoid shielding the space between them; the radiation side of black body (note: Radiation side should not be collided or polluted) should face the radiation direction of camera; place the black body at the left or right side of thermal imaging picture; protect the tripod by installing temporary fences.
3. Steam of people should face the camera. The target person's forehead should face the camera when measuring temperature. Personnel are highly recommended to stay at and face the camera for temperature measurement. Temporary measures can be adopted at site for planning the personnel route and leading the personnel to the camera position.

Note: Thermal Camera may not undergo temperature test until it is preheated for 30min. after it is switched on so as to ensure accuracy.

3. Installation of Frontend Equipment

The temperature measurement product should be installed on a tripod by referring to the installation guide of indoor portable product; while others should be fixed and installed based on the requirements for height and distance.

Others should be fixed and installed based on the specific ambient environment. Make sure the supports are stable and reliable and conform to the following requirements:

Schematic diagram for 4 mm focal length:

Unit: mm

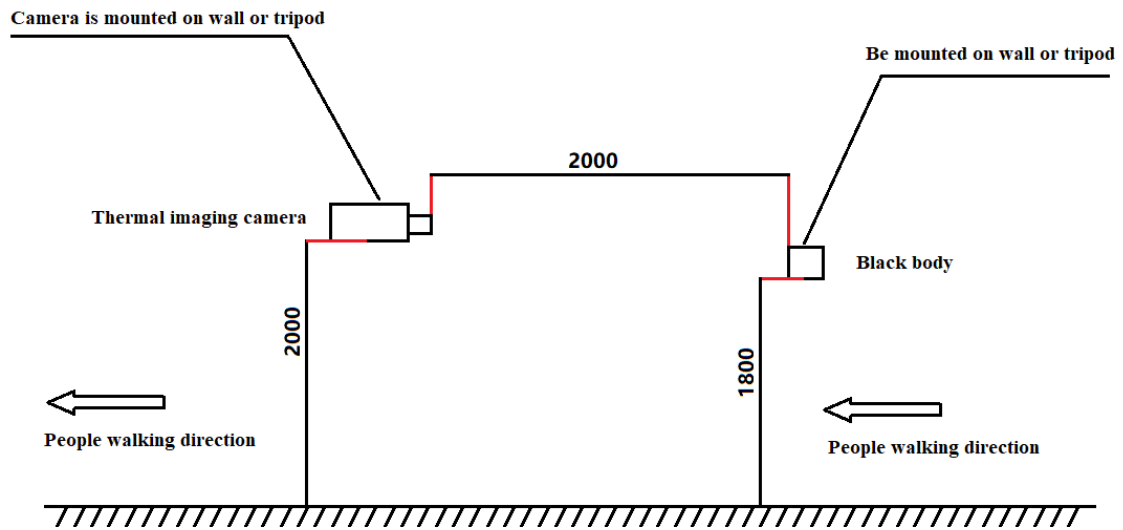


Fig. Schematic Diagram for 4 mm Focal Length

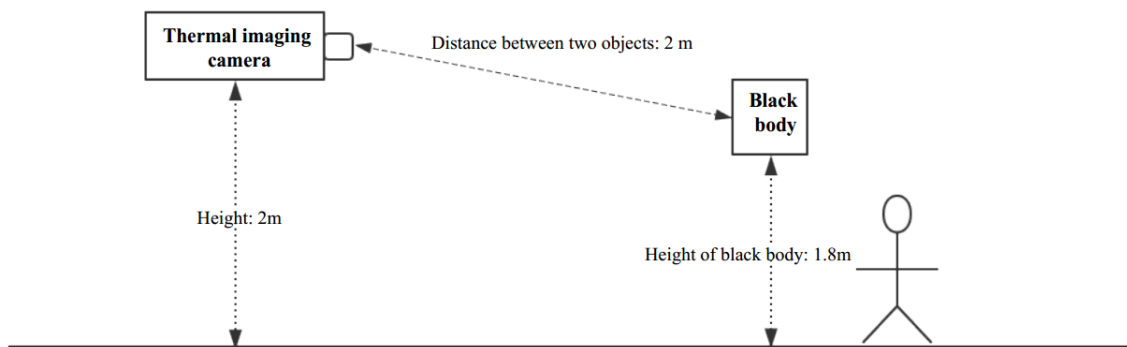


Fig. Top View

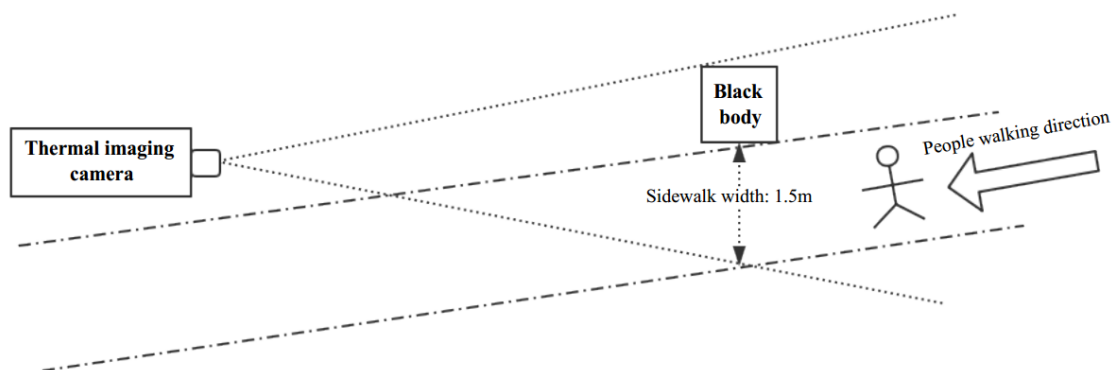


Fig. Side View

Actual effects are as follows:




Check if the distance between the black body and thermal imaging camera and between forehead and camera meet the requirements by using a tape. The distance requirements are as follows:

Focal Length of Lens	Distance between Black Body and Camera	Distance between Forehead and Camera	Width of Optimal Temperature Measurement Location
4mm	1.5m	1.5m	1.3m


- The accuracy of temperature measurement can be best guaranteed when the distance between forehead, black body and camera is consistent. Take the 4 mm focal length as example, the calibrated distance of black body is 1.5 m, the optimal temperature measurement distance is 1.5 m (straight-line distance between forehead and camera); the optimal measurement width is about 1.3 m at the 1.5 m position (about 1 gate); otherwise, the temperature measured will be higher at front of 1.5 m position, or lower at the rear position. It is ideal to set the footprint position at the 1.5 m position to guide personnel to measure temperature one by one.
- Check if camera and black body are installed at the same side and the space between camera and black body is shielded.
- Check if people walking direction and the forehead of target personnel face the camera.

3.3 Waterproof Construction Specifications

The zoom (non-) IF dome camera is divided into two models: model with tail cable and model with incoming cable. The model with incoming cable is equipped with a waterproof lock, a single hole supports the wire diameter of 3-5mm. For the lock with 4 holes, please keep the original plugs for the holes not used; for the lock with 3 holes, do not puncture the rubbers at the holes not used.

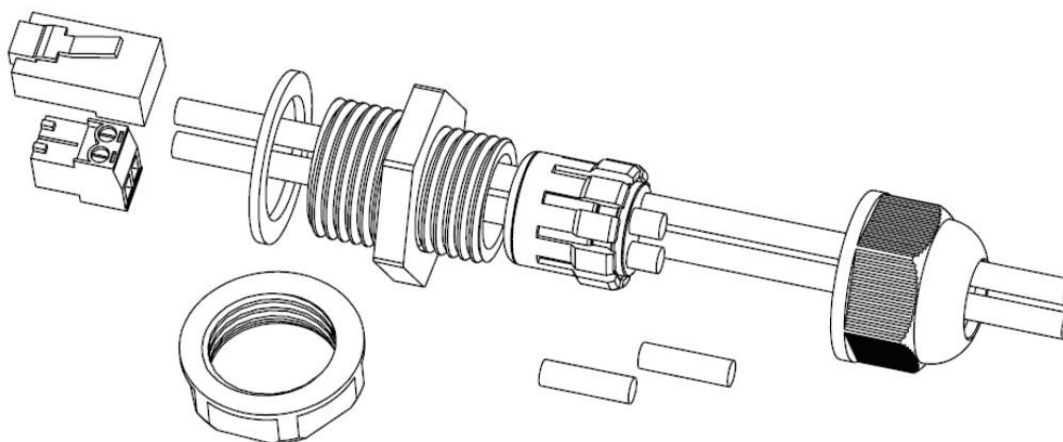

Installation Instructions for Waterproof Lock with 4 Holes

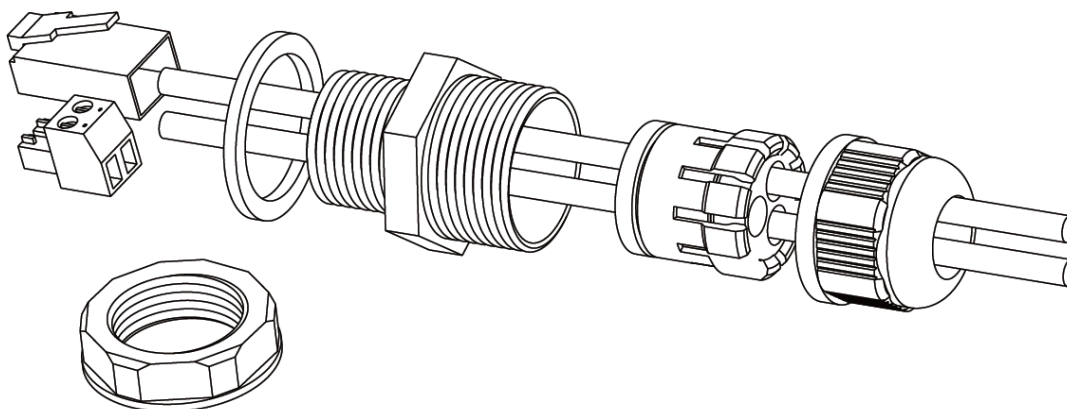


Installation Instructions for Waterproof Lock with 3 Holes

You may select to use side or bottom outlet according to needs, please tighten the waterproof lock with a wrench, to prevent water and fog from entering. Do not open the protective guard in humid environments, to prevent fogging. To prevent frogging, some models are equipped with new desiccants, please replace desiccants for some models before installing the protective guard.


For products with tail cables and waterproof design, please take the following waterproof measures during installation:

- (1) The power port must be wrapped with waterproof tape to ensure water resistance, otherwise, there may be a risk of short circuit.**
- (2) For the waterproofing of Ethernet interface, please refer to the following figure for construction and installation.**

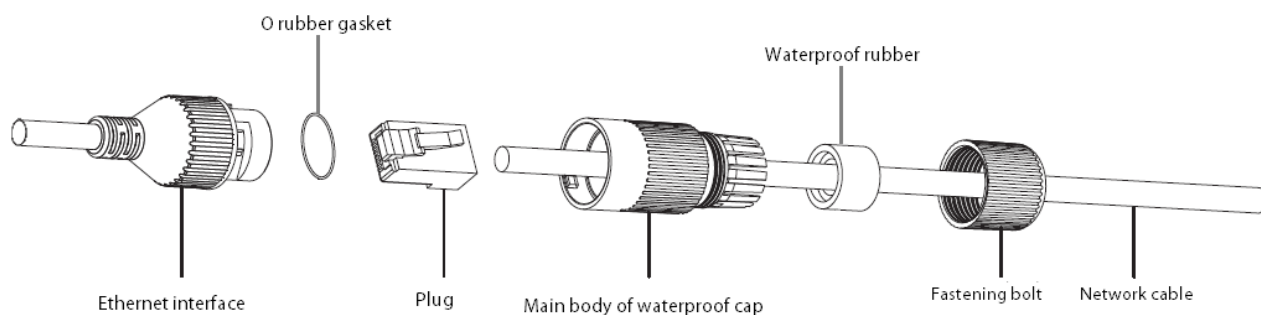

Waterproof installation instructions of network cable


- (3) Please lower the SR of the tail cable to the position below the camera, as shown in the figure below.**

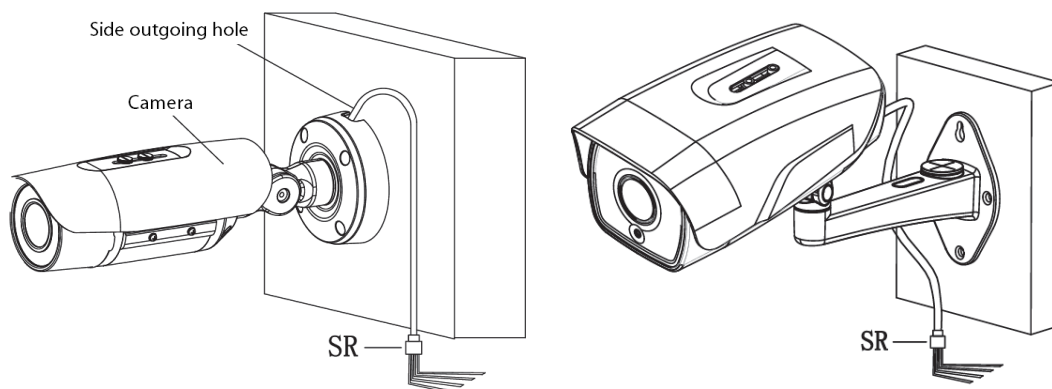

Installation Diagram of Tail Cable

4 Interface Description


4.1 Camera Tail Cable Interface Description

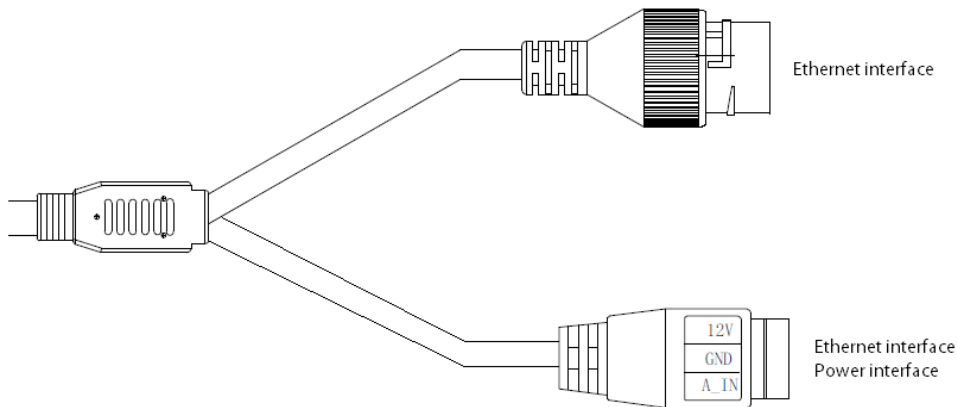

I-type camera tail cable interface

Interface Description:


Type	Functions	Name	Description
System interface	Power supply	DC12V GND	Input of DC12V \pm 10%, please select matching power supply according to suggestions Some models are powered by POE and can provide DC12V output
	Ethernet interface	ETHERNET	10M / 100M, RJ45 interface Supported by some models POE power supply
Function interface	Audio input	A_IN GND	Linear signal input, input voltage \leq 1V GND is the common terminal

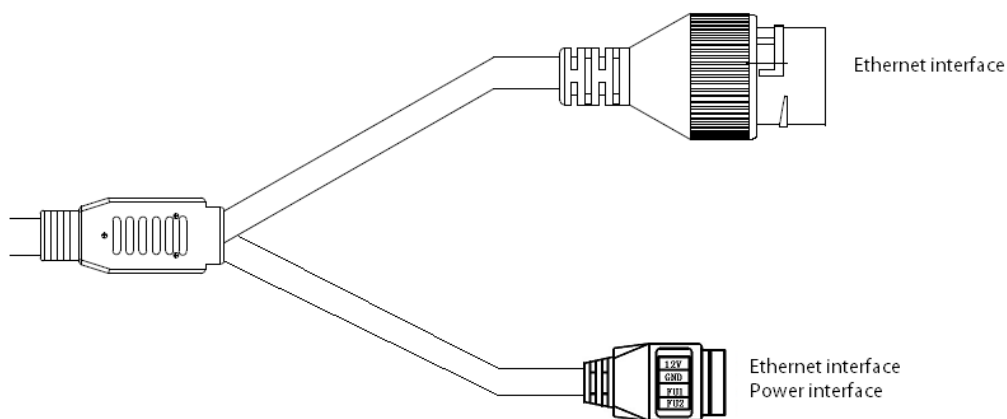

Type II camera tail cable interface

Interface Description:


Type	Functions	Name	Description
System interface	Power supply	DC12V GND	Input of DC12V \pm 10%, please select matching power supply according to suggestions Some models are powered by POE and can provide DC12V output
	Ethernet interface	ETHERNET	10M / 100M, RJ45 interface Supported by some models POE power supply
Function interface	Function interface 1	FU1 GND	See label description for details GND is the common terminal
	Function interface 2	FU2 GND	See label description for details GND is the common terminal

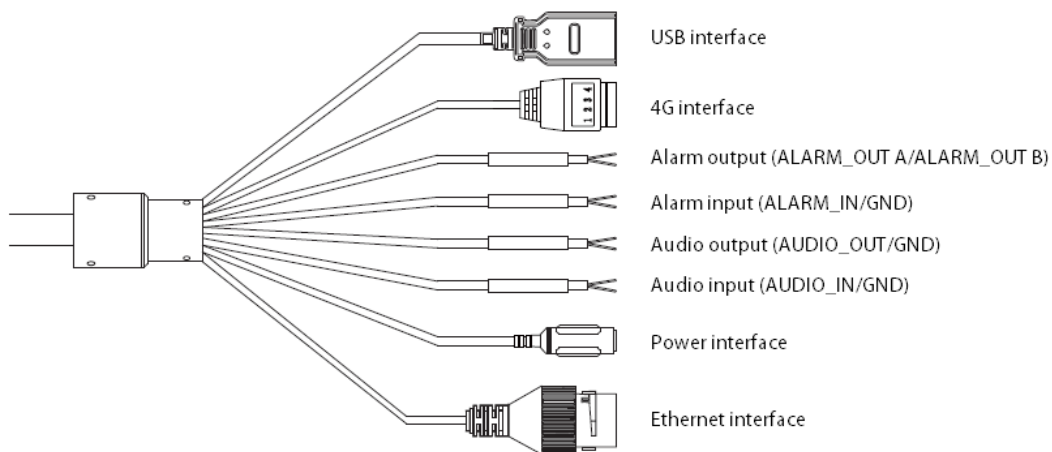

Type III camera tail cable interface

Description:

 
- (1) The specific vehicle-mounted camera power supply adopts BMW connector and needs to be used with an extension cable. The input voltage supports DC12V - DC24V.
- (2) The line sequence of the extension line is as follows:



Extension cord of tail cable (vehicle-mounted model)

Interface Description:


Type	Functions	Name	Description
System interface	Power supply	DC12V IN	Input of DC12V \pm 10%, please select matching power supply according to suggestions (Excluding special vehicle-mounted camera) Some models are powered by POE and can provide DC12V output
	Ethernet interface	ETHERNET	10M / 100M, RJ45 interface
Extension ports (Optional)	Audio interface	AUDIO_IN	Linear signal input, GND is the common terminal, input voltage: \leq 1V; (optional function)
		AUDIO_OUTPUT	Linear output, GND is the common terminal, used with active speakers; (optional function)
	Alarm interface	ALARM_IN	Switching signal input, GND is the common terminal (optional function)
		ALARM_OUTPUT	Switching signal output (optional function)
	RS485 interface	RS485	A is 485 positive (+), B is 485 negative (-) (optional function)
	4G	4G	1: GND 2: RS485- (RS485B) 3: RS485 + (RS485A) 4: DC5V (optional function)
Storage interface	Support	USB	8G - 64G is recommended, please power off the device before disassembly

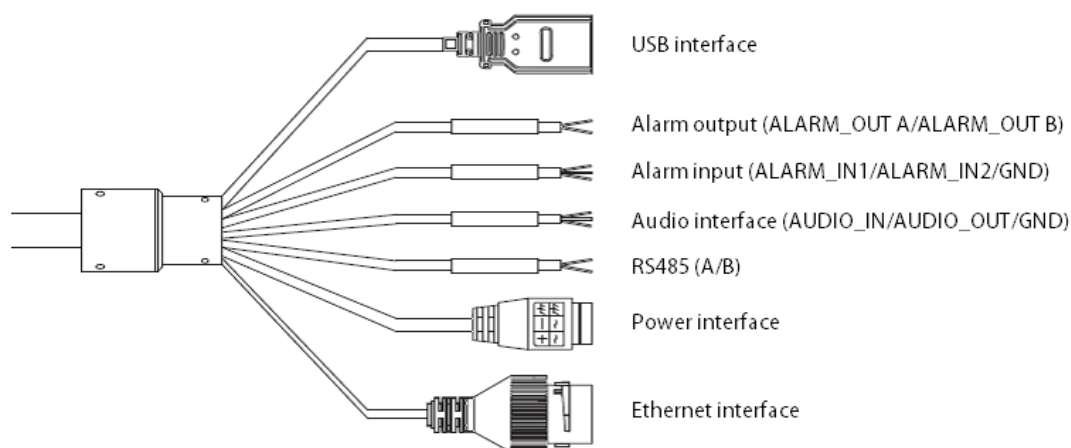

Type IV camera tail cable interface

Interface Description:

Type	Functions	Name	Description
System interface	Power supply	POWER	DC12V \pm 10%, Supported by some models AC24V Please refer to the actual label
	Earth		Connected to the earth to prevent static electricity / surges from damaging the equipment
	Ethernet interface	ETHERNET	10M / 100M, RJ45 interface
Extension ports (Optional)	Audio interface	AUDIO_IN	Linear signal input, GND is the common terminal, input voltage: $\leq 1V$ (optional function)
		AUDIO_OUT	Linear output, GND is the common terminal, used with active speaker (optional function)
	Alarm interface	ALARM_IN	Switching signal input, GND is the common terminal
		ALARM_OUT	Switching signal output
	Control interface	RS485	A is RS485 +, B is RS485-
Storage interface	USB	USB	Expandable memory or Wifi module, the recommended memory is 8G - 64G, please power off the device before disassembly

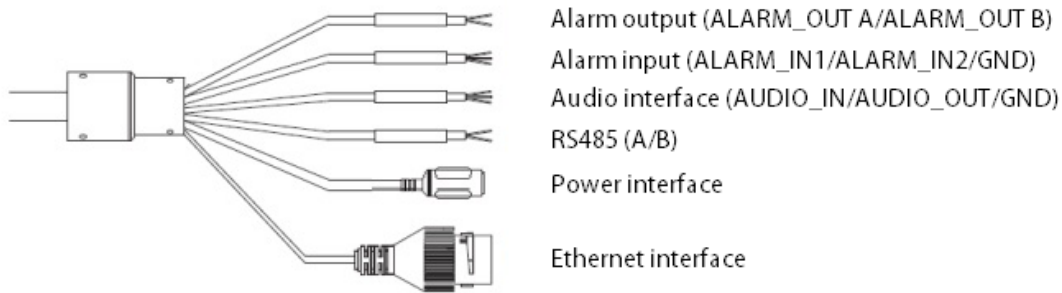


Tail line interface of type V camera

Interface Description:

Type	Functions	Name	Description
System interface	Power supply	POWER	DC12V±20% Please refer to the actual label
	Ethernet interface	ETHERNET	10M / 100M, RJ45 interface
Extension ports (Optional)	Audio interface	AUDIO_IN	Linear signal input, GND is the common terminal, input voltage: ≤1V (optional function)
		AUDIO_OUT	Linear output, GND is the common terminal, used with active speaker (optional function)
	Alarm interface	ALARM_IN	Switch signal input, 2 channels supported, GND is the common terminal
		ALARM_OUT	Switching value or relay output signal output (subject to the actual object)
	Control interface	RS485	A is RS485 +, B is RS485-

4.2 HD Network Zoom IR Gun Camera

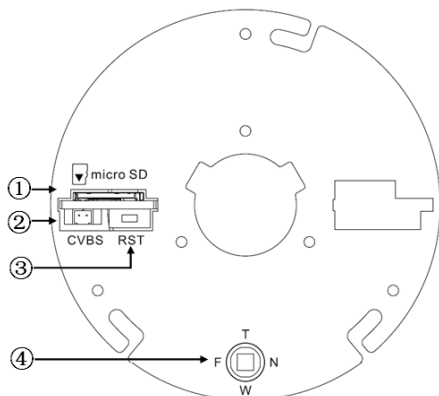

- ① micro SD card slot
- ② Analog video output, used with BNC conversion cable (accessory) (supported by some models)
- ③ Reset button

DS1099-115A


- ④ Focusing control for electric lens, press for one-button focusing (supported by some models)

Internal interface of HD network zoom IR gun


Interface Description:

Type	Functions	Name	Description
System interface	Power supply	POWER	DC12V ($\pm 10\%$), Supported by some models AC24V ($\pm 25\%$)
	Ethernet interface	ETHERNET	10M / 100M / 1000M (1000M for some models), RJ45 interface, Supported by some models POE
	Reset	RESET	After holding for 5 seconds, the system will restore factory settings
Audio and video interface	Video output	VIDEO OUT /CVBS	75 Ω p-p analog video signal;
	Audio input	AUDIO IN	Audio linear input
	Audio output	AUDIO OUT	Audio linear output
Alarm interface	Alarm Input	ALARM IN	GND is the common terminal; 1/2 is the 2-way alarm input interface
	Control output	ALARM OUT	1A / 1B, signal relay output interface
Storage interface	TF card	micro SD	8G - 64G is recommended, please power off the device before disassembly
	USB	USB	Expandable U disk or Wifi adapter, please power off the device. Description: 1. The recommended U disk capacity is 8G - 64G 2. If a micro SD card has been installed, U disk cannot be expanded
Extension ports	485 interface	RS485A/B	485 communication interface
	Motorized lens	T/W/F/N	Motorized lens control, T zoom in / W zoom out / F far / N near Press for one-button focusing (supported by some models)

4.3 Dimensions of HD Network Zoom (Non-)IR Dome Camera

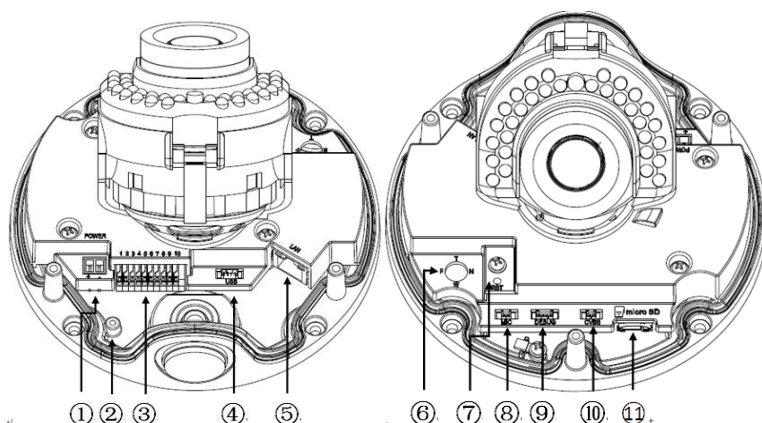

Internal interface of HD network zoom (non-) IF dome camera-V2.0

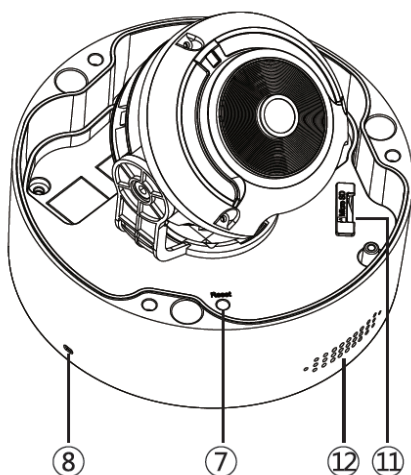

Internal interface of HD network zoom (non-) IF dome camera-V3.0

- ① Power interface, support DC12V (Supported by some models AC24V)
- ② Earthing rod
- ③ Signal cable interface, see chassis label for details
- ④ USB interface, GND/D+/D-/5V from left to right (supported by some models)
- ⑤ Ethernet interface, 10M / 100M / 1000M (some models are 1000M, Supported by some models POE)

- ⑥ Focusing control for electric lens, press for one-button focusing
(supported by some models)
- ⑦ Reset button
- ⑧ Built-in MIC interface
- ⑨ Debugging interface, only used by the manufacturer for debugging
- ⑩ Analog video output, used with BNC conversion cable (accessory)
(supported by some models)
- ⑪ micro SD card slot
- ⑫ Built-in speaker


Interface Description:

Type	Functions	Name	Description
System interface	Power supply	POWER	DC12V ($\pm 10\%$), Supported by some models AC24V ($\pm 25\%$)
	Ethernet interface	ETHERNET	10M / 100M / 1000M (1000M for some models), RJ45 interface, Supported by some models POE
	Reset	RESET	After holding for 5 seconds, the system will restore factory settings
	Debugging interface	DEBUG	Debugging interface, only used by the manufacturer for debugging
Audio and video interface	Video output	VIDEO OUT /CVBS	75 Ω p-p analog video signal;
	Audio input	AUDIO IN	Audio input (Mic in/Line in)
	Audio output	AUDIO OUT	Audio linear output
Alarm interface	Alarm Input	ALARM IN	GND is the common terminal; 1/2 is the 2-way alarm input interface
	Control	ALARM OUT	1A / 1B, signal relay output interface


Type	Functions	Name	Description
	output		
Storage interface	TF card	micro SD	8G - 64G is recommended, please power off the device before disassembly
	USB	USB	Expandable U disk or Wifi adapter, please power off the device. Description: 1. The recommended U disk capacity is 8G - 64G 2. If a micro SD card has been installed, U disk cannot be expanded
Extension ports	485 interface	RS485A/B	485 communication interface
	Motorized lens	T/W/F/N	Motorized lens control, T zoom in / W zoom out / F far / N near Press for one-button focusing (supported by some models)

4.4 Network Box Camera Series

4.4.1. Network Box Camera

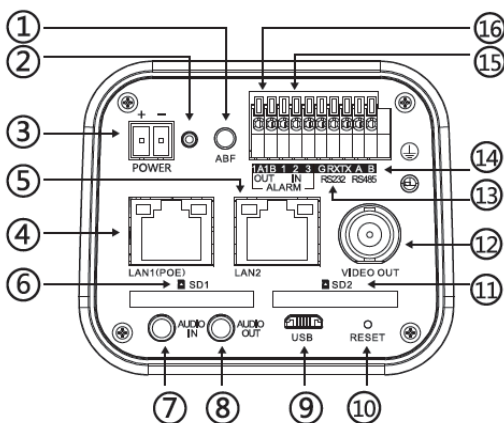

Interface of Type I Network Gun Camera-V3.0

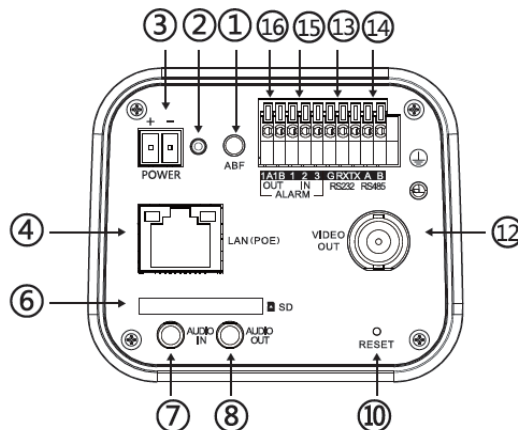

Interface of Type II Network Gun Camera-V3.0

- ① ABF button: click it to start immediately (supported by some models)
- ② Indicator light: if the light is always on in red, the power supply is normal; if the light is flashing in blue, ABF is running
- ③ Power interface, support DC12V (Supported by some models AC24V)
- ④ Network interface, support POE
- ⑤ Network interface 2 (supported by some models)

- ⑥ SD card slot
- ⑦ Audio input
- ⑧ Audio output
- ⑨ micro USB (supported by some models)
- ⑩ Reset button
- ⑪ SD card slot 2 (supported by some models)
- ⑫ Analog video output
- ⑬ RS 232 interface (supported by some models)
- ⑭ RS 485 interface (supported by some models)
- ⑮ Alarm input, 1 and 2 are alarm inputs, and 3 is the synchronous switching interface of alarm
- ⑯ Alarm output (supported by some models)

Type	Functions	Name	Description
System interface	Power supply	POWER	DC12V ($\pm 10\%$), Supported by some models AC24V ($\pm 25\%$)
	Ethernet interface	ETHERNET	10M / 100M / 1000M (Supported by some models 1000M), RJ45 interface, Supported by some models POE
	Reset	RESET	After holding for 5 seconds, the system will restore factory settings
	Aperture interface	LENS	Lenses with controlled DC aperture (Supported by some models P-iris aperture lenses)
Audio and video interface	Video output	VIDEO OUT /CVBS	75 Ω p-p analog video signal
	Audio input	AUDIO IN	Audio input (Mic in/Line in)
	Audio output	AUDIO OUT	Audio linear output
Alarm interface	Alarm Input	ALARM IN	G is the common terminal; 1/2 is the 2-way alarm input interface, and 3 is the synchronous switching interface of alarm. The black and white/color mode of camera can be switched by shorting or disconnecting with G
	Control output	ALARM OUT	1A / 1B, signal relay output interface
Storage interface	SD card	SD	The recommended storage capacity is 8G-256G, please power off the equipment before disassembly

Type	Functions	Name	Description
Extension ports	485 interface	RS485A/B	485 communication interface
	232 interface	RX/TX/G	RX is the receiving port / TX is the sending port / G is the reference ground

5 WEB client

5.1 Operating Environment

It is recommended to run under the operating system environment of Win7 and above. In order to better operate and use the system, and fully reflect the performance and effects, please ensure that the following items are set or installed correctly after the system is successfully installed:

- (1) The display resolution is set to 1920 × 1080 or higher, and the color is set to enhanced color (32-bit), please refer to Windows help document or online help for how to set the resolution and color of monitor.
- (2) Make sure that the font required for this system-Song font is installed in the Windows operating system. If the interface of this system is displayed abnormally, the fonts required by this system may not be installed, or the required fonts have been damaged, and fonts need to be reinstalled.

5.2 IE Settings

You need to download ActiveX controls before using this series of network video products for the first time. Before downloading, you need to set the IE browser appropriately to ensure that the controls are downloaded successfully.

Note: Use the IE browser of Windows operating system, to ensure that the version is 8.0 or above. For other browsers like Google Chrome, Edge or Firefox follow this procedure:

- open this page in Chrome: <https://chrome.google.com/webstore/category/extensions>
- search for: LocalService Web Plug-in

This is the plugin to install:


DS1099-115A



- After the installation, you can open the NVR webpage again, after the Login you're asked to download a file: Swallow.zip

- Unzip and execute the file Swallow.exe that is inside the zip. After that, you should be able to open the NVR webpage and see the video in Chrome too.


For Microsoft Edge: you have to open the same page as in Google Chrome, <https://chrome.google.com/webstore/category/extensions> and Windows will ask you to accept the use of Chrome extensions also for EDGE (see the blue message under the browsing bar, look at pic below).

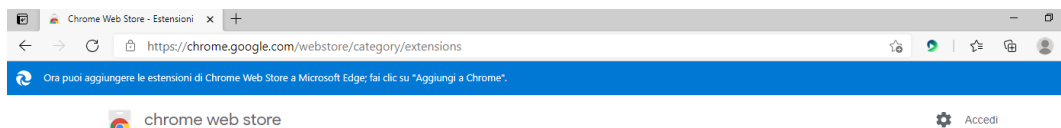


- Search for the same: LocalService Web Plug-in and install it.

- Since Swallow.exe was installed for Chrome, no need to install it again for EDGE.

For Internet Explorer, if the computer is connected to the camera for the first time, please go to “Internet Options”-“Security”-“Trusted Sites”-“Sites” and add the IP of the camera to the list of “Trusted Sites”. Then set the “Custom Level” and set all the options in “ActiveX Controls and Plug-ins” to “Enable”, to ensure that the computer can download and run the controls normally.

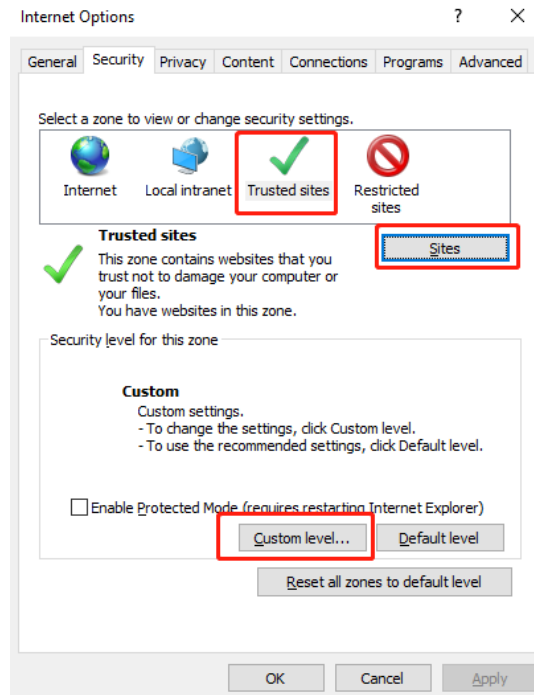

IE Browser-Internet Options

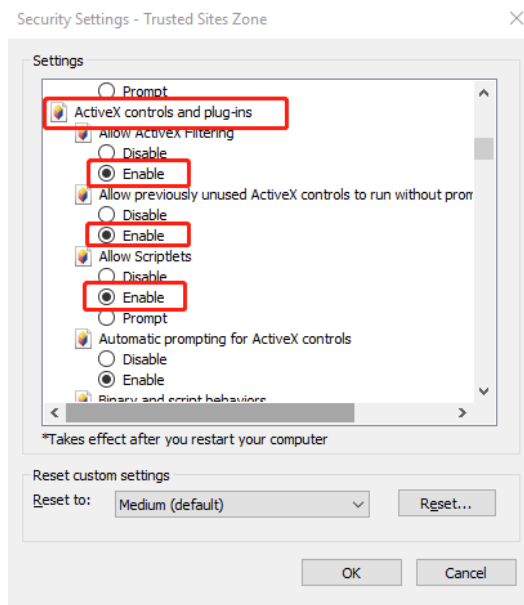


Trusted Site-Custom Level

5.3 Login Device

The default IP address of the device is: 192.168.1.2, subnet mask: 255.255.255.0, gateway: 192.168.1.1. Please set the IP address of the computer and the IP address of the device in the same network segment: for example, set the IP address of the computer to 192.168.1.3 to access the device through IE browser. Open the IE browser, input the IP

address of the network video device in the address bar, and click "go" to log in to the device. If it is the first time to use, the following login interface will appear.

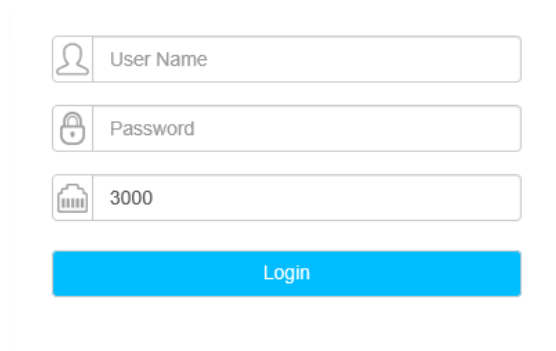The image shows a web-based login interface. It consists of three input fields stacked vertically. The first field is labeled 'User Name' with a person icon. The second field is labeled 'Password' with a lock icon. The third field contains the number '3000' and has a server rack icon. Below these fields is a blue button labeled 'Login'.

IE login interface


Enter the correct user name and password in the login window, and click “Login” to enter the preview interface later.

Description:

- (1) The default user name is admin, and the password is admin.
- (2) If the equipment port number is modified, you need to enter the correct port number, and the default port number is 3000 (1935 for other browsers)..


Please click to download the plugin. If installed already, please just press F5 to refresh it (no need install again). Please close the browser during installing.

Click the text link to open the save or run control interface, as shown in the following figure. Select "save" to download Swallow.exe to the local area, and select "run" to install Swallow.exe automatically after downloading.

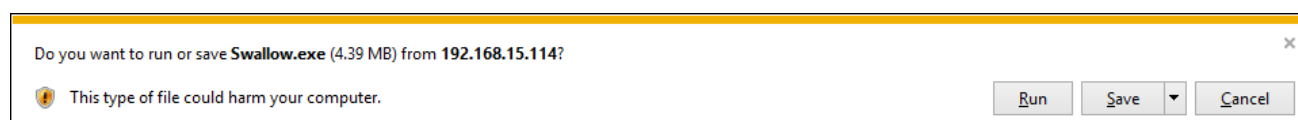

Operating system of Windows XP-Interface for saving or running the control

 
The control needs to be installed after downloading, and the installation program interface for running the control will pop up, as shown below; and then click the “Run” button.




Operating System of Windows 7 and above-Installation program interface for running the control

When the installation control interface appears, click "Next" or "Next step", as shown


below.

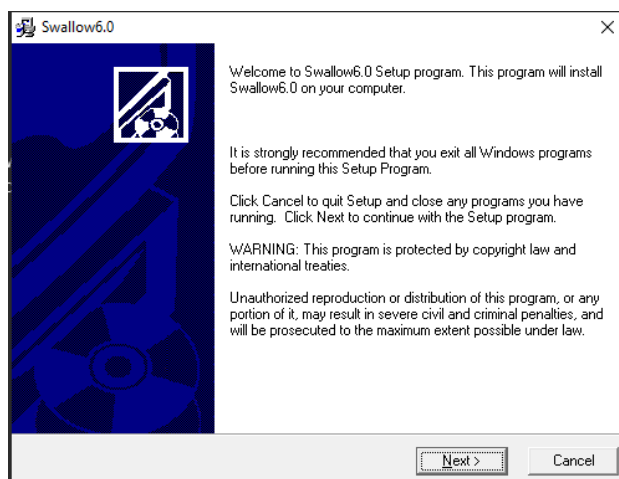

Interface for installing control

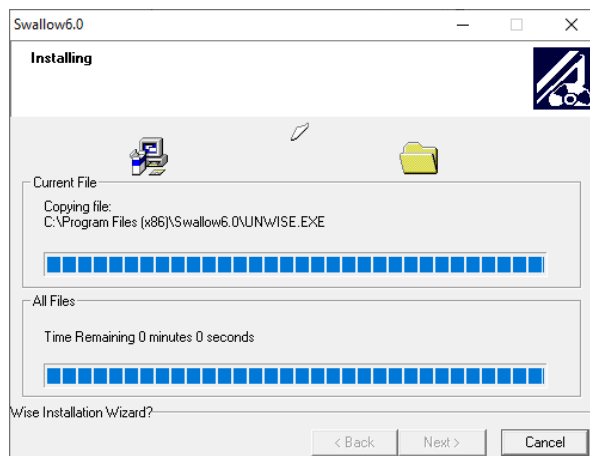


Interface for control installation process

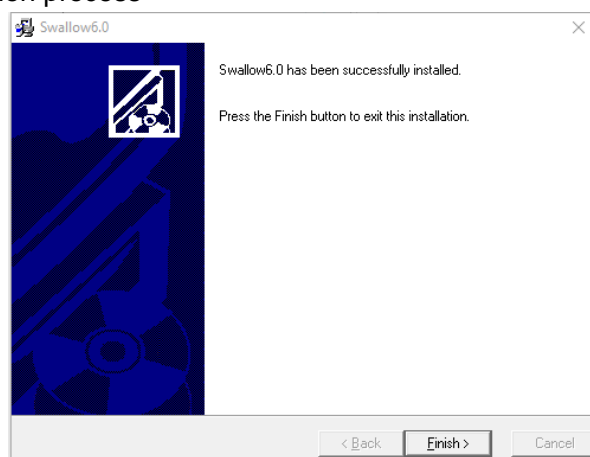

Interface for completing control installation

After the plug-in is installed successfully, refresh the browser to display the preview image.

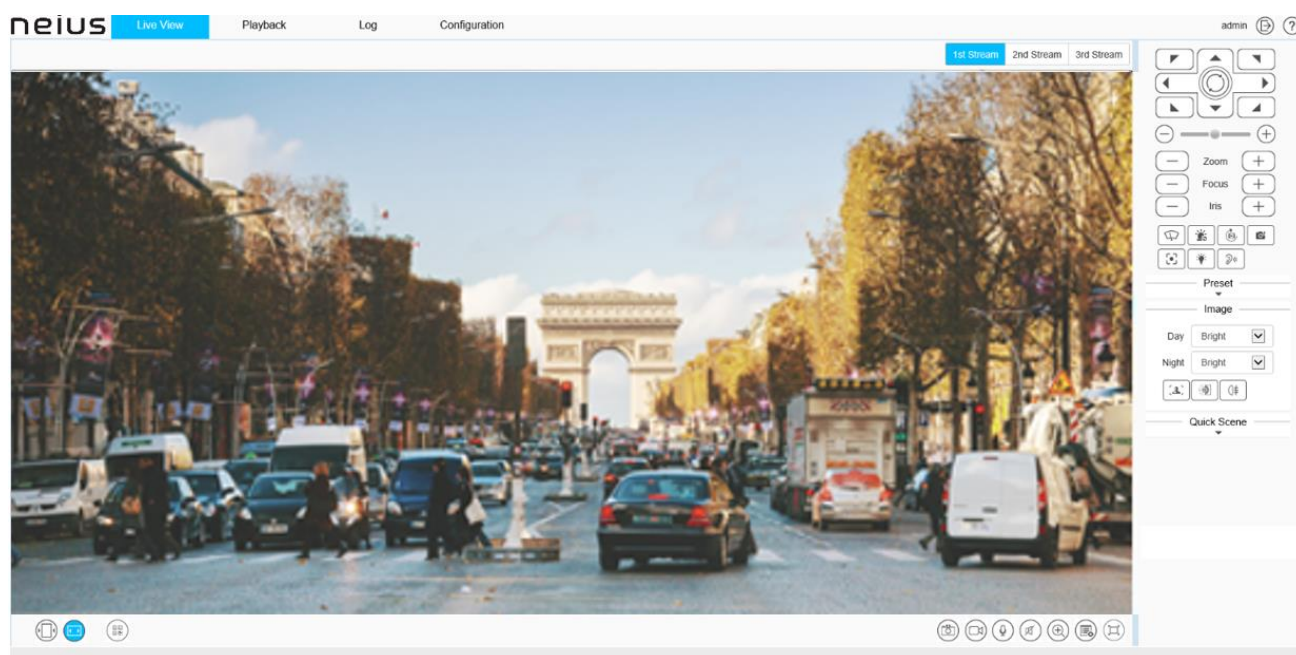


Preview interface

After logging in to the equipment, click the icon at the top of the interface to switch to different interfaces or execute related commands.

Icon	Description
Live View	Click this icon to enter the interface of "Live View".
Playback	Click this icon to enter the interface of "Playback".
Log	Click this icon to enter the interface of "Log".
Configuration	Click this icon to enter the interface of "Configuration".
EW	Click this icon to enter the "EW" interface. (supported by some models)
admin	Display the user name for this login. (This icon can only be displayed but not be clicked)
	Click this icon to log out.
	Click this icon for online help information. (supported by some models)

After you log in to the system, the prompt box of "change password" will appear in the lower right corner of the desktop. Please click the text in the box, link to the user management interface, select the user, and click "edit", as shown in the figure below.

Note: In order to ensure the security of your information, please be sure to change the initial password!

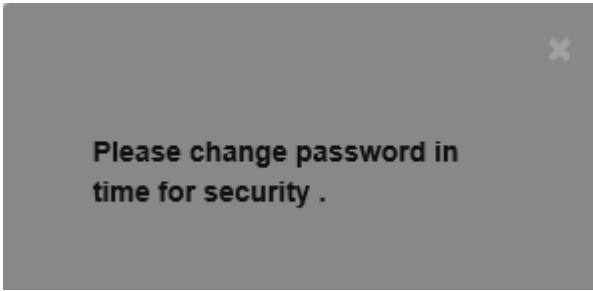

Change password prompt box


User management interface

5.4 Live View interface

After successful login, the system will display the [Preview] interface by default. In other interfaces, users can return to the video preview interface by clicking the [Preview] button at the top of the interface.

Because different models support different functions, the interfaces may also be different, please refer to the actual interface.






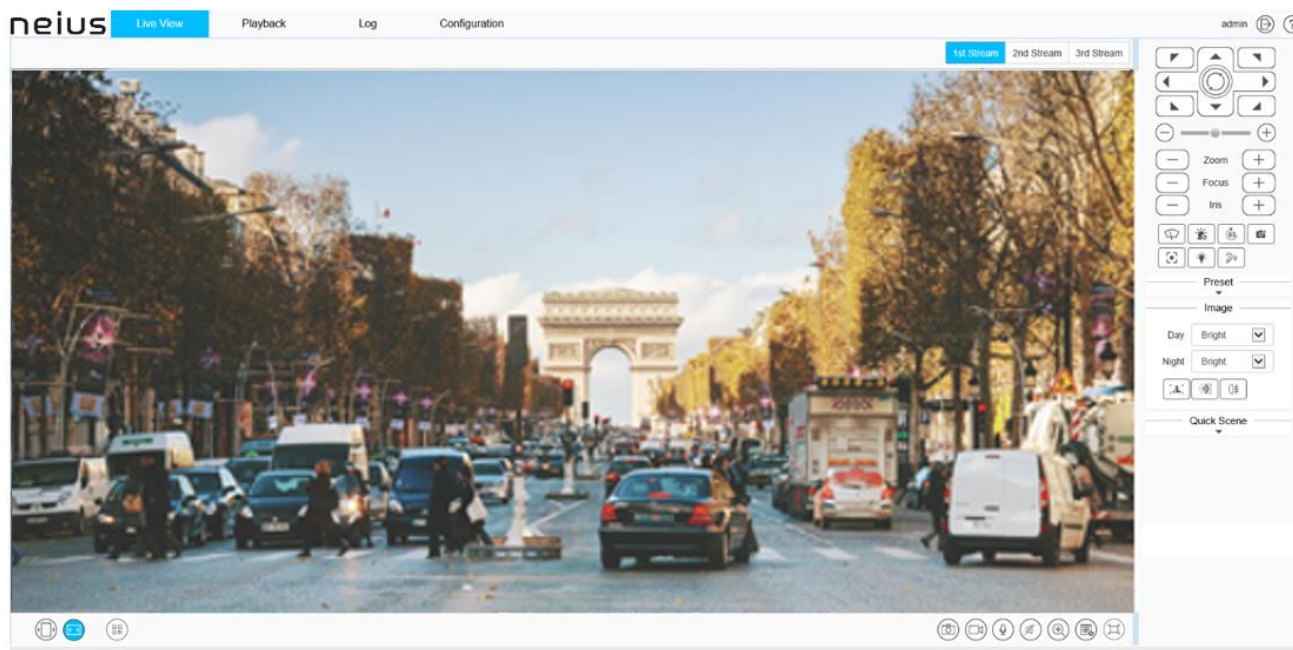


Live View





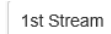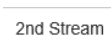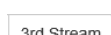   




Preview interface

Description:

- (1) Double-click the video to display it in full screen. Double-click again or press the [Esc] key of keyboard to exit the full screen;
- (2) Introduction to the functions of keys at the preview interface:


Icon	Description
	Click "1st Stream"; the video window will display the primary code stream, and the primary code stream will be displayed by default.
	Click "2nd Stream"; the video window will display secondary code stream after selection.
	Click "3rd Stream"; the video window will display third code stream after selection. (supported by some models)
	Click enable , when selected, the video window will display 1 screen. (supported by some models)
	Click enable. After selection, the video window will display 2 pictures. (supported by some models)
	Click "Fixed Ratio"; the video will be displayed at a fixed scale.
	Click "Fit Window"; the video will automatically adapt to the computer resolution display.
	QR code button. QR code will appear after clicking it. Users can scan the QR code according to the type of mobile phone and download the mobile client. A third QR code will appear after the equipment is connected to the public network, and you can add the equipment by scanning on the mobile client. (Supported by



Icon	Description
	some models)
	Local manual snapshot control button, click enable to snapshot and save the preview picture locally, the storage path of the snapshot file can be modified by itself, the modification page: configuration system settings local settings preview snapshot save path.
	Local manual recording control button, click enable, start local recording after enabling, the storage path of recording file can be modified by itself, modification page: configuration - system settings - local settings - saving path of recording file.
	Voice intercom switch. When enabled, it can transmit local audio to the front-end equipment through the network for output.
	Audio preview volume adjustment button, the local output volume can be adjusted by adjusting the slider position.
	Electronic zoom button. After enabling this function, click the left mouse button to draw the area to be enlarged, and then you can zoom in and view the area. (Supported by some models)
	Displays the frame rate button. After clicking, the preview interface displays the frame rate information of the current video. Click again to cancel the display of frame rate information. (supported by some models)
	Full screen button. Realize full screen preview video, double click left mouse button or press the [Esc] key of keyboard to exit full screen preview video status

Caution

 - (1) All icons are valid when pressed.
- (2) When there is no video in the interface, the audio preview is invalid.
- (3) Talk can only be conducted with one user at the same time, and it is recommended to turn off the intercom in time after completing the talk, so that others can use it.













Live View - > control menu

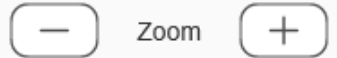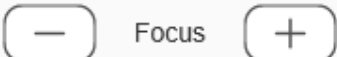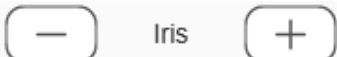   


Note: click the arrow  or  on the right side of the video window to display / hide the control interface.

Live View - > control menu - > Pan/Tilt

This function is only supported by the equipment with 485 control. The functions supported by different models are different, please refer to the actual interface.


Icon	Description
	8 direction keys, press the corresponding direction key to control the pan tilt to rotate in the corresponding direction; the center button is the scan shortcut key, press center button can invoke scan 1.
	The slider can adjust the rotation speed of the device. The closer the "-" end is, the slower the speed is, and the closer the "+" end is, the faster the speed is.
	Zoom control button, press "-" control device to perform zoom operation, the field angle becomes larger and the scenery becomes smaller; press "+" control device to perform zoom operation, the field angle becomes smaller and the scenery becomes larger. (this button can also control the electric lens for zooming)
	Focus control button, press "-" control device to perform focusing near operation, the near scene is clear and far away fuzzy; press "+" control device to perform focusing far operation, the far scene is clear and near fuzzy. (this button can also control the electric lens to focus)
	Iris control button, press "-" control device to perform aperture reduction operation, and press "+" control device to perform iris increase operation. (supported by some models)
	The wiper control button supports the wiper device. Click the button and the wiper will perform an operation. In order to prolong the service life of the wiper, the wiper is equipped with low temperature protection measures, and the function of closing when the ambient temperature is lower than 0 °C.
	Alarm removal button. Alarm can be removed after pressing the button. (Supported by some models)
	Flip: control the video image to flip 180 °.
	Snap button: press the button to turn on the front end interception function.
	Key focus, the device automatically completes the focus operation. (supported by some models)
	Strong light warning button, click enable, the strong light will turn on after enabling, and then click again, the strong light will turn off. (supported by some models)
	Sound warning button. Click "Enable", and play the alert tone after enabling. (Supported by some models)

Icon	Description
	Display the target information button, click to recognize the face.

Live View - > control menu - > Preset

Description:

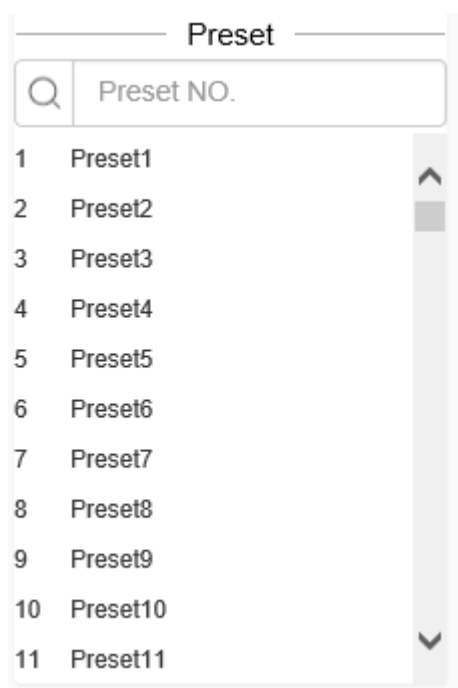

The preset position function is that the device can store the horizontal angle, tilt angle, focal length and other position parameters of the PTZ in the current state into the memory, and can quickly call these parameters and adjust the PTZ and the camera to the position when necessary. Only supported by RS485 controlled cameras. Enter the preset number, and click the Find button to select the preset operation, including the[set] and[call]operations.





Preset position interface

(1) Click [Preset]to open or hide the parameter setting page.

(2) [Set]: Control the PTZ to move to the specified position, enter the preset position

number in the blank field, click the button , and then click the button  to add the corresponding preset position successfully; support to add multiple preset positions.

[Call]: Enter the preset position number in the blank field, click the button , and then click  to call the corresponding preset position, and control the PTZ to move to the

specified preset position.

Live View - > control menu - > video parameters

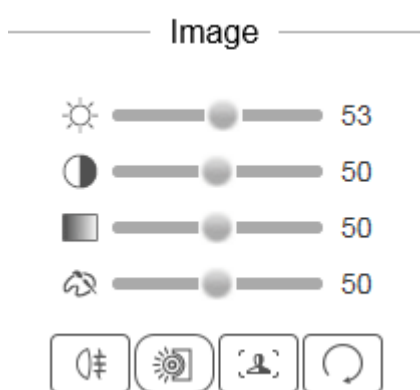











Image parameter setting interface

- (1) Click [Image] to open or hide the parameter setting page.
- (2) Adjust video parameters such as brightness, contrast, saturation and hue by means of adjusting corresponding slider.
- (3) If you need to restore all video parameters to the default state, you can click the

[Restore Default] button .

 50	Brightness adjustment: adjust the slider position to change the brightness of the image.
 50	Adjust the contrast, adjust the slider position to change the image contrast.
 50	Adjust the saturation, adjust the slider position to change the image saturation.
 50	Chroma adjustment: adjust the position of the slider to change the chroma of the image.
	Fog transmission function button. Press the button to turn on the fog transmission function. (Supported by some models)
	Glare suppression function button. Press the button to turn on glare suppression. (Supported by some models)
	Wide dynamic function button. Press the button to turn on wide dynamic. (Supported by some models)
	Restore default button. Button press the video parameter to restore the default value. (supported by some models)

Live View - > control menu - > Quick Scene

Quick Scene

☐ Low Ba...
☐ High Q...

☒ Self-Ad...
☐ Minimu...


Quick scene setting interface

Click quick scene to open or hide the parameter setting page. The following can be adjusted through this interface.

<input type="radio"/> Low Ba... <input checked="" type="radio"/> High Q...	According to the specific situation of network environment, choose the appropriate preview mode from [Low Bandwidth] and [High Quality].
<input checked="" type="radio"/> Self-Ad... <input type="radio"/> Minimu...	According to the network environment of equipment transmission, two transmission modes can be selected, i.e., [adaptive] and [shortest delay]. In the case of limited network bandwidth, it is suggested to choose adaptive mode to ensure smooth image; in the application environment with high video quality requirements, it is suggested to choose the shortest delay transmission mode.
<input checked="" type="radio"/> TCP <input type="radio"/> UDP <input type="radio"/> MUC	Protocol type: TCP, UDP, muc, use the specified protocol to connect video. (supported by some models)

Live View - > control menu - > Target Information

When the intelligent analysis mode is [face snapshot], the face information will be displayed in the preview interface.

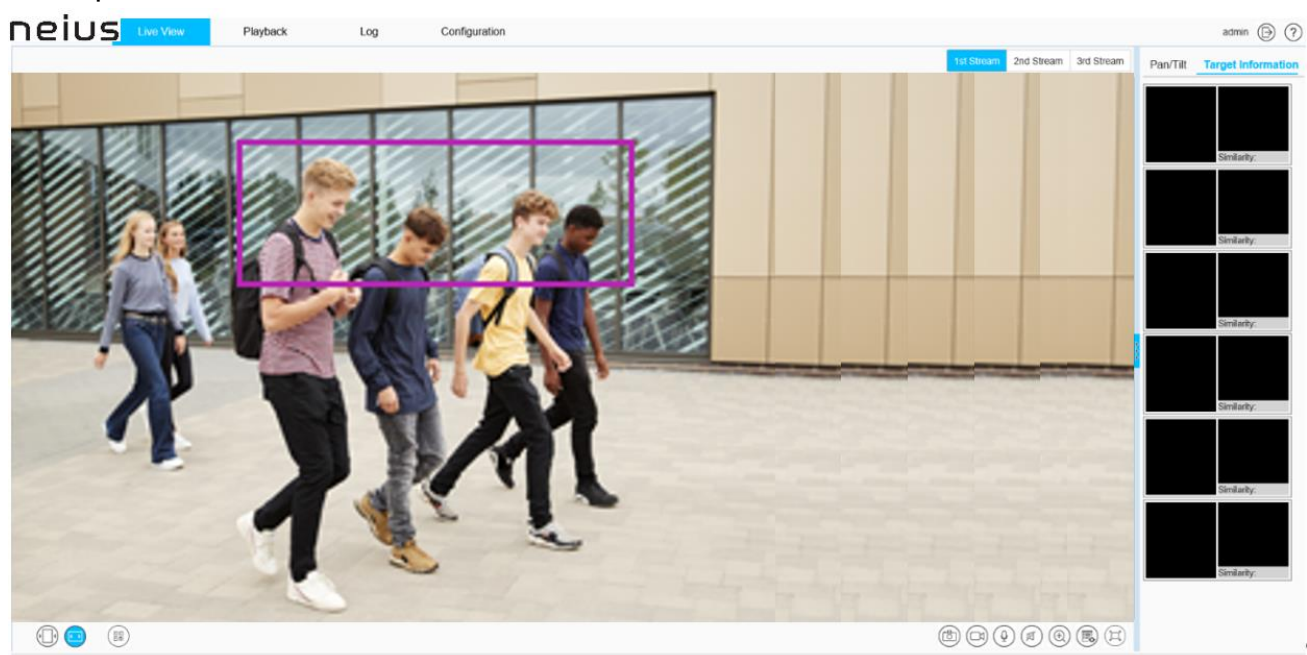














5.5 Playback


 



Playback interface



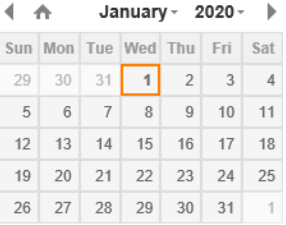

Click [playback] to enter the [playback] interface. In the playback interface, the user can view the video files of the specified date, and can also snapshot and clip the video. See the following table for basic operation:



 

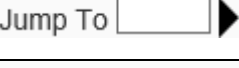 

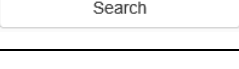 
Icon	Description
	Slow forward button. The speed is 1/2 X, 1/4 X, 1/6 X and 1/8 X.
	Play / pause button. Click to start/stop playing video file. Double speed playback will be canceled if necessary.
	“Stop Playing” button. You can stop playing the current file by clicking it.
	Fast forward button. The speed is 2 X, 4 X, 6 X and 8 X.
	Stepping button can playback the video in a single frame.
	Browse button, select the video file to play.
	Playback snapshot button, saved by default in C:\Users\john\NetVideoBrowser\CapturePics\.

Icon	Description
	Playback clip button: Click to start the clip, and click again to finish the clip. The default saving location is C: \ users \ John \ netvideobrowser \ snapshotpictures \.
	Clip Management: you can view the type of video clip, video clip progress, current status and other information.
	Volume adjustment button, the local output volume can be adjusted by adjusting the slider position.
	Download Management: query or download videos and pictures.
	Full screen play button: in full screen mode, double-click the mouse again at any position to exit from full screen mode.
	Select a date in the calendar, double-click the date, and find the qualified file according to the query criteria.


In the time axis mode, users can drag on the time axis to select and view the video files of the corresponding time. After selecting the time point, click the play button  to play. The time axis can be narrowed or enlarged by click .

In download management , users can operate according to file type, video recording type, and whether to query remotely. The specific functions of buttons in file mode are as follows:

Icon	Description
File Type <input type="text" value="Record"/>	Set the type of file to be queried, such as [Record], [Picture], etc.
RecType <input type="text" value="All"/>	Select the type of video file to be queried. (Supported by some models)
	Jump to the first page of query results.
	Go to the previous page of the current page.
	Go to the next page of the current page.
	Jump to the last page of query results.

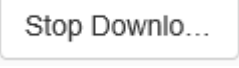	Lock: the file can be locked and unlocked. When the disk is full and files need to be deleted, the locked files will not be deleted.
	Start downloading selected video files
	Stop the selected video file being downloaded.
	Upload the video file to the FTP server. (Supported by some models)
	Jump to the specified page.
	Return to the playback interface.
	Query: Click to query the corresponding video information.

5.6 Log

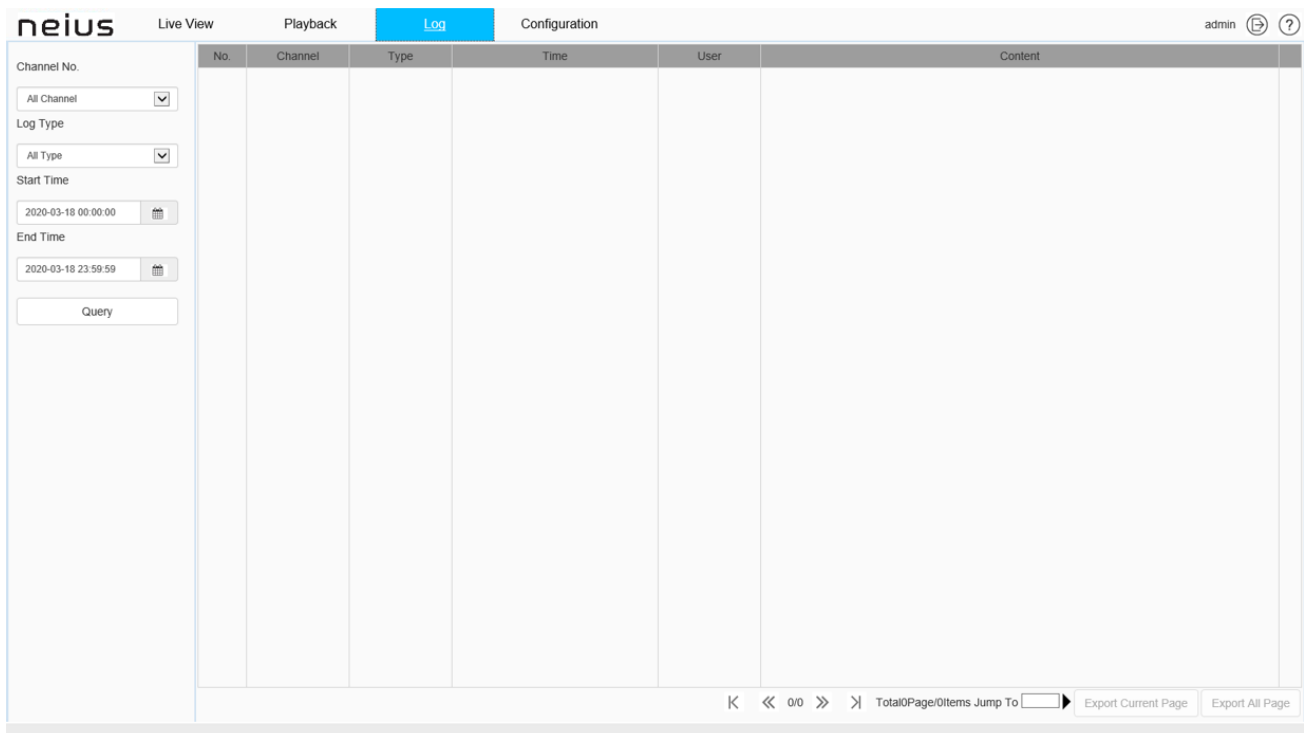

Log interface

Log interface operation instructions

- (1) Select the channel number to query from the [Channel No.] drop-down list.
- (2) Select the type of log you want to query from the [Log Type] drop-down list.
- (3) Select the start date in the [Start Time] drop-down list, and enter the time in the edit

box at the back.

- (4) Select the end date in the [End Time] drop-down list, and enter the time in the edit box next to it.
- (5) Click the [Query] button to query the logs within the specified time range.
- (6) When there are many logs, you can use [First Page], [Pre Page], [Next Page], [Last Page] in the lower right corner to turn pages to view the logs, or enter the page number to view directly in [Jump To] to jump to the specified page.
- (7) Click [Export Current Page] to export the log of current page to PC.
- (8) Click [Export All Page] to export all the logs found to the PC.

5.7 Configuration

After login,[preview]will be displayed by default. Click [configure] in the menu bar at the top of the page to enter the parameter configuration page, where you can set common settings, audio and video parameters, network settings, intelligent analysis, storage settings and system settings.

Note:

Because different models support different functions, the interfaces and menus may also be different, please refer to the actual interface

5.7.1. Basic Set

neius Live View Playback Log **Configuration** 1099/721 admin

Basic Set

Network

☐ DHCP

IPv4 Address: 192.168.2.152 IPv4 Subnet Mask: 255.255.255.0 Gateway: 192.168.2.1 DNS: 192.168.1.1

HTTP Port: 80 RTSP Port: 554

Video

	Resolution	Video Encoding	Encoding Mode	Frame Rate	Bit Rate
1st	8MP(3840x2160)	H.265	CBR	20	2048
2nd	4CIF(704x576)	H.265	VBRNormal	15	1024
3rd	CIF(352x288)	H.265		15	512

Audio

Audio Encoding: G.711A Audio Sample Rate: 8kHz Volume Value: 50

OSD

☒ Camera Title: k t 720 ☒ Date: 09/06/2021

Motion

☒ 7x24Full Area Sensitivity: 76

Users

No.	User Name	Authority	Edit	Delete
1	Admin	Admin	Edit	

[Add](#)

[Save](#) [Cancel](#) [Import](#) [Export](#) [Basic Re...](#) [Reboot](#)

Basic Set interface

Basic Set - > Network

[DHCP]: when checked, the DHCP server will automatically assign IP to the device.

[IPv4 Address]: set the IP address of the device.

[IPv4 Subnet Mask]: set the subnet mask of the device.


[Gateway]: set the gateway of the device.

[DNS]: set the DNS server address.

[HTTP Port]: enter [HTTP port number] in the input box on the page, restart the device¹, and then modify the HTTP port number.

¹ If you have changed some parameters wait at least 1 minute before to restart the device otherwise the parameters will not saved

[RTSP Port]: enter [RTSP port] in the input box on the page, restart the device², and then modify the RTSP port number.

[More...]: Click  to jump to the network setting interface.

Basic Set - > Video

[Resolution] set the resolution, which is divided into main stream, sub stream and third stream

[Video Encoding] set the video coding mode, which is divided into main code stream, sub code stream and third code stream

[Encoding Mode] set the coding compression mode, which is divided into main code stream, sub code stream and third code stream

[Frame rate] set the frame rate for each stream type in according to the camera capabilities

[Bit rate] set the bit rate for each stream type in according to the camera capabilities

[More...]: Click  to quickly jump to video settings

Basic Set - > Audio

[Audio Encoding] set the audio coding mode

[Audio Sample Rate] set the audio sampling rate

[Volume Value] set the volume of audio input

[More...]: Click  to quickly jump to audio settings

Basic Set - > OSD

[Camera Title] set the character overlay name of the channel. If it is checked, it means display; if it is not checked, it means display

Set the time and date display format in [Date]. If checked, it means display; if unchecked, it means display


[More...]: Click  to quickly jump to character overlay settings

Basic Set - > Motion

² If you have changed some parameters wait at least 1 minute before to restart the device otherwise the parameters will not saved

Check [7x24 Full Area] to set full time mobile detection alarm

[Sensitivity] set the sensitivity of motion detection

[More...]: Click  to quickly jump to mobile alarm

Basic Set - > Users

[New]

To add a new user, you need to set the user name, password and permission. The user name and password can only be entered in English letters and numbers. After the above three items are filled in, click the [Save] button.

Note: only users with administrator rights can add and modify users.

[Edit]

In the user list, click [Edit] to open the password modification prompt box, input the old password, new password and confirm the password, and then click Modify.

[Remove]

In the user list, click [Remove] to open the prompt box and click OK.

Other buttons

Click the [Save] button to save and make it take effect.

Click [Cancel] to restore the last saved parameter.

[Import]/ [Export]: used for equipment maintenance, mainly divided into three categories:

- (1) [Event Server] options include alarm time period and linkage item setting information, excluding intelligent analysis.
- (2) [Smart Analytics] options include settings related to intelligent analysis, including rules, time periods, etc.
- (3) [System Setting] options include all setting information except the above alarm and intelligent analysis, including character superposition, video recording strategy, network setting and other information.

[Basic Reset]: restore the default parameters of the device. (key information such as IP address will not be recovered)

[Reboot]: restart the device³.

5.8 Audio Video Set

5.8.1. Stream

Stream- > Stream

The screenshot shows the 'neius' web interface with the 'Configuration' tab selected. Under 'Configuration', the 'Stream' sub-tab is active. On the left, there is a sidebar menu with options: Basic Set, Audio Video Set, Stream (highlighted), Audio, Image Setting, OSD, Network, Event Schedule, VCA, Storage, and System. The main area displays a live video feed of a street scene. To the right of the video feed, there are various configuration parameters for the stream, each with a dropdown menu or input field. The parameters are: Stream (1st Stream), Stream Type (Audio Video), Resolution (1080P(1920x1080)), Bit Rate (8192), Frame Rate (25), Priority (Frame Rate), I-Frame Interval (50), Encoding Mode (CBR), Corridor Mode (Disabled), Video Encoding (H.265), S+ (Disabled), SVC (Disabled), Smooth Video Streaming (a slider set to 50 with a label '[Clarity<->Smooth]'), Smooth Display Mode (Disabled), Encrypt Type (Not Encrypted), Encrypt Password, and Password Confirm. At the bottom right, there are 'Save' and 'Cancel' buttons.

Stream - Stream interface

Parameters	Description
Channel	Select the channel for which video parameter information needs to be set. (Supported by some models)
Stream	The video related parameters of the main stream, the sub stream and the third stream can be modified. Select the corresponding code stream of the family and modify the parameters of the corresponding code stream
Stream Type	You can choose pure video or audio video.


³ If you have changed some parameters wait at least 1 minute before to restart the device otherwise the parameters will not saved

Resolution	Set the resolution of the video. (different models are compatible with different maximum resolutions).
Bit Rate	Set the bit rate of the video in KB / s. Code rate range: 32 ~ 16384kb / s. Tip: select the required resolution from the [resolution] drop-down list, and the code stream can be switched to the specified[code rate]. When [compression method] is [constant rate], the [code rate] represents the actual code rate of the code stream; when [compression method] is [variable rate], the [code rate] represents the maximum allowed code rate of the code stream. (Different models support different code rates, please refer to the actual interface)
Frame Rate	Sets the frame rate of the current video. In the [PAL] system, some models support 50 frames, and the maximum support is 25 frames when the wide dynamic mode is turned on. [NTSC] under the system, some models support 60 frames, and when the wide dynamic mode is turned on, the maximum support is 30 frames.
Priority	The video set to [frame rate first] is smoother and the video set to [quality first] is clearer.
I-Frame Interval	The number of frames between every two I frames can be set, and the range can be 10-100.
Encoding Mode	Set constant rate or variable rate compression. At the fixed bit rate, the amount of video data fluctuates little, and the bandwidth occupied by the network transmission is stable; at the variable bit rate, the amount of video data changes with the complexity of the video picture, and the bandwidth is saved when the scene is single. In the case of variable bit rate, there are several levels. If the better, the higher the average bit rate is.
Corridor Mode	The screen is rotated 90 degrees to adapt to the scene where the device is installed on the wall. It is off by default.
Video Encoding	Set how video is encoded. H. 265 encoding saves bandwidth, but some browsers or playback software do not support h.265.
S+	Switch S + on and off can be selected from the drop-down list. When S + is enabled, functions such as compression mode, video quality, I-frame frame rate and key area will not be available.
Electronic Image Stabilization	According to the actual situation, user can select [On] or [Off] to optimize the picture quality and prevent shake. (Supported by some models)
SVC	When [SVC (Scalable Video Coded)] is turned on, P frame can be encoded as non reference frame, which can be used for frame extraction video recording and save storage space. The video file after frame extraction still supports normal decoding. When the [auto] mode is selected, the device will adapt to the current network environment and decide whether to send the frame to ensure that the image can be previewed normally during preview. (supported by some models)
Smooth Video Streaming	The ratio of I frame and P frame can be set. The closer to smoothness, the better the smoothness of dynamic scene, the closer to clarity, and the better the video

	clarity performance of static scene.
Smooth Display Mode	Set whether to turn on unobstructed mode. (supported by some models)
Encrypt type	According to the situation, users can encrypt video data to improve the security of network transmission. [Encrypt type] select the required encryption algorithm (currently only AES algorithm is available), [Encrypt password] set the encryption password, and [password confirmation] input the encryption password again to ensure that the password entered twice is the same. Click [Save] to take effect.

After setting, click Save to take effect. Click [reset] to restore the last saved parameter.

Stream - > Key Region

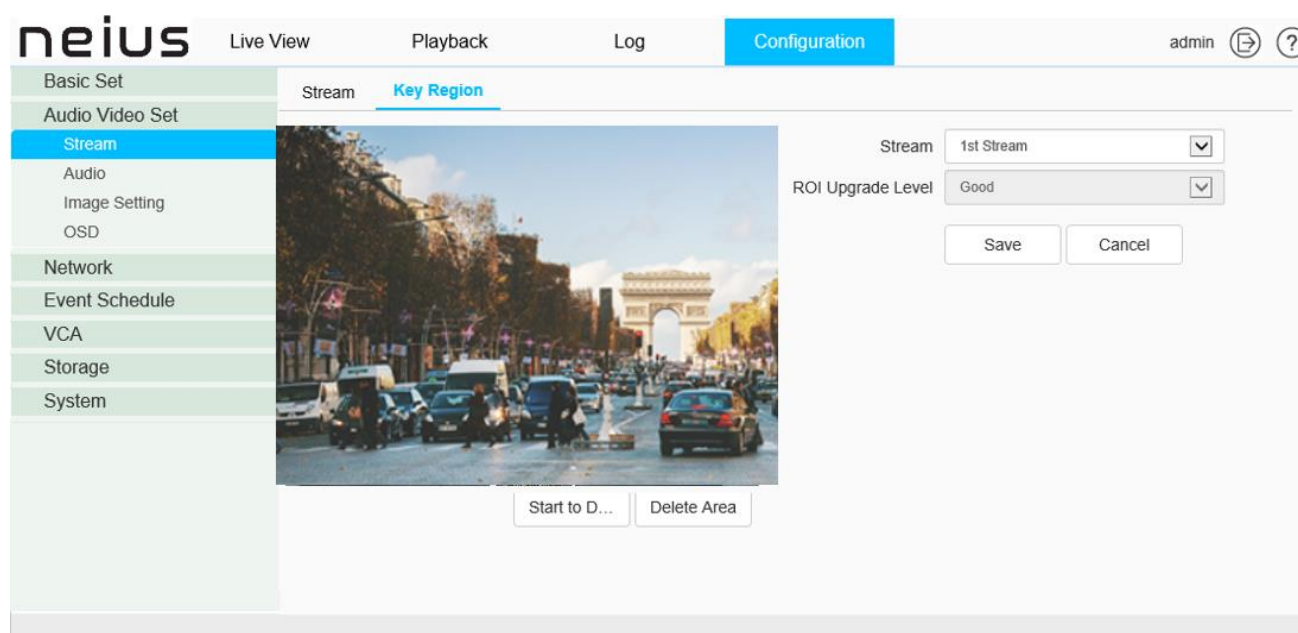


Video parameters key area interface

After the front-end connection supporting the key area setting, you can set the key area here. The image quality displayed in the focus area is higher.

- (1) Click the "Start to Drawing" button to drag the video by holding down the left mouse button, and then you can set the key area. Several key areas can be set up. Click "Delete Area" to delete all the key areas that have been set.
- (2) Click [Save] to save the corresponding parameter settings. Click [Cancel] to restore the last saved parameter.

Parameters	Description
Stream	Set the bitstream of the application focus area.
ROI Upgrade Level	Set the promotion level of videos in key areas.

5.8.2. Audio

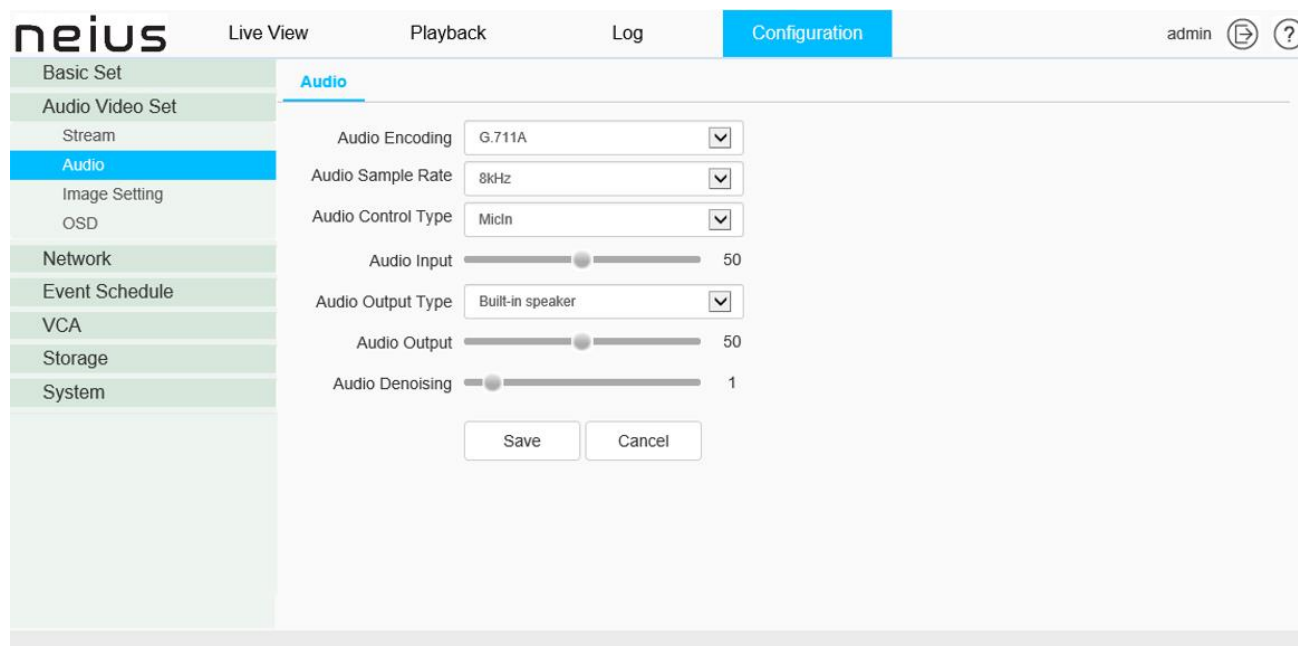

Interface of audio parameter setting

Parameters	Description
Audio Encoding	Set the audio encoding mode of the bitstream.
Audio Sample Rate	Sets the audio sampling rate for the bitstream.
Audio Control Type	It supports two modes: linein and micin. The control mode needs to be selected according to the output signal amplitude of the external audio equipment. When the external mic small signal (mv level signal) is connected, please select micin; when the external equipment is the active audio equipment (V level signal), please select linein mode. (supported by some models)
Volume value	The output sound size can be adjusted, and the adjustment range is 0-100. The smaller the value is, the smaller the output audio signal amplitude of the device is; the larger the value is, the larger the output audio signal amplitude of the device is.
Audio Denoising	The filter level of environmental noise can be set. The default level is 1. When the value is 0, turn off the audio noise reduction function. (supported by some models)
Audio Output Type	The audio output type includes built-in speaker, external sound source and off. When the built-in speaker is selected, the output volume can be adjusted. (supported by some models)
Echo Suppression	Turn on to improve the quality of audio intercom. (supported by some models)

After setting, click Save to take effect. Click [reset] to restore the last saved parameter.

Note:

- (1) To modify the audio parameters, the intercom function needs to be turned off.
- (2) Modify the audio coding mode and audio sampling rate parameters.

5.8.3. Image Setting

Image Settings - > Image

The applications of HD parameters are reflected in the form of templates, and the system provides several sets of commonly used templates for use. The HD parameters of each template are independent of each other, and the parameters of the second template will not be affected after modifying the HD parameters of the first template, so please confirm the current template before modifying the parameters.

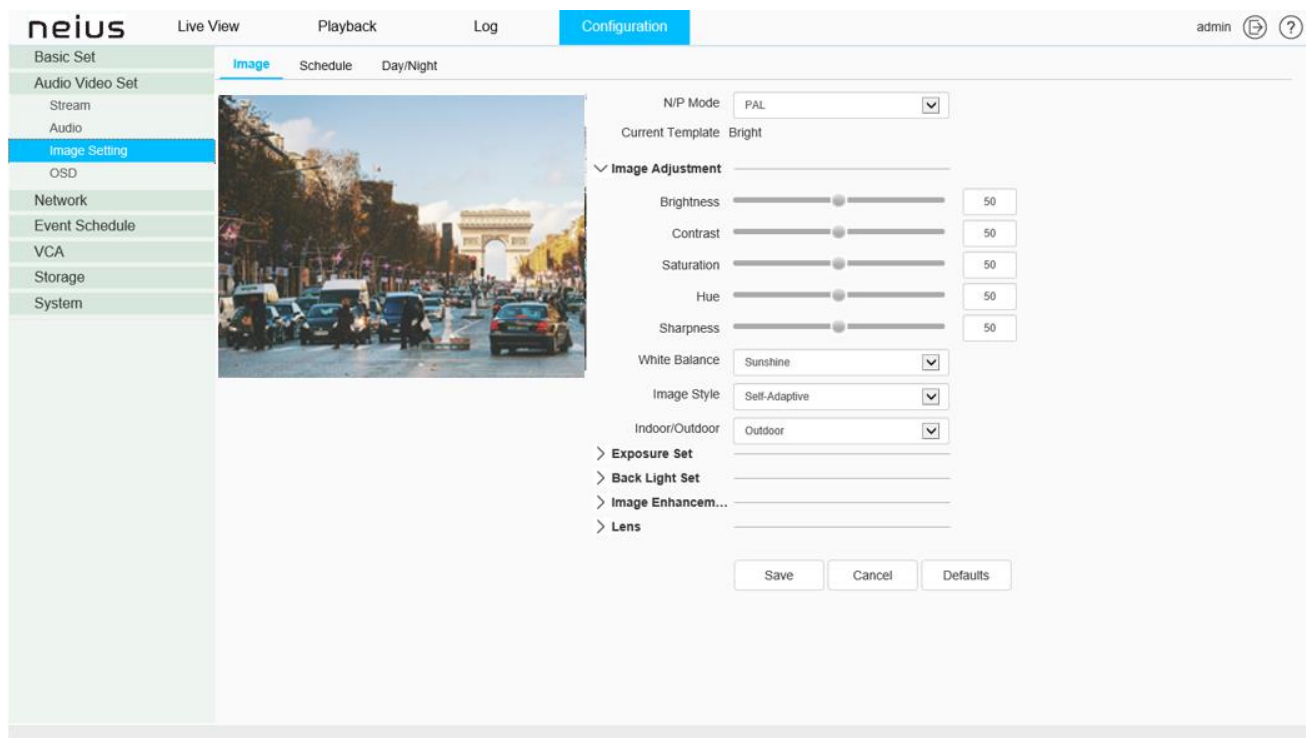


Image interface

Image - Template Selection

In[Current Template], select the template to modify the parameter. In


[template name], you can define the template name

Image -Image Adjustment

Click > next to [Image Adjustment] to expand the[Image Adjustment] interface. The user


can set the brightness, contrast, saturation, hue, sharpness, white balance, image style and indoor/ outdoor modes of the picture through the image adjustment menu.

Image –Exposure Set

Click the  button next to [Exposure Set] to expand the [Exposure Set] setting interface.


Parameters	Description
Shutter speed	You can set the maximum exposure time allowed to affect the brightness of the image. If the exposure time is too long, the moving image will be dragged, and if the exposure time is too short, the video picture will be darker.
Automatic gain	The maximum gain allowed can be set to affect the brightness of the image. Too much gain may produce more noise.

Image –Back Light Set

Click the “  ” button next to [Backlight] to expand the [Backlight] setting interface.

Parameters	Description
HLC	It is mainly used in road monitoring scenes. It can suppress the glare such as car headlights after being turned on, thus reducing the effect of glare.
Super-Wide dynamic Grade	In the drop-down list, there are [off], [ultra wide dynamic auto], [ultra wide dynamic manual] and backlight compensation options. Select [ultra wide dynamic auto] or [ultra wide dynamic manual] to display the [ultra wide dynamic] slider. Drag the slider to set the wide dynamic level that meets the requirements of the scene. The larger the value, the more obvious the effect. Select [backlight compensation] and check [set backlight compensation area] and click Save to set light compensation and improve the brightness in the setting area

Image - Image Enhancement

Click the  button next to [Image Enhancement] to expand the [Image Enhancement] setting interface.

Parameters	Description
Defog	Select [Enabled], [Disabled] and other options according to actual needs.
Digital Noise Reduction	In the drop-down list, you can select [close], [normal mode] and [expert mode]. Select [normal mode], display the [noise reduction level] slider, drag the slider to set the noise reduction level. Select [expert mode], and the sliders of [airspace noise reduction level] and [time domain noise reduction level] will pop up respectively. Drag the two sliders to set [airspace noise reduction level] and [time domain noise reduction level] respectively.

Note:

After the HD parameters are set, click[Save] to save. Click [Cancel] to restore the last saved parameter. [Defaults]: the parameters of each template can be restored to the default settings.

Image settings - > Schedule

Basic Set

Audio Video Set

Stream

Audio

Image Setting

OSD

Network

Event Schedule

VCA

Storage

System

Image

Schedule

Day/Night

Day

Bright

Night

Bright

Save

Schedule interface

Users can use different templates for equipment at different time periods by means of using HD template, to ensure that the effects of videos are the best in different time periods.

[Day]: Set the HD template during the day.

[Night]: Set the HD template at night.

Click the [Save] button to save and make it take effect.

Image settings - > Day/Night

Basic Set

Audio Video Set

Stream

Audio

Image Setting

OSD

Network

Event Schedule

VCA


Storage

System

Image

Schedule

Day/Night



Realtime Brightness

22

Color to B/W Type

Color

DayRange

38

NightRange

5

White LED Control

Auto

Manual low beam Brightness

100

Manual high beam Brightness

100

Save

Cancel

Day/Night setting interface

In the color to black interface, set the device to switch to day or night mode according to the specified conditions, and set the fill light.

[Color to B/W Type]: allows [device] to switch between day and night modes according to different rules. Because the functions of different models are different, please refer to the actual interface.

[Auto(inside)]: in the internal synchronization mode, the [device] will automatically detect the brightness of the video screen. When the video brightness is higher than the brightness value in the day, the video will change from black to color. When the video brightness value is lower than the brightness value at night, the video will change from color to black. The [real-time brightness value] above the page is the detected current brightness value.

[B/W]: the device video is always in black and white mode.

[Color]: the device video is always in color mode.

[Auto(outside)]: detect the brightness of the external environment through the photoreceptor. When the external brightness is higher than the brightness value in the day, the video changes from black to color. When the external brightness is lower than the brightness value at night, the video changes from color to black.

[Schedule]: in timing mode, you can specify the daylight time and dark time.

[Adaptive]: the device automatically switches between black and white or color mode according to the scene.

[Sensitivity]: toggle the drop-down box to select sensitivity.

[IR lamp control mode]: set the IR lamp on mode.

[Brightness of IR lamp]: slide the slider to set the brightness value of IR lamp. The maximum value is 100.

[White Light Control Mode]: set the white light on mode.


[Brightness of White Light]: slide the slider to set the brightness value of white light. The maximum value is 100.

Click the [Save] button to save and make it take effect.

Click [Cancel] to restore the last saved parameter.

5.8.4. OSD

OSD - > OSD

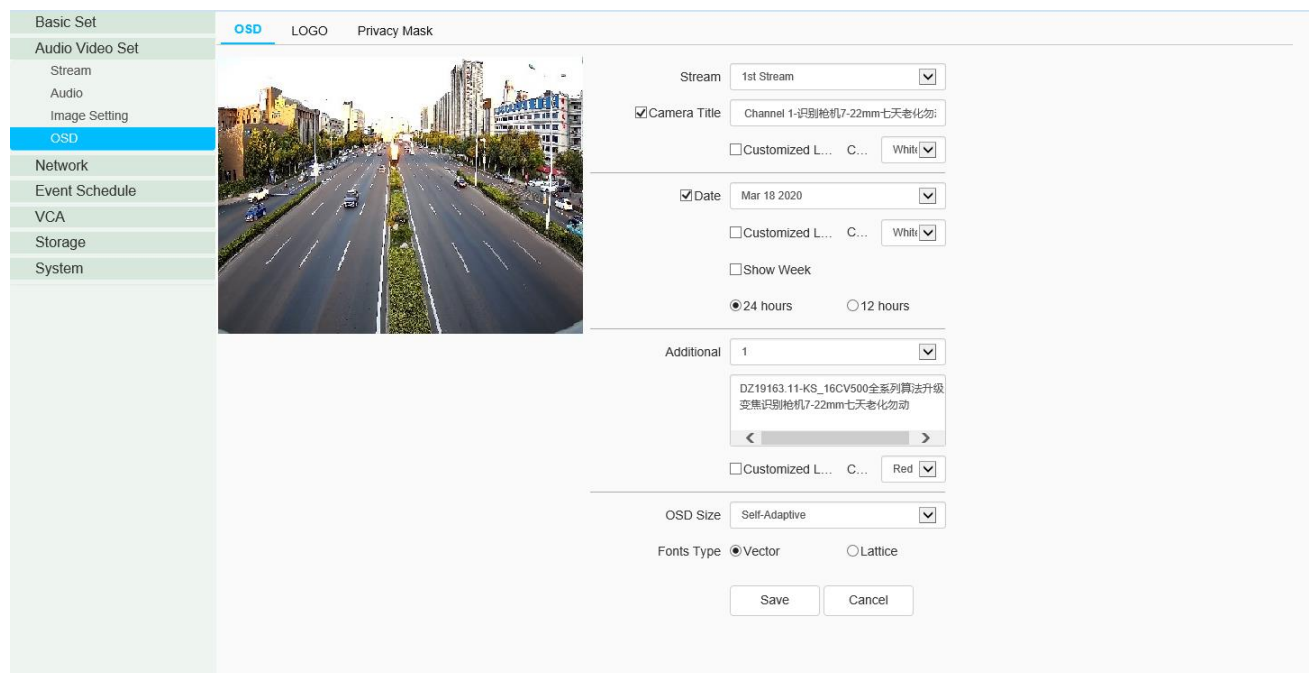

Interface of OSD

[Channel]: Select the channel for which OSD needs to be set. (Supported by some models)

[Stream]: select the code stream to stack character information.

[Channel Title]

- (1) Select the [Channel Title] check box to overlay the channel name on the screen.
- (2) Enter a name in the input box on the right to set the channel name.
- (3) From the [Color] drop-down list, select the color you like for the superimposed content.
- (4) If you need to change the position of the superimposed character, select the [user defined position] check box, and click on the small screen with the mouse to specify a new position for the superimposed character.

[Date]

- (1) Select the [Date] check box to overlay the date and time on the picture.
 - (2) Select your preferred date format from the drop-down list on the right.
 - (3) If you need to include the week in the displayed time and date, select the [Show Week] check box.
 - (4) As required, the time can be displayed in 24-hour or 12-hour mode. Select the
- DS1099-115A

corresponding option from the 2 buttons below.

- (5) From the [Color] drop-down list, select the color you like for the superimposed content.
- (6) If you need to change the position of the superimposed character, select the [user defined position] check box, and click on the small screen with the mouse to specify a new position for the superimposed character.

[Additional]

- (1) [Additional] at present, there are 5 areas for stacking.
- (2) Input the text content to be superimposed from the input box below, including Chinese characters, English and common punctuation marks. You can stack multiple lines of content in one area as needed. Some models support peripheral mode. Click [insert] to add peripheral information.
- (3) From the [color] drop-down list, select the color you like for the superimposed content.
- (4) Select the [user defined location] check box and click on the small screen with the mouse to specify a new location for the superimposed characters.

[OSD Size]

You can specify the size of the superimposed characters, select the preferred character size (unit: pixel) in the [OSD Size] drop-down list, or select [Self-Adaptive] to let the system automatically adjust the character size.

After all the above parameters are set, click [Save]to save and take effect; click [Cancel]to restore the last saved parameters.

Note:

Quantity of extra area information which can be additionally added in each channel is set on a case-by-case basis

OSD - > LOGO

Basic Set

Audio Video Set

Stream

Audio

Image Setting

OSD

Network

Event Schedule

VCA

Storage

System

OSD LOGO Privacy Mask

LOGO File(*.bmp)

☐ Enabled

☐ Customized Location

Requirements on the image format:

1. The bitmap depth must be 24.

2. Size should be smaller than 200*200.

3. Height and Width value should be in multiples of 4.


LOGO setting interface

- (1) Enter the path of the image file in the [LOGO File] input box, or click the [Browse] button to find the image file in the pop-up window.
- (2) After clicking the [Upload] button, the picture will be uploaded to the equipment, and the equipment will restart automatically after uploading the picture.
- (3) After the equipment is restarted, select the [Enable] check box to overlay the LOGO picture on the video. If the [Enable] check box is canceled, the LOGO will not be displayed.
- (4) With [Enable] selected, select the [Customized Location] check box and click on the video screen with the mouse to specify a new display location for the LOGO.

Note:

- (1) The LOGO picture must be a bitmap file in bmp format. The bitmap depth is 24, the size is smaller than 200 * 200 pixels, and the height and width are divisible by 4. Please use a picture that meets the requirements.
- (2) Overlapped LOGO will automatically remove its black and white background.

OSD- > Video Mask

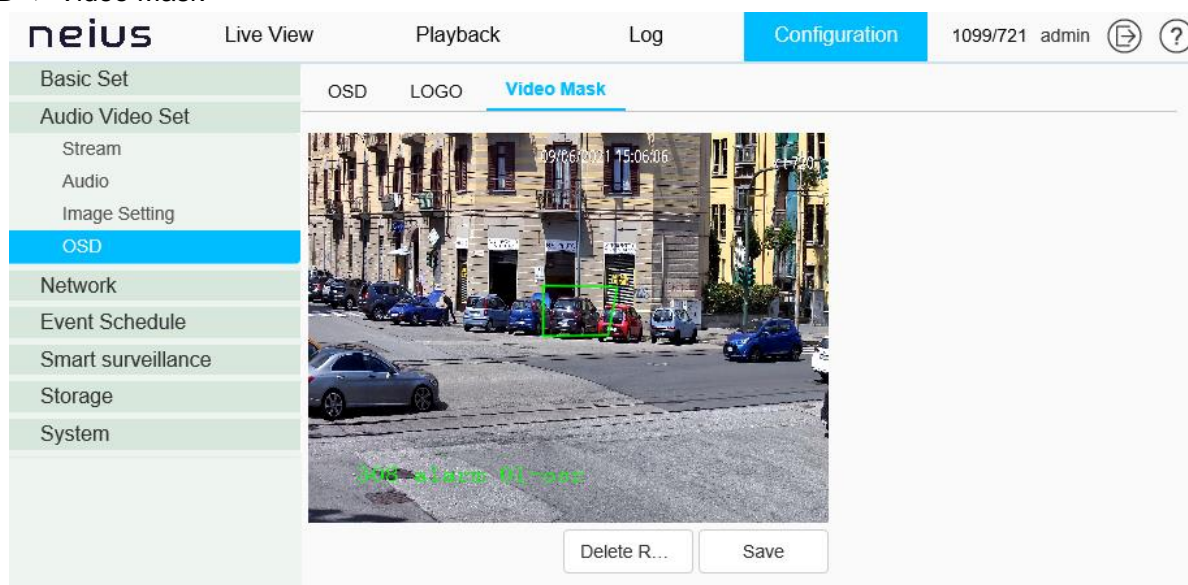

Privacy Mask setting interface

According to the user's needs, the occlusion area is set on the video screen to protect the privacy information and support multiple occlusion areas.

- (1) Drag the mouse to draw the occluded area on the video screen, allowing to draw

multiple occluded areas.

- (2) If you need to delete the drawn area, click [Delete Region] to delete all the occluded areas, so as to draw again.
- (3) Click[save] to save and take effect.
- (4) Max number of occluded area is 8

5.9 Network

5.9.1. Basic set

Basic set - > TCP / IP

neius

Live View

Playback

Log

Configuration

1099/721 admin

Basic Set

Audio Video Set

Network

Basic Set

Advanced Set

Event Schedule

Smart surveillance

Storage

System

TCP/IP

DDNS

Port Forwarding

MAC

3c:da:6d:1b:7a:a6

IPv4 setting

☐ DHCP

IPv4 Address

192.168.2.152

IPv4 Subnet Mask

255.255.255.0

Gateway

192.168.2.1

☐ Auto Get DNS

DNS

192.168.1.1

Alternate DNS

8.8.8.8

IPv6 setting

IPv6 mode

Router announcement

Link local address

fe80::3eda:6dff:fe1b:7aa6/64

IPv6 Address

View IPv6 a...

Pv6 subnet prefix len...

0

IPv6 default gateway

☐ Auto Get DNS

DNS

Alternate DNS

Other

MTU

1500

☐ SNMP

HTTP Port

80

HTTPS Port

443

RTSP Port

554

RTSP Path

rtsp://<username>:<password>@<ip>:<port>/<channel>/<stream>

channel:channel,1 to N;stream:stream,1st stream 1,2nd stream 2,3rd stream 3.

Example:rtsp://admin:admin@192.168.1.3:554/1/1

Save

Cancel

TCP / IP setting interface

[DHCP]: set whether the DHCP server automatically assigns IP to the device.

[IPv4 Address]: set the IP address, subnet mask and gateway of the device.

[IPv6 Address]: this device supports IPv6. Users can see the IPv6 address and subnet mask of the device on the page.

[DNS]: set the DNS server address.

[MAC]: displays the physical address of the device.

[MTU]: set the size of MTU, ranging from 500 to 1500, and the default is 1500. After setting,

click Save to save the setting, and it will take effect after restarting the equipment.

[HTTP Port]: enter [HTTP port number] in the input box on the page, restart the device⁴, and then modify the HTTP port number.

[RTSP Port]: enter [RTSP port number] in the input box on the page, restart the device⁵, and then modify the RTSP port number.

[HTTPS Port]: enter [HTTPS port number] in the input box on the page, restart the device⁶, and then modify the HTTPS port number.

[RTSP Path]: refer to the example path in the interface. Check enable intranet search to enable this function.

[Save]: save the current settings.

[Cancel]: restores the last saved parameter.

Basic Set - > DDNS

	TCP/IP	DDNS	UPnP
Basic Set			
Audio Video Set			
Network			
Basic Set			
Advanced Set			
Event Schedule			
VCA			
Storage			
System			

☐ Enabled

Server Domain

DDNS Domain

User Name

Password

Password Confirm

DDNS setting interface

Prerequisite is a router or switch device which support UPNP or Port Forwarding. After checking [Enabled] DDNS, select the [server address] to be set, modify equipment [Server


⁴ If you have changed some parameters wait at least 1 minute before to restart the device otherwise the parameters will not saved

⁵ If you have changed some parameters wait at least 1 minute before to restart the device otherwise the parameters will not saved

⁶ If you have changed some parameters wait at least 1 minute before to restart the device otherwise the parameters will not saved


Domain], set [DDNS Domain], [User Name], [Password]and[Password Confirm], and then click [Save] to set DDNS network server information. Click [Cancel] to restore the last saved parameter.

The following picture shows how to set Easy DDNS by Easy DDNS

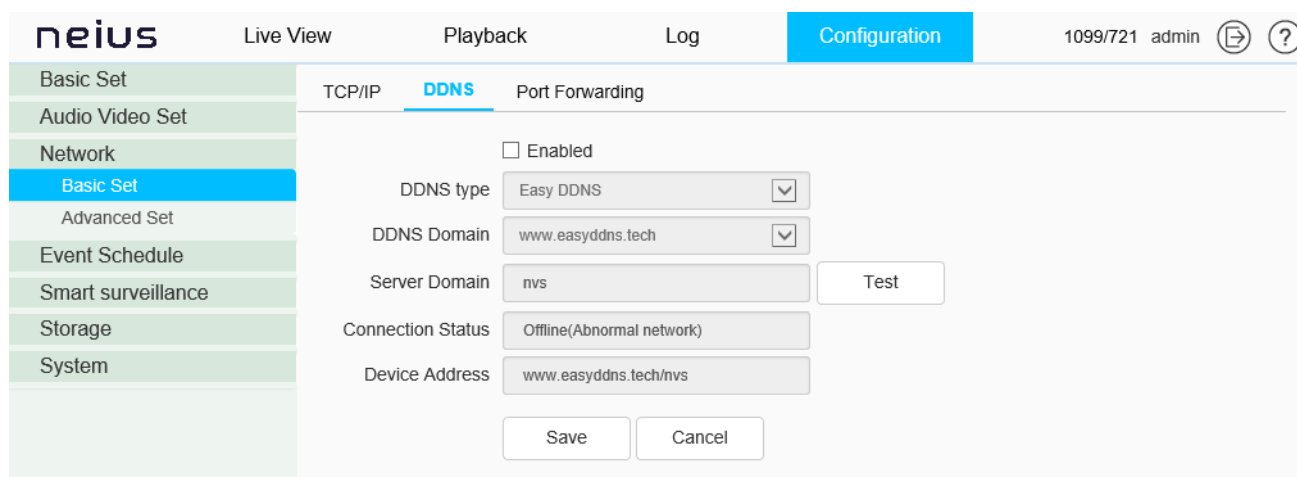


The screenshot shows the 'neius' web interface with the 'Configuration' tab selected. On the left, a sidebar lists various settings: Basic Set, Audio Video Set, Network, Basic Set (highlighted), Advanced Set, Event Schedule, Smart surveillance, Storage, and System. The main area is divided into three tabs: TCP/IP, DDNS (selected), and Port Forwarding. Under the DDNS tab, there is a section for 'Easy DDNS'. It includes an 'Enabled' checkbox (unchecked), a 'DDNS type' dropdown (set to 'Easy DDNS'), a 'DDNS Domain' dropdown (set to 'www.easyddns.tech'), a 'Server Domain' text input (set to 'nvs'), a 'Test' button, a 'Connection Status' display (showing 'Offline(Abnormal network)'), and a 'Device Address' text input (set to 'www.easyddns.tech/nvs'). At the bottom of this section are 'Save' and 'Cancel' buttons. The top of the interface shows 'Live View', 'Playback', 'Log', and 'Configuration' tabs, along with a user status '1099/721 admin' and help icons.

- Enabled Easy DDNS and Input your customized Server domain, then Click 'Test' button to test if this server domain is available.

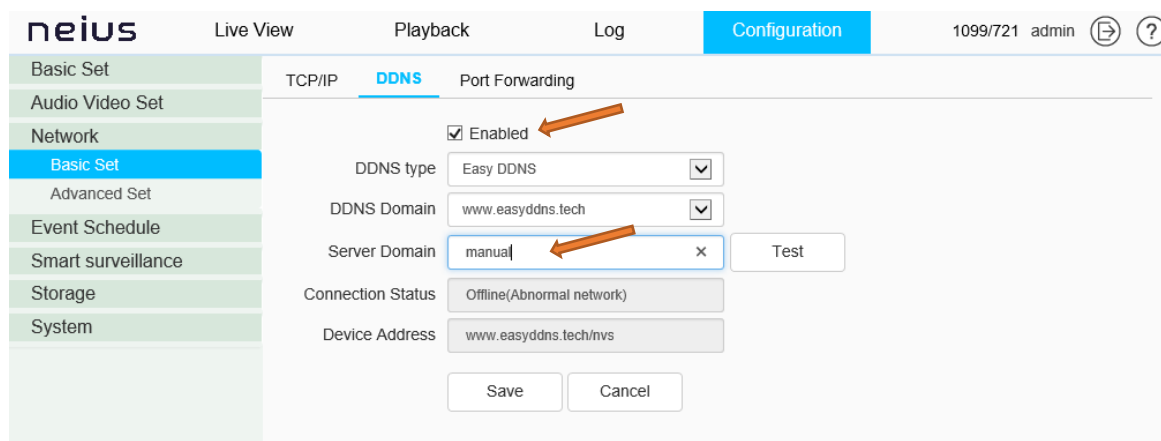

This screenshot is similar to the previous one, but the 'Enabled' checkbox is now checked. The 'Server Domain' text input now contains the word 'manual'. Two orange arrows are added: one pointing to the 'Enabled' checkbox and another pointing to the 'Server Domain' input field. The 'Test' button is still present next to the input field. The rest of the interface remains the same.

- After Test, there is a note to tell you if the device domain is available. If it is available, you can save and use it. If not, please change it and test to find an available device name.

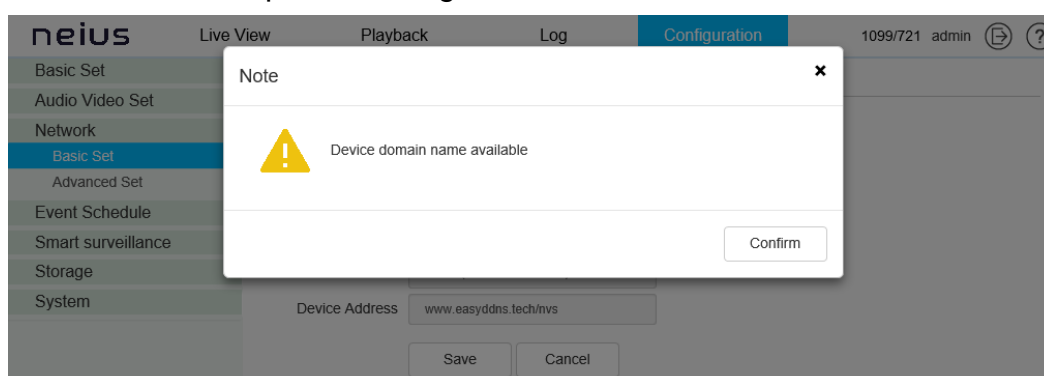

This screenshot shows a 'Note' dialog box overlaid on the DDNS configuration page. The dialog box has a title bar with a close button (X). Inside, there is a yellow warning triangle icon followed by the text 'Device domain name available'. At the bottom right of the dialog box is a 'Confirm' button. The background shows the DDNS configuration page with the 'Server Domain' field set to 'manual'.

- Click Save button and you can see your Device Address. For example, here is 'www.easyddns.tech/Manual'. Later, you will use this address to access your Camera by the browser.

After the configuration of DDNS it is necessary to do Port Forwarding settings to ensure the camera data port open to internet.

Basic Set- > UPnP

The screenshot shows the 'neius' web interface. The top navigation bar includes 'Live View', 'Playback', 'Log', and 'Configuration' (highlighted). The user is logged in as '1099/721 admin'. The left sidebar lists various settings: Basic Set, Audio Video Set, Network, Basic Set (highlighted), Advanced Set, Event Schedule, Smart surveillance, Storage, and System. The main content area is titled 'Port Forwarding' and includes a 'TCP/IP' tab. The 'Enabled' checkbox is unchecked. The 'Mapping Type' is set to 'UPnP' and the 'UPnP type' is set to 'Manual'. Below this is a table of port mappings:

Port Type	External Port	External IP Address	Internal Port	State
HTTP	80	0.0.0.0	80	Not activated
RTSP	554	0.0.0.0	554	Not activated
Data Port	3000	0.0.0.0	3000	Not activated
HTTPS	443	0.0.0.0	443	Not activated
RTMP	1935	0.0.0.0	1935	Not activated

At the bottom of the configuration area are 'Save' and 'Cancel' buttons.

UPnP interface

Only when port mapping is enabled, can the ports of network devices be opened normally.

Port mapping methods include automatic and manual.

- (1) When "Auto" mode is selected and UPnP is enabled, users do not need to do port mapping on the router, only need to turn on the UPnP function on the router.
- (2) Select "Manual", the user needs to manually map the port on the router.

neius Live View Playback Log Configuration 1099/721 admin

TCP/IP DDNS **Port Forwarding**

Basic Set Audio Video Set Network **Basic Set** Advanced Set Event Schedule Smart surveillance Storage System

☒ Enabled

Mapping Type **Manual**

Port Type	External Port	Internal Port
HTTP	80	80
RTSP	554	554
Data Port	3000	3000
HTTPS	443	443
RTMP	1935	1935

Save Cancel

In manual mode, the user can specify the external port to be mapped under the public IP. The user does not need to modify the port of the network device itself. Go to your Router or Switch device menu, and do port mapping settings-forward the Internal Port to the External Port.


- After the port mapping, the status column will show whether it is effective. At the same time, the external port under the currently mapped public IP will be displayed in the external port. If users need to access network devices through the public network, they need to use the currently mapped external port to access.

[Save]: save the current settings.

[Cancel]: restores the last saved parameter.

5.9.2. Advanced Set

Advanced Set - >IP Filter

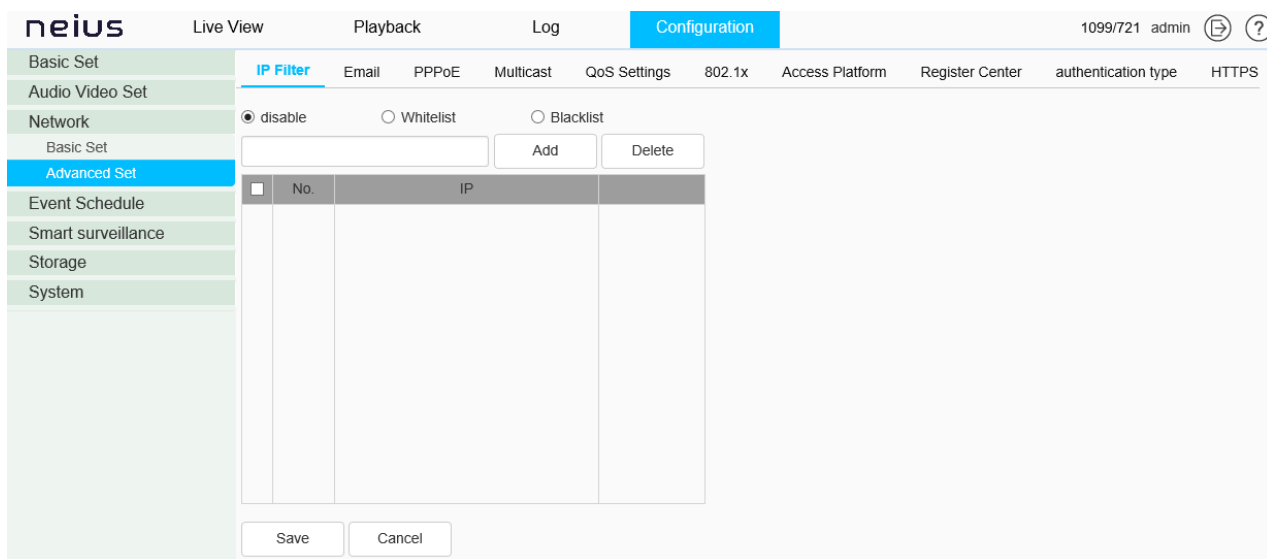

IP Filter setting interface

IP Filter, also known as black-and-white list, is provided for users to manage access rights more flexibly.

[disable]: select the [disable] button to remove the restriction of the black and white list. All IP addresses can be accessed, not only the IP addresses in the list.

[Whitelist]: if you want to allow only a few trusted IPS to access the device, you can select the [Whitelist] button, enter the trusted IP addresses one by one, click [Add] to add to the list, and then click [Save] to make the whitelist effective. At this time, only a number of IPS specified in the list can successfully log in to the device, and login requests from other IPS will be rejected, regardless of whether their user name and password are correct or not. Users can specify up to 16 trusted IP addresses in the white list.

Note: when adding the white list, please confirm whether to add the IP address of the current user.

[Blacklist]: if you want to block some IP addresses and prohibit them from accessing the equipment, you can select the button of [blacklist], input the IP addresses you want to block one by one, click [Add] to add them to the list, and then click [Save] to make the blacklist effective. At this time, the login request from any IP in the list will be rejected, regardless of whether its user name and password are correct or not.

Note: when adding the blacklist, please confirm whether the IP address of the current user is added.

[Delete]: if you need to delete some IPS from the list, just select the check box on the left of

these IPS and click [delete]. Note that all IPS cannot be deleted when deleting the white list, otherwise the device will not be able to log in successfully.

Note: IP filtering can only be judged when a user is newly logged in, and cannot filter the logged in IP. It is strongly recommended to restart the device ⁷in time after each blacklist configuration to shield the illegal IP address.

[Save]: save the current settings.

[Cancel]: restores the last saved parameter.

Advanced Set - > Email

The screenshot shows the 'neius' web interface with the 'Configuration' tab selected. Under 'Configuration', the 'Email' sub-tab is active. The left sidebar lists various configuration categories, with 'Advanced Set' highlighted. The main content area displays the email configuration settings:

- ☐ Enabled
- Email Server: 0
- Port: 25
- Email Account: [input field]
- Email Password: [input field]
- Email Mode: off (dropdown)
- Encryption: None (dropdown)
- Email Subject: 0
- Main Email Address: [input field]
- Email Address 1: [input field]
- Email Address 2: [input field]
- Email Address 3: [input field]

At the bottom of the configuration area are three buttons: 'Save', 'Test', and 'Cancel'.

Mail setting interface

After the user enables mail, the alarm server will automatically send alarm mail to the mailbox address set by the user when an alarm occurs.

- (1) The email server address input format is smtp.xx.com, where XX represents the email server and is the login email of the account, for example, smtp.gmail.com.
- (2) The account and password are the user name and password of the login SMTP server mailbox. If you are using Gmail, set the SMTP port to 465 and enable the Encryption option
- (3) The encryption mode can be none, SSL or TLS.

⁷ If you have changed some parameters wait at least 1 minute before to restart the device otherwise the parameters will not saved

(4) After setting the subject and CC email address, click [test] to test whether the mail server function is normal. Click [save] to save the current settings. Click [reset] to restore the last saved parameter.

Advanced Set - > PPPoE

The screenshot shows the 'neius' configuration interface. The top navigation bar includes 'Live View', 'Playback', 'Log', and 'Configuration' (which is highlighted). The user is logged in as 'admin' with the ID '1099/721'. On the left, a sidebar lists various configuration categories: Basic Set, Audio Video Set, Network, Basic Set, Advanced Set (highlighted in blue), Event Schedule, Smart surveillance, Storage, and System. The main content area is titled 'Configuration' and contains several sub-tabs: IP Filter, Email, PPPoE (highlighted), Multicast, QoS Settings, 802.1x, Access Platform, Register Center, authentication type, and HTTPS. Under the 'PPPoE' tab, there is a checkbox for 'Enabled' which is currently unchecked. Below this are three input fields: 'User Name' with the value '12345678', 'Password' with masked characters '*****', and 'Password Confirm' also with masked characters '*****'. At the bottom of these fields are two buttons: 'Save' and 'Cancel'.

PPPoE setting interface

After enabling the [PPPoE] function, change the [User Name],[Password]and [Password Confirm], and [Save] to set the PPPoE network server information, which will take effect after restart;[Cancel]to restore the last saved parameters. (supported by some models)

Advanced Set - > SIP

Basic Set	IP Filter	Email	PPPoE	SIP	Multicast	QoS Settings	Access Platform
Audio Video Set							
Network							
Basic Set							
Advanced Set							
Event Schedule							
VCA							
Storage							
System							
		Server IP	<input type="text"/>				
		Server Port	<input type="text" value="0"/>				
		Server ID	<input type="text"/>				
		Device ID	<input type="text"/>				
		User Name	<input type="text"/>				
		Password	<input type="text"/>				
		RegValidity	<input type="text" value="0"/>				
		Keep-Alive	<input type="text" value="0"/>				
		Heartbeat Interval	<input type="text" value="0"/>				
		Heart Rate	<input type="text" value="0"/>				
		<input type="checkbox"/> Need to Register					
		Channel No.	<input type="text" value="Channel1"/> <input type="button" value="v"/>				
		Channel ID	<input type="text"/>				
		Channel Level	<input type="text" value="0"/>				
		PTZ Time	<input type="text" value="0"/>				
		Event Input	<input type="text" value="1"/> <input type="button" value="v"/>				
		Event Input No.	<input type="text" value="987654321021111112"/>				
		Event Level	<input type="text" value="1"/>				
		<input type="button" value="Auto Filling Set"/>					
		<input type="button" value="Save"/>		<input type="button" value="Cancel"/>			

SIP setting interface

The SIP protocol can be accessed to other platforms by setting corresponding parameters, it is available only on some cameras.

[Auto Filling Set]: click this button, the channel number and alarm input number will be increased and set from the current channel number.

[Save]: save the current settings.

[Cancel]: restores the last saved parameter.

Advanced Set - > Multicast

Multicast setting interface

Input the multicast [IP Address] (range: 224.0.0.0-239.255.255.255), input the port number (range: 1-65535), and click Save to restart the device⁸. (supported by some models)

Advanced Set - > QoS settings

QoS setting interface

[Audio/Video DSCP] input the DSCP(Differential service code point) parameters in the input box, disconnect and reconnect the video stream parameters to take effect, and [Event DSCP] input the DSCP parameters in the input box, and click [Save] to save the parameters. (supported by some models)

Advanced Set - > 802.1x

IEEE 802.1X defines the encapsulation of the Extensible Authentication Protocol (EAP) over IEEE 802.11, which is known as "EAP over LAN" or EAPOL.

EAPOL was originally designed for IEEE 802.3 Ethernet in 802.1X-2001, but was clarified to suit other IEEE 802 LAN technologies such as IEEE 802.11 wireless and Fiber Distributed Data Interface (ANSI X3T9.5/X3T12 and ISO 9314) in 802.1X-2004. The EAPOL was also modified for use with IEEE 802.1AE ("MACsec") and IEEE 802.1AR (Secure Device Identity, DevID) in 802.1X-2010 to support service identification and optional point to point encryption

⁸ If you have changed some parameters wait at least 1 minute before to restart the device otherwise the parameters will not saved

over the internal LAN segment.

Advanced Set - > Access Platform

Platform access setting interface

[Platform Enabled]

Support the enabling and shutting down of Onvif, RTSP, P2P and CGI. After setting, some devices will restart automatically and take effect.

Note: to replace the access platform, you need to first disable the enabled platform, and then select a new platform and enable it.

[Auto Filling Set]: click this button, the channel number and alarm input number will be increased and set from the current channel number.

RTMP stands for “Real-Time Messaging Protocol,” and it is part of the technology that makes live streaming possible.

It is necessary to reduce frame-rate and bitrate w.r.t. the out bandwidth dal router della tlc. Depending on the streaming platform you can choose the CODEC, for example for Youtube it is necessary to choose H264 Codec, see the following picture :

Stream	1st Stream	▼
Stream Type	Audio Video	▼
Resolution	8MP(3840x2160)	▼
Bit Rate	1024	▼
Frame Rate	5	▼
Priority	Frame Rate	▼
I-Frame Interval	50	▲▼
Encoding Mode	CBR	▼
Corridor Mode	Disabled	▼
Video Encoding	H.264H	▼
S+	Disabled	▼
Electronic Image Stabilization	Disabled	▼

The URL to use for Youtube it is made in this way: `rtmp://a.rtmp.youtube.com/live2/[Stream key]`



[Save]: save the current settings.

[Cancel]: restores the last saved parameter.

Advanced Set - > Register Center

The screenshot shows the 'neius' web interface with the 'Configuration' tab selected. The 'Advanced Set' sub-tab is active. The main content area contains the following fields:

- Server Name:
- Server1:
- Port1:
- Server2:
- Port2:
- User Name:
- Password:

At the bottom of the form are 'Save' and 'Cancel' buttons.

Not available

Advanced Set -> Authentication type

The screenshot shows the 'neius' web interface with the 'Configuration' tab selected. The 'Advanced Set' sub-tab is active, and the 'authentication type' sub-tab is selected. The main content area contains the following fields:

- RTSP authentication...:
- HTTP authentication t...:

At the bottom of the form are 'Save' and 'Cancel' buttons.

It is possible to choose the authentication type for RTSP and HTTP connection. Two type of authentications are available digest and digest&basic.

Advanced Set -> HTTPS

The screenshot shows the 'neius' web interface with the 'Configuration' tab selected. The 'Advanced Set' sub-tab is active, and the 'HTTPS' sub-tab is selected. The main content area contains the following fields:

- ☐ Enabled
- Certificate installation:

At the bottom of the form are 'Save' and 'Cancel' buttons.


It is possible to install a certificate loading a file .pem, this type of file contain at the same time the certificate and the private key.

5.10 Human body temperature measurement setting

Some devices support body temperature measurement. According to the actual situation or preferences on the site, users can set basic parameter information and abnormal alarm information of body temperature measurement.

5.10.1. Human body temperature measurement setting

The user sets the relevant parameters of human body temperature measurement according to the needs.

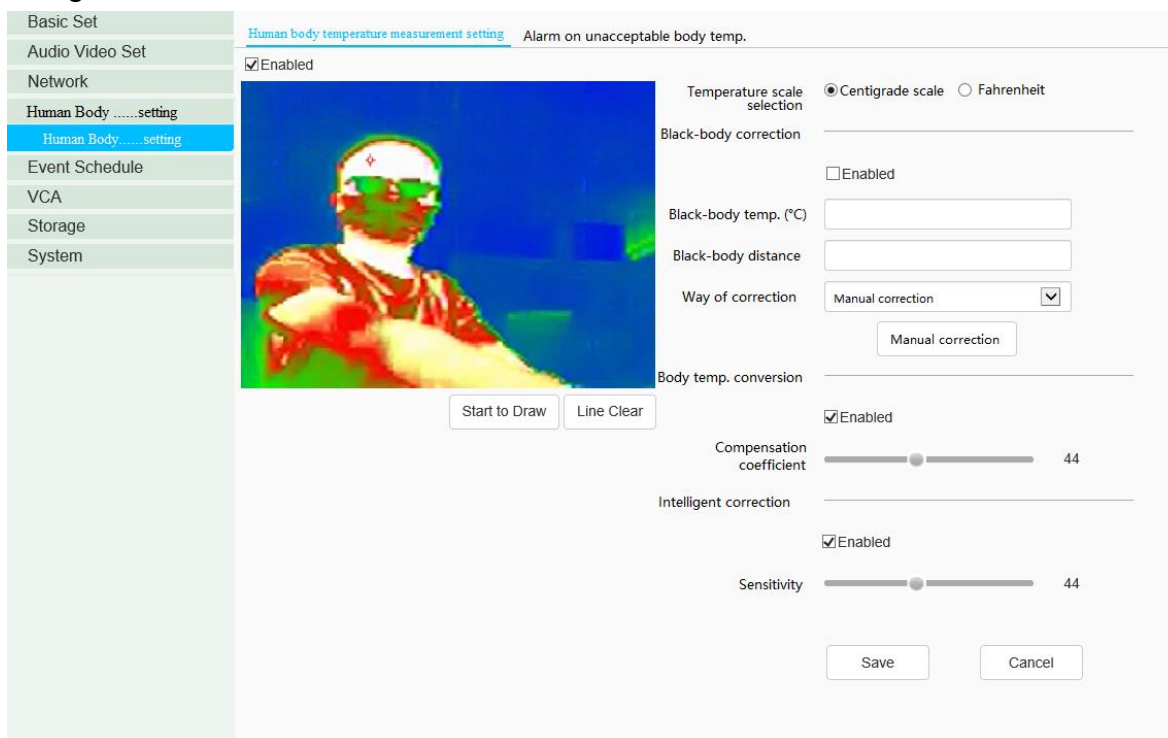

Human body temperature measurement setting interface

- (1) Check the [Enable] check box to turn on the human body temperature measurement function, and uncheck to turn off the human body temperature measurement function.
- (2) Draw the detection area, and the device will detect the body temperature in the drawing area.
- (3) Set parameter information of [Temperature scale selection], [Black-body correction], [Body temp. conversion] and [Intelligent correction] as required.
- (4) After setting, click [Save] to save the parameter settings. To reset the parameter information, click [Cancel] to restore the last saved parameter.

Description:

[Temperature scale selection]: The device supports two temperature scales: Centigrade scale and Fahrenheit. The system defaults to Centigrade scale.

[Black-body correction]: The device supports temperature correction by comparing temperature with a set thermostatic source (black body). Users can realize this function by setting the parameter information of [Black-body temp.], [Black-body distance], [Way of correction].

[Black-body temp.]: Set the black-body temperature for temperature correction.

[Black-body distance]: The device supports temperature correction within a certain range, recommending 1-3m.

Note: Black-body is a constant temperature source. Distance will cause thermal radiation loss. The larger the distance loss, the worse the correction effect.

[Way of correction]: The equipment supports manual correction and continuous correction for temperature correction:

[Manual correction]: The user clicks on the Manual Correction button to perform a temperature correction.

[Continuous correction]: The device will continuously correct the temperature.

[Body temp. conversion]: The device supports the conversion of internal body temperature to body temperature. Users can realize this function by setting the parameter information of [Compensation coefficient].

[Compensation coefficient]: The compensation coefficient ranges from 0 to 100, which can be set according to the actual environment.

[Intelligent correction]: The device supports big data temperature correction. Users can realize this function by setting the parameter information of [Sensitivity].

[Sensitivity]: The Sensitivity range is 0-100, which can be set according to the actual environment.

After all the above parameters are set, click [Save] to save and take effect; click [Cancel] to restore the last saved parameters.

5.10.2. Alarm on unacceptable body temp.

[Alarm on unacceptable body temp.] => [Basic Setting]

The screenshot shows the 'Basic Set' tab selected in the 'Human body temperature measurement setting' section. The 'Alarm on unacceptable body temp.' link is visible. The 'Enabled' checkbox is checked. The 'Max. body temp. (°C)' field is empty. 'Save' and 'Cancel' buttons are at the bottom.

Basic setting interface

The user sets the upper limit of body temperature. When the upper limit of body temperature is exceeded, the alarm will be started.

Click [Save] to save the parameter settings.

Click [Cancel] to restore the last saved parameter.

[Abnormal temperature alarm] => [Schedule]

The screenshot shows the 'Schedule' tab selected. It displays a calendar view for the week of Monday to Sunday. Each day has a blue bar representing the alarm schedule, spanning from 0 to 24 hours. The 'Delete' and 'Delete All' buttons are at the top. 'Save' and 'Cancel' buttons are at the bottom.

Schedule interface

Set the effective time of abnormal temperature alarm, which is set 24 hours a day by default. Click the blue bar to modify the deployment time, and then click save.

Click [Save] to save the parameter settings.

Click [Cancel] to restore the last saved parameter.

[Abnormal temperature alarm] => [Linkage Mode]

The screenshot shows a web-based configuration interface. On the left is a vertical menu with items: Basic Set, Audio Video Set, Network, Human Bodysetting, Human Body.....setting (highlighted in blue), Event Schedule, VCA, Storage, and System. The main area is titled 'Human body temperature measurement setting' with a subtitle 'Alarm on unacceptable body temp.'. Below the title, there is a checkbox 'Enabled' which is checked. A navigation bar contains 'Basic Set', 'Schedule', and 'Linkage...' (highlighted in blue). The 'Linkage...' section contains three columns: 'Common Link', 'Alarm Output', and 'Link Rec'. Under 'Common Link' are checkboxes for 'White Light' (with a 'Flashing' dropdown), 'Sound' (with a 'Warning V' dropdown and a speaker icon), and 'Face ROI'. Under 'Alarm Output' is a checkbox for '[1] Channel 1'. Under 'Link Rec' is a checkbox for '[1] Channel 1' and two radio buttons, 'FTP' and 'Email'. At the bottom are 'Save' and 'Cancel' buttons.

Linkage mode interface

Set the alarm linkage function when the alarm occurs. For example: linkage output, linkage video recording, conventional linkage, etc.

Click [Save] to save the parameter settings.

Click [Cancel] to restore the last saved parameter.

5.11 Event Schedule

5.11.1. Event Management

Event management - > Event Input

Event input setting interface

Set port event detection related parameters.

- (1) Select the input port, check the [Enable] check box to enable the port alarm detection function, and uncheck to turn off the port alarm detection function.
- (2) [Mode Set] set normally open and normally closed, where [NO] refers to the alarm when the disconnected line is short circuited, and [NC] refers to the alarm when the connected line is disconnected.
- (3) The user can set the [Schedule] as required, and only detect the alarm within the set date and time period.
- (4) Set [Linkage Mode] to realize the alarm linkage after triggering the alarm, such as [Common link], [Alarm Output], [Link Snap], [PTZ linkage channel], etc.
- (5) Click [Save] to save the corresponding parameter settings, and click [Copy to...] copy the parameters of the current port number to other port numbers. Click [Cancel] to restore the last saved parameter.

Note: alarm input and alarm linkage output are limited to products that support alarm input and alarm output functions.

Event Management - > Event Output


Event Input	Event Output	Motion	Mask	Other Alarms
<div>Output Port <input type="text" value="1"/> <input type="button" value="v"/></div> <div>Mode Set <input type="text" value="NO"/> <input type="button" value="v"/></div> <div>Delay Time(s) <input type="text" value="10"/> <input type="button" value="v"/></div> <div> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </div>				

Event output setting interface

The user can select two modes to set: [NO] and [NC]. Select the output port, set the port alias, select the mode setting, and select the alarm elimination mode. You can set the delay time of the alarm state through [Delay Time(s)].

Click [Save] to save the corresponding parameter settings, and click [Copy To...] copy the parameters of the current port number to other port numbers. Click [Cancel] to restore the last saved parameter.

Event Management - > Motion

Event Input	Event Output	Motion	Mask	Other Alarms
<div> <input checked="" type="checkbox"/> Enabled </div> <div> Basic Set Schedule Linkage... </div> <div>  <div>Sensitivity <input type="range" value="68"/> 68</div> <div> <input type="button" value="Delete Region"/> </div> <div> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </div> </div>				

Motion setting interface

The user sets the mobile alarm area. When there is an object moving in the setting area,

the video preview interface will prompt the video mobile alarm, and the corresponding alarm linkage will be carried out according to the setting.

- (1) The mobile alarm detection function is enabled by default. Drag the left mouse button in the video screen to draw the area to detect the mobile alarm. Click [Delete Region] to delete the mobile alarm detection area.
- (2) Set the mobile alarm sensitivity, the higher the value, the more sensitive the mobile alarm detection.
- (3) The user can set the [Schedule] as required, and only detect the alarm within the set date and time period.
- (4) Set [Linkage Mode] to realize the alarm linkage after triggering the alarm, such as [Alarm Output], [Linkage Snap], etc.
- (5) Click [Save] to save the corresponding parameter settings, and click [Copy To...] copy the parameters of the current port number to other port numbers. Click [Cancel] to restore the last saved parameter.

Event Management - > Mask

Event Input
Event Output
Motion
Mask
Other Alarms

☒ Enabled

Sensitivity

75

Schedule
Linkage...

Delete
Delete All

Mon	0	2	4	6	8	10	12	14	16	18	20	22	24
Tue	0	2	4	6	8	10	12	14	16	18	20	22	24
Wed	0	2	4	6	8	10	12	14	16	18	20	22	24
Thu	0	2	4	6	8	10	12	14	16	18	20	22	24
Fri	0	2	4	6	8	10	12	14	16	18	20	22	24
Sat	0	2	4	6	8	10	12	14	16	18	20	22	24
Sun	0	2	4	6	8	10	12	14	16	18	20	22	24

Save
Cancel

Mask setting interface

After the occlusion alarm is turned on, when the image in the video screen is blocked, the alarm situation will be detected according to the sensitivity.

- (1) Check the [Enable] check box to turn on the video blocking alarm detection function, and uncheck to turn off the video blocking alarm detection function.
- (2) Set the video occlusion alarm sensitivity, the higher the value, the more sensitive the video occlusion alarm detection.
- (3) The user can set the [Schedule] as required, and only detect the alarm within the set date and time period.
- (4) Set the [Linkage Mode] to realize the alarm linkage after triggering the alarm, such as [Alarm Output], [Link Snapshot], etc.
- (5) Click [Save] to save the corresponding parameter settings, and click [Copy To...] copy the parameters of the current port number to other port numbers. Click [Cancel] to

restore the last saved parameter.

Event Management - > Other Alarms

Some models support abnormal alarm. For exception types, you can select [Disk Full], [Disk R/W Error], [IP Address Conflict], [MAC Address Conflict], and set [Common Link] and [Alarm output].

In [Common Link], you can set [Send to Server] and [Send Email]. ([IP Address Conflict] and [MAC Address Conflict] cannot be set.)

[Alarm Output] the alarm output port number can be selected.

Alarm management - > mail alarm

Some models support email alarm. After the user enables email alarm, the email server will automatically send the alarm email to the email address set by the user when an alarm occurs.


5.12 VCA

Some models support a variety of application modes, such as [face capture], [intelligent monitoring] and so on. When an application mode is selected from [Allocation of resources] menu, the corresponding intelligent analysis' parameters will be set.

[Capture facial images]: When the algorithm finds a person's face in the video, it captures the image and saves it to the preset location.

[Smart surveillance]: Common monitoring mode includes intelligent algorithms such as behavior analysis, crowd gathering, video diagnosis and audio anomaly detection, etc.

5.12.1. Create Rule

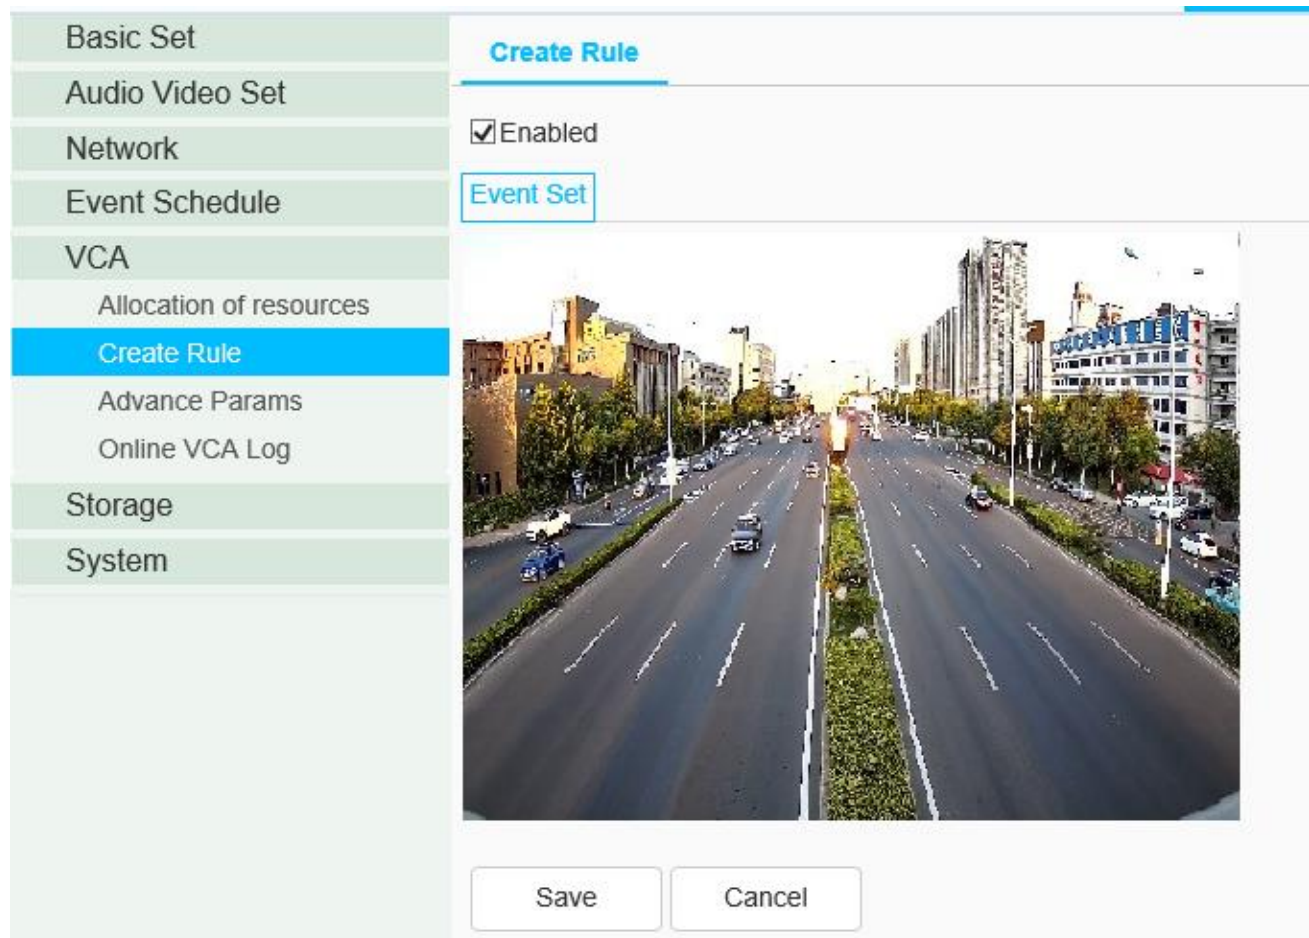

Interface of Create Rule setting

[Enable]: enables or disables the intelligent analysis function of the current channel.

[Event set]: the device supports a variety of algorithms, such as behavior analysis, crowd aggregation, face detection, number of people statistics, and on duty detection, which are mutually exclusive. Only one of them can be enabled. Some devices support face detection, population statistics, on duty detection algorithm, video diagnosis, audio anomaly detection, etc.

Description:

- (1) Different models support different algorithms. Please refer to the actual interface.
- (2) Some algorithms are mutually exclusive with others. Other algorithms can be enabled simultaneously. Please refer to the actual interface.
- (3) Select the corresponding algorithm in [event type] and set the parameters of the algorithm.


DS1099-115A

[Event Selection] = > [Behavior Analysis]

[Behavior Analysis]: the algorithm includes 10 specific algorithms, including trip line, double trip line, perimeter, item left behind, item lost, wandering, running, parking, alert, heat map. Each algorithm can be repeatedly enabled and configured with different parameters, but the total rule cannot exceed 10. After setting, click save, and then click next to configure [Event Schedule]. See [Event Schedule] for details.

[Event Type] = > [Behavior Analysis] = > [Tripwire]

The alarm will be triggered when moving objects pass through tripwire with same direction as the preset.

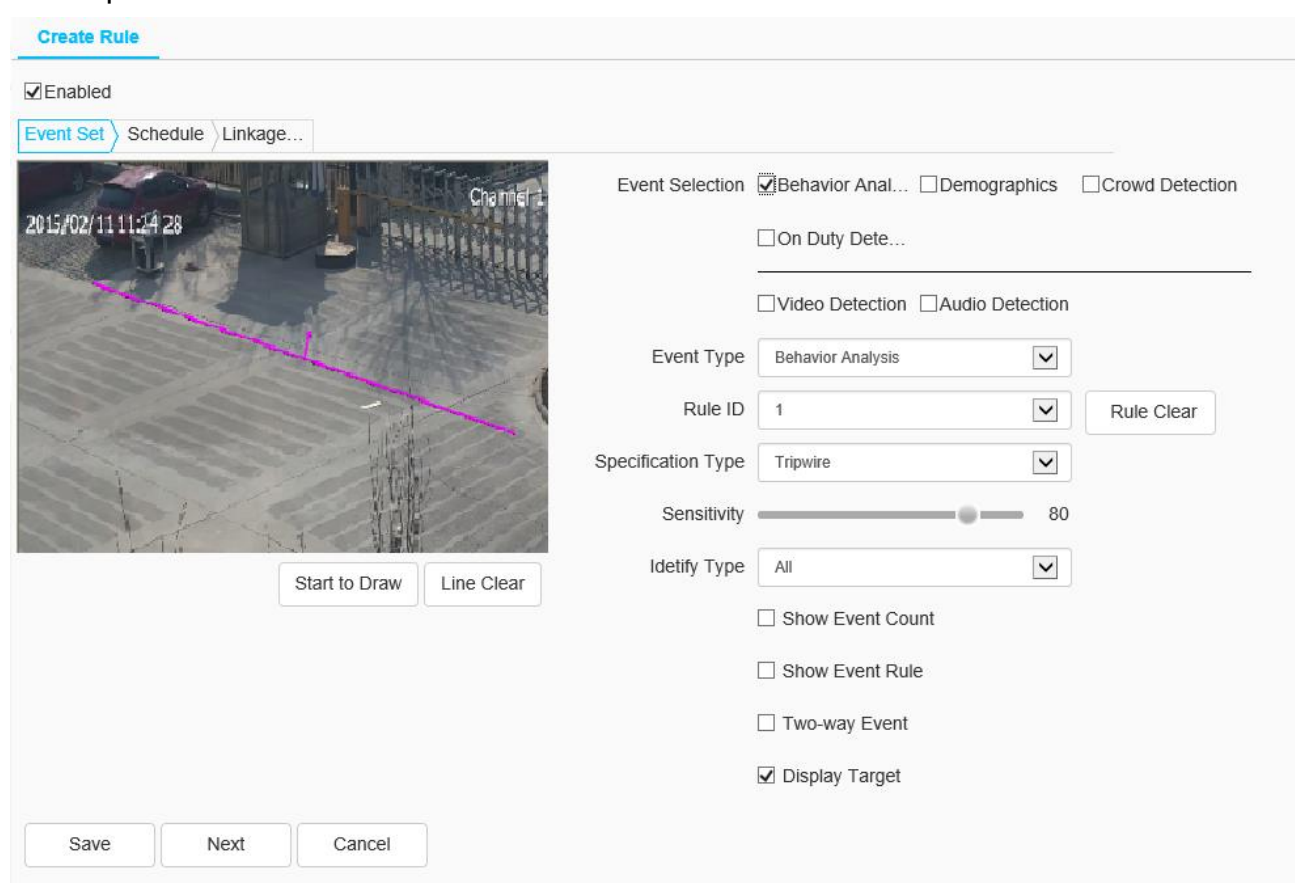

Tripwire setting interface

- (1) Select the rule number, set the event as trip wire, and check [Enable] to enable the rule.
- (2) Draw a rule line, and indicate the direction in which it is forbidden to cross with the arrows on the rule line.
- (3) Set whether to display alarm statistics, display alarm rules, two-way alarm and display target.

- Sensitivity: The more sensitive the detection area is, the smaller the detectable objects

can be, which can be adjusted according to the practical situation.

The conversion of minimum size of detectable objects:

- When the identify type is All: Sensitivity 0-100 corresponds to screen pixel width 50%-3%.

- When the identify type is People or Cars: Sensitivity 0-100 corresponds to screen pixel width 40%-0%;

- Identify Type: All, People, Cars and People plus Cars. As to All, it refers to all the moving objects in detection area, which is not limited to people and Cars. Alarm will be triggered according to the specified type that you have chosen.

- Two-way Event: If Two-way Event is not chosen, the alarm will not be triggered when moving objects pass through tripwire with same direction as the preset.

However, alarm will be triggered when moving objects pass through tripwire if

Two-way Event is chosen

(4) Click save after setting.

[Event Type] = > [Behavior Analysis] = > [Double Tripwire]

Alarm will be triggered when moving objects pass through two tripwires successively within the preset time intervals.

Create Rule

☒ Enabled

Event Set | Schedule | Linkage...

2015/02/11 11:33:03

Start to Draw | Line Clear

Event Selection ☒ Behavior Anal... ☐ Demographics ☐ Crowd Detection

☐ On Duty Dete...

☐ Video Detection ☐ Audio Detection

Event Type Behavior Analysis

Rule ID 1 Rule Clear

Specification Type Double Tripwire

Max Time Interval(s) 30

Min Time Interval(s) 0

Sensitivity 80

Identify Type People

☒ Show Event Count

☒ Show Event Rule

☒ Two-way Event

☐ Display Target

Save Next Cancel

Double tripwire setting interface

- (1) Select the rule number, set the event as double trip wire, and check [Enable] to enable the rule.
- (2) Draw 2 rule lines, and indicate the direction in which it is forbidden to cross with the arrows on the rule line. The directions of the 2 rule lines should be the same. An alarm will be issued when crossing two lines continuously within the specified time.
- (3) Set the maximum and minimum time intervals, which means the time range of crossing two rule lines consecutively.
 - Max Time Interval(s): The maximum time limit that moving objects can stay between two lines. It starts to be counted when moving objects pass through first line and ends when passing through second line. Alarm will not be triggered if the maximum time interval is not exceeded.
 - Min Time Interval(s): The minimum time limit that moving objects can stay between two lines. It starts to be counted when moving objects pass through first line and ends when passing through second line. Alarm will not be triggered if the minimum time interval is not exceeded.
 - Sensitivity: The more sensitive the detection area is, the smaller the detectable objects

can be, which can be adjusted according to the practical situation.

- The conversion of minimum size of detectable objects:

When the identify type is All: Sensitivity 0-100 corresponds to screen pixel width 50%-3%.

When the identify type is People or Cars: Sensitivity 0-100 corresponds to screen pixel width 40%-0%;

- Identify Type: All, People, Cars and People plus Cars. As to All, it refers to all the moving objects in detection area, which is not limited to people and Cars. Alarm will be triggered according to the specified type that you have chosen.

- Two-way Event: If Two-way Event is not chosen, the alarm will not be triggered until moving objects pass through tripwire with same direction as the preset.

However, alarm will be triggered when moving objects pass through tripwire if Two-way Event is chose

(4) Set whether to display alarm statistics, display alarm rules, two-way alarm and display target.

(5) Click save after setting.

[Event Type] = > [Behavior Analysis] = > [Perimeter]


Create Rule

☒ Enabled

Event Set

Schedule

Linkage...



Start to Draw

Line Clear

Event Selection

☒ Behavior Anal...
☐ Demographics
☐ Crowd Detection

☐ On Duty Dete...

☐ Video Detection
☐ Audio Detection

Event Type

Behavior Analysis

Rule ID

1

Rule Clear

Specification Type

Perimeter

Detect Mode

Intrusion

Invasion Time(s)

3

Sensitivity

80

Identify Type

People

☒ Show Event Count
☒ Show Event Rule
☐ Display Target

Save

Next

Cancel

Perimeter setting interface

(1) Select the rule number, set the event as the perimeter, and check [Enable] to enable the rule.

(2) Draw the perimeter detection area.

(3) Select the detection mode (Intrusion, Enter and Leave)

- Detect Mode:

- Intrusion: Alarm will be triggered if a moving object stays in detection area for a period of time specified for intrusion .

- Intrusion Time: Alarm will be triggered if a moving object stays longer than preset intrusion time in detection area.

- Enter: Alarm will be triggered as soon as a moving object enters the detection area.

- Leave: Alarm will be triggered as soon as a moving object leaves the detection area.

- Sensitivity: The more sensitive the detection area is, the smaller the detectable objects can be, which can be adjusted according to the practical situation.

The conversion of minimum size of detectable objects:

- when the identify type is All: Sensitivity 0-100 corresponds to screen pixel width 50%-3%.
When the identify type is People or Cars: Sensitivity 0-100 corresponds to screen pixel width 40%-0%;

- Identify Type: All, People, Cars and People plus Cars. As to All, it refers to all the moving objects in detection area, which is not limited to people and Cars.

Alarm will be triggered according to the specified type that you have chosen.

(4) Click save after setting.

[Event Type] = > [Behavior Analysis] = > [Object Abandone]


The screenshot shows the 'Create Rule' interface. At the top, there's a 'Create Rule' button. Below it, a checkbox 'Enabled' is checked. There are three tabs: 'Event Set' (selected), 'Schedule', and 'Linkage...'. The main area is split into two panels. The left panel shows a video feed of a hallway with a red polygon drawn on the floor, indicating a detection area. Below the video are buttons 'Start to Draw' and 'Line Clear'. The right panel contains settings for the rule. Under 'Event Selection', 'Behavior Anal...' is checked, while 'Demographics' and 'Crowd Detection' are unchecked. Below this, 'On Duty Dete...' is unchecked. Further down, 'Video Detection' and 'Audio Detection' are both unchecked. The 'Event Type' dropdown is set to 'Behavior Analysis'. The 'Rule ID' dropdown is set to '1', with a 'Rule Clear' button next to it. The 'Specification Type' dropdown is set to 'Object Abandone'. Below this, 'Event Time(s)' is set to 5 and 'Sensitivity' is set to 85. At the bottom of the settings, 'Show Event Count' and 'Show Event Rule' are checked, while 'Display Target' is unchecked. At the very bottom of the interface are three buttons: 'Save', 'Next', and 'Cancel'.

Object Abandone setting interface

- (1) Select the rule number, set the event as item left, and check [Enable] to enable the rule.
- (2) Draw the item left detection area. When the item left and item lost are enabled simultaneously, the detection areas should not overlap.
- (3) Set the alarm time: indicate that an alarm will be triggered when the target is kept in the left state in the picture for the time specified.
- (4) Click save after setting.

[Event Type] = > [Behavior Analysis] = > [Missing Objet Detection]

Alarm will be triggered if the disappearance of objects from the scene exceeds Event Time(s).

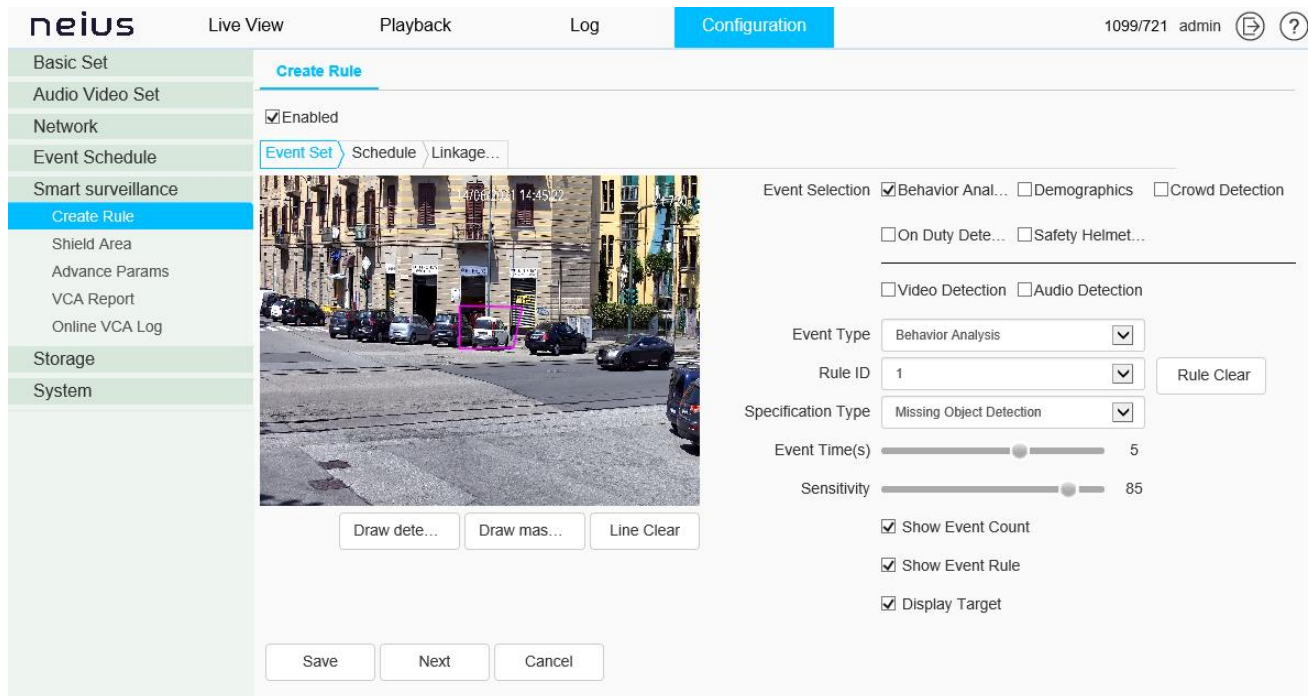

Missing Object detection setting interface

- (1) Select the rule number, set the event as item left, and check [Enable] to enable the rule.
- (2) Draw the item left detection area. When the item left and item lost are enabled simultaneously, the detection areas should not overlap.

Draw Mask Area: Up to three mask areas can be drawn in detection area. Alarm will not be triggered if objects are left in mask area, which is used to prevent disturbance.

- (3) Set the alarm time: indicate that an alarm will be triggered when the target is kept in the lost state in the picture for the time specified.

- Event Time(s): Alarm will be triggered if the disappearance of objects from the scene exceeds Event Time(s).

- Sensitivity: The more sensitive the detection area is, the smaller the detectable objects can be, which can be adjusted according to the practical situation.

The conversion of minimum size of detectable objects:Sensitivity 0-100 corresponds to screen pixel width 50%-3%.

- (4) Click save after setting.
- (5) Click save after setting.

[Event Type] = > [Behavior Analysis] = > [Loiter]

Alarm will be triggered when all the preset rules of loitering are satisfied. The default identification type is People.

Create Rule

☒ Enabled

Event Set | Schedule | Linkage...

2015/02/11 14:21:09 Channel 1

Start to Draw | Line Clear

Event Selection ☒ Behavior Anal... ☐ Demographics ☐ Crowd Detection

☐ On Duty Dete...

Event Type Behavior Analysis

Rule ID 1 Rule Clear

Specification Type Loiter

Event Time(s) 10

Sensitivity 40

Min Area 3 %

☒ Show Event Count

☒ Show Event Rule

☐ Display Target

Save Next Cancel

Loiter setting interface

- (1) Select the rule number, set the event as wandering, and check [Enable] to enable the rule.
- (2) Draw a wandering detection area.
- (3) Set the alarm time: indicate that an alarm will be triggered when the target is kept in the wandering state in the picture for the time specified.

Event Time(s): Alarms will be triggered if the stay of people exceeds Event Time(s);

- Sensitivity: It is related to the threshold value of a reciprocating action. The more sensitive the detection area is, the smaller the threshold value is. Therefore, alarm will be triggered more easily

- (4) Set the minimum area to indicate that the target's moving range (area percentage) in the detection area will trigger the alarm when the area is reached.

Min Area: Area threshold is formed by the central point of targeted motion trial.


Attention: The alarm will be triggered when a person either stays in detection area longer than the preset Event Time(s) or the value of loitering in detection area exceeds the preset times and the area of object's central point movement exceeds the Min Area at the same time

(5) Set the sensitivity. The larger the value is, the more sensitive it is.

(6) Click save after setting.

[Event Type] = > [Behavior Analysis] = > [Running]

The alarm will be triggered when all the preset rules of running are satisfied.

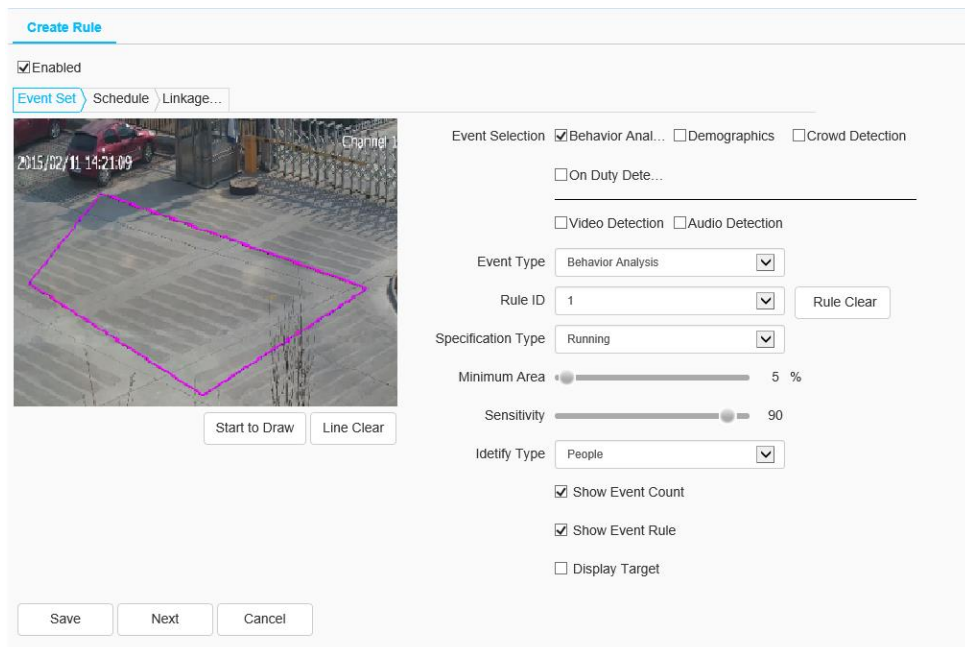

Running setting interface

(1) Select the rule number, set the event as running, and check [Enable] to enable the rule.

(2) Draw a running detection area.

(3) Set the minimum moving distance per second, which means that the target's moving speed (area percentage / second) in the screen is greater than the speed, and then it enters the running state.

- Minimum Moving Distance per Second: The value of speed threshold is related to the percentage of screen pixel width. Alarm will be triggered if the target's minimum moving distance per second exceeds specified threshold.

- Sensitivity: The more sensitive the detection area is, the smaller the detectable

objects can be, which can be adjusted according to the practical situation. The conversion of minimum size of detectable objects:

When the identify type is All: Sensitivity 0-100 corresponds to screen pixel width 50%-3%.

When the identify type is People or Cars: Sensitivity 0-100 corresponds to screen pixel width 50%-0%;

- Identify Type: All, People, Cars and People plus Cars. As to All, it refers to all the moving objects in detection area, which is not limited to people and Cars. Alarm will be triggered according to the specified type that you have chosen.

(4) Click save after setting.

[Event Type] = > [Behavior Analysis] = > [Parking]

Alarm will be triggered when cars stay in detection area for more than the preset Event Time(s) and its driving speed lags behind the threshold speed at the same time. The default identification type is All.

Create Rule

☒ Enabled

Event Set | Schedule | Linkage...

Channel 1
2015/02/11 12:57:05

Start to Draw | Line Clear

Event Selection ☒ Behavior Anal... ☐ Demographics ☐ Crowd Detection

☐ On Duty Dete...

☐ Video Detection ☐ Audio Detection

Event Type Behavior Analysis

Rule ID 1 Rule Clear

Specification Type Parking

Event Time(s) 5

Sensitivity 80

Speed Threshold 0.2 %

☒ Show Event Count

☒ Show Event Rule

☐ Display Target

Save | Next | Cancel

Parking setting interface

DS1099-115A

- (1) Select the rule number, set the event as parking, and check [Enable] to enable the rule.
- (2) Draw the parking detection area.
- (3) Set the alarm time: indicate that an alarm will be triggered when the target is kept in the parking state in the picture for the time specified.

- Event Time(s): It is the time threshold that cars stop moving in detection area;

- Sensitivity: The more sensitive the detection area is, the smaller the detectable objects can be, which can be adjusted according to the practical situation. The conversion of minimum size of detectable objects:

When the identify type is All: Sensitivity 0-100 corresponds to screen pixel width 50%-3%.

When the identify type is People or Cars: Sensitivity 0-100 corresponds to screen pixel width 50%-0%;

- (4) Set the speed threshold to indicate that the target will enter the parking state when the moving speed (percentage / second) in the screen is less than the speed.

Speed Threshold: Car's speed threshold is equal to the product of screen pixel width and preset percentage. The cars are considered to be parked when its driving speed lags behind speed threshold. The alarm will be triggered if the parking timing exceeds preset Event Time(s).

- (5) Click save after setting.

[Event Type] = > [Behavior Analysis] = > [alert]

Some models of camera support alert alarm

- (1) Select the rule number, set the event as alert, and select enable the rule effectively.
- (2) Draw alert detection area.
- (3) Set the sensitivity. The larger the value is, the more sensitive it is.
- (4) Click save after setting.

[Event Type] = > [Behavior Analysis] = > [heat map]

- (1) Select the rule number, set the event as the heat map, and select valid to enable the rule.
- (2) Draw the detection area of heat map.
- (3) Set the minimum moving distance per second, which means that the target's moving

speed (area percentage / second) in the screen is greater than the speed, and then it enters the running state.

(4) Set whether to display alarm statistics, display alarm rules, two-way alarm and display target.

(5) Click save after setting.

[Event Type] = > [face detection]

Some models of camera support face detection alarm

(1) Draw the face detection area, click the "start drawing" button, draw the area, double-click to make the boundary automatically connect the head and tail.

(2) Set the maximum and minimum face size to represent the percentage of target width in the screen.

(3) Set the sensitivity. The larger the value is, the more sensitive it is. The detection rate will improve, and the false detection will increase.

[Event Type] = > [Demographics]

Create Rule

☒ Enabled

Event Set

2019/08/22 12:00:50

Start to Draw Line Clear

Save Cancel

Event Selection ☐ Behavior Anal... ☒ Demographics ☐ Crowd Detection

☐ On Duty Dete...

☐ Video Detection ☐ Audio Detection

Event Type Demographics

Detection Type Detective Line

Mode Vertical Demographics

Max Target Size 15 %

Min Target Size 5 %

Sensitivity 40

Demographics setting interface

(1) Draw the number detection area, click the "start drawing" button, draw the area, double-click to make the boundary automatically connect the head and tail.

(2) Draw a counting line, which indicates the decision line for the target to enter and leave

the area.

(3) Chose the mode between “Vertical Demographics” and “Statistic of staffs in the area”

a) Vertical Demographics:

Installation Requirement:

- The camera should be installed vertically above the detection area to overlook passengers without any shading when they are passing.

Draw Lines:

- Detection Area: When people enter the valid detection area, the algorithm starts to test and track. It will not stop until people get out of the area. This area should be as large as possible under the circumstances that people are not covered.
- Statistical Line: It could be straight or broken line as a counting mark. When people pass the statistical line, numbers will be counted according to its passing direction. After a statistical line is drawn, there is a red arrow attached to line. The direction that red arrow points is to enter and the opposite direction is to get out. The statistical line should be drawn on the central part of polygonal area to make sure that there is some space left on both sides. In actual use, the distance between statistical line and boundaries of polygonal area should be guaranteed at least the width of an adult's shoulder in the screen.

Max or Min Target Size:

It is mainly used to limit the target size so that some disturbance that may appear in actual scene will be filtered to prevent final results from being influenced.

- Min Target Size: It is the percentage that in the screen center, an adult's shoulder width accounts for the minimum of screen width. The default number is suggested.
- Max Target Size: It is the percentage that in the screen center, an adult's

shoulder width accounts for the minimum of screen width. The default number is suggested.

- Sensitivity: It is used to adjust the ease or complexity of counting when people are passing. The more sensitive the detected area is, the easier the counting can be and the less the missing counting will be.

b) Statistic of staffs

- Draw Detection Area: Click left button of mouse to create area in the screen. The people in the drawn area will be counted as the final results.

- Min Target Size: The larger one between the calculated results of $(\text{ImgWidth} \times 5\% \times 0.1)$ and 10 will be chosen as the default number.

- Max Target Size: The smaller one between the calculated results of $(\text{ImgWidth} \times 5\% \times 0.1)$ and 480 will be chosen as the default number.

The object size between the max target size and the min target size will be counted.

- Sensitivity: The default sensitivity of target detection is 40. When the area is crowded or the number of detected people is not in accordance with the actual figure, theoretically, the actual number of detected people will increase or decrease when sensitivity changes.

NB :

the maximum and minimum target size, which indicates the percentage of the target width in the picture.

The larger is the sensitivity value , the more sensitive it is. The detection rate will improve, and the false detection will increase.

[Event Type] = > [Crowd Detection]


Create Rule

☒ Enabled

Event Set

Schedule

Linkage...



Start to Draw

Line Clear

Event Selection
 ☐ Behavior Anal...
 ☐ Demographics
 ☒ Crowd Detection

☐ On Duty Dete...

☐ Video Detection
 ☐ Audio Detection

Event Type

Crowd Detection

Event Time(s)

3

Sensitivity

80

☐ Show Event Count

☐ Show Event Rule

Save

Next

Cancel

Crowd Detection setting interface

- (1) Draw Detection Area: click left button of mouse to create area in the screen.

This function is used to judge whether the number of people in specified area exceeds the preset threshold. If it or Event Time(s) is exceeded, alarm will be triggered.

- (2) Crowd alarm threshold: It is the number of people that is allowed to show up at the same time in detection area. The number will rise up and down around the preset number coordinated with sensitivity.
- (3) Event Time(s): Alarm will be triggered if the number of people that has been detected exceeds the preset threshold and their stay in the detection area exceeds the preset Event Time(s).
- (4) Sensitivity: The default number is 80. The alarm threshold can be slightly adjusted so that alarm will be triggered when the number of detected people is around threshold: Under the situation of 100 sensitivity, the alarm will be triggered when the number of people in detection area meets 0.8 times of alarm threshold. Under the situation of 1 sensitivity, the alarm will be triggered when the number of people in detection area meets 1.8 times of alarm threshold.

Click save after setting.


[Event Type] = > [On Duty Detection]

- (1) Draw the position detection area.

- (2) Set the number of people on duty, and support single position and double position.
On Duty Number: 1 stands for that a single person should be on duty and 2 stands for that two people should be on duty. Alarm will be triggered if the number of people on duty in detection area is smaller than the preset.
- (3) Absences Alarm Time: It is the time threshold related to absence of staff. Alarm will be triggered when the absence time of staff exceeds the preset one.
- (4) Sensitivity: It is related to target detection. The more sensitive the detection area is, the more probable the targets can be detected.
- (5) Set the maximum and minimum target sizes, which indicates the size (percentage) of the target in the picture.
- (6) Min Target Size: The value of filter threshold of target's minimum size is related to screen width percentage;
- (7) Max Target Size: The value of filter threshold of target's maximum size is related to screen width percentage.;

NB The object size between the max target size and the min target size will be counted. Set the maximum and minimum target sizes, which indicates the size (percentage) of the target in the picture.

[Event Type] = > Safety Helmet Detection

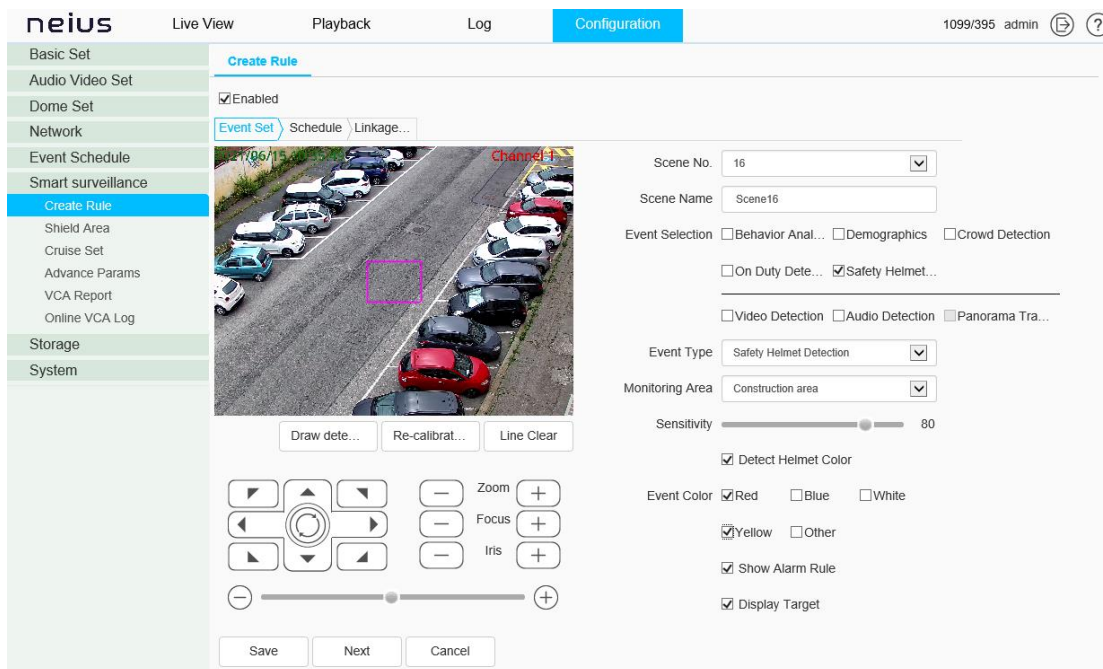

- (1) Sensitivity: It is the sensitivity threshold of object detection. The more sensitive the detection area is, the more probable the objects can be detected.
- (2) Re-calibration Target: It is used to measure whether the head and shoulder sizes meet requirements. The size of re-calibration target can be slightly magnified or minified and it is the best when the head and shoulder can be exactly put in the re-calibration target. The accuracy will be influenced when targets are oversized or undersized.
- (3) Detect Helmet Color: The helmet color that triggers alarm can be checked. If this function is not checked, alarm will be triggered when detecting people without helmet; If checked, alarm will be triggered when detecting helmet with the chosen color and people without helmet

[Event Type] = > [Video Detection]

- (1) Set whether to enable virtual focus diagnosis and scene transformation diagnosis.
- (2) Set the sensitivity. The larger the value is, the more sensitive it is.
- (3) Lens Diagnose: It can help to check if there exists any defocus when this function is chosen.
- (4) Screen Switch Diagnose: It can help to check if there exists any switch of video screen when this function is chosen.
- (5) Click save after setting.

NB: It can be enabled simultaneously with any one of Behavior Analysis, Demographics, Crowd Detection, On Duty Detection and Safety Helmet Detection

(6) [event type] = > [Audio Detection]

- (1) Set whether to enable signal loss detection and signal abnormality detection.
- (2) Set the sensitivity. The larger the value is, the more sensitive it is.
- (3) Click save after setting.

Note: after the detailed content is set, it is necessary to set the [Schedule] and [Linkage Mode] equipment to intelligently analyze and alarm linkage. Click [next] to enter [Schedule] setting.

[Schedule]:

Set the effective time of the rule. By default, it is 24 hours a day. Click the blue bar to modify the deployment time, and then click save. Click [Next] to enter [Linkage Mode] setting.


[Linkage Mode]:

Set the alarm linkage function when the alarm occurs. For example: [Alarm Output], [Link Rec], [Linkage Snap], and etc.


Click [Save] to save the parameter settings. Click [Cancel] to restore the last saved parameter.

5.12.2. Shield Area

No targets will be counted or no alarm will be triggered in shield Area. It can be used to avoid some areas that do not want to trigger alarms or counting in certain scenes. Up to 8 mask area can be drawn

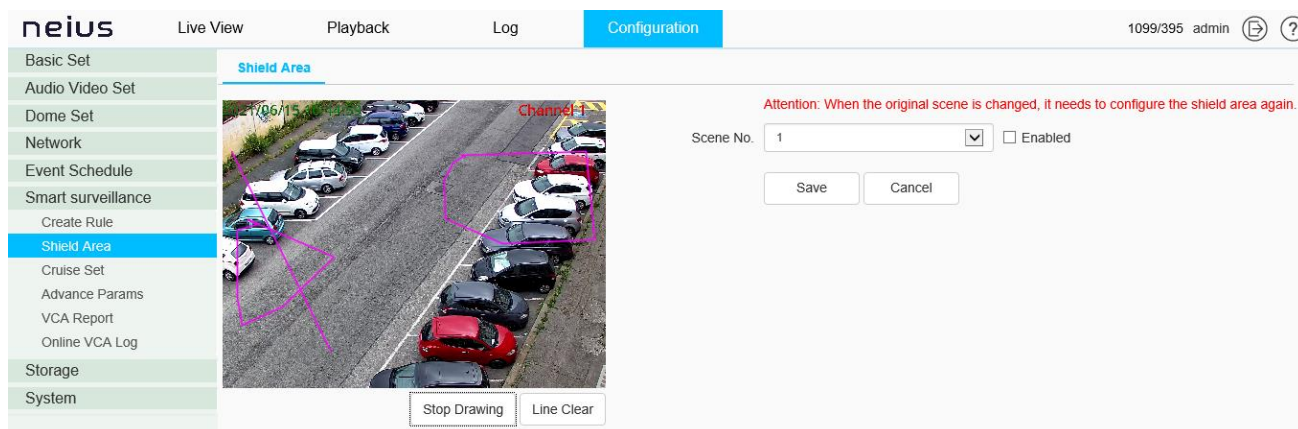

5.12.3. Advance Params

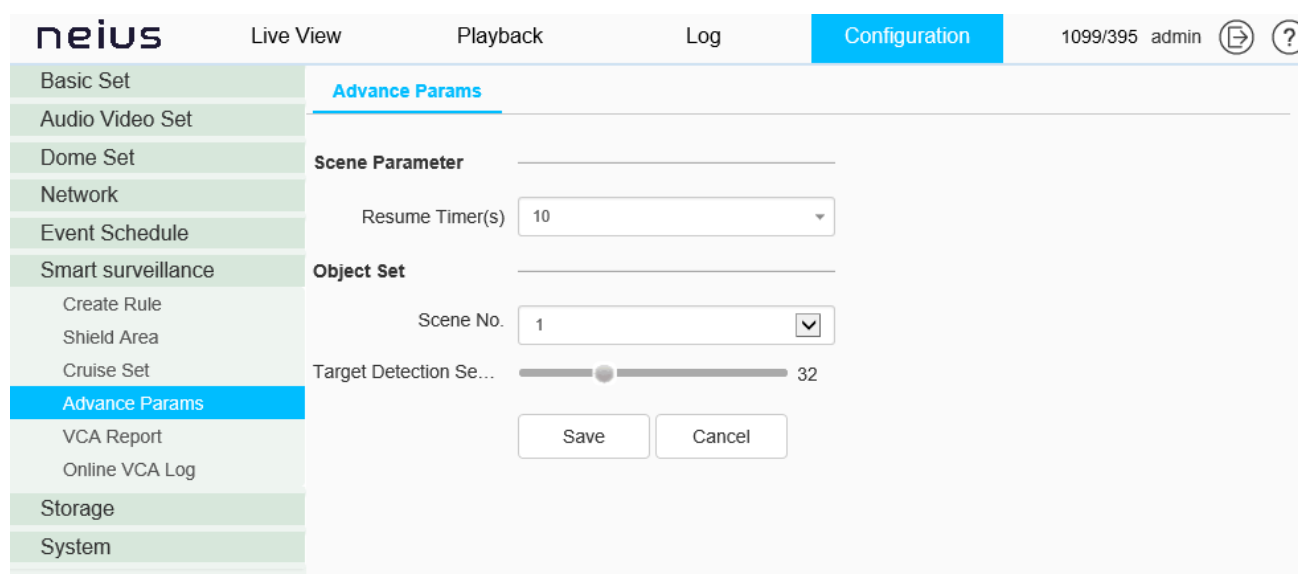

Note: Advanced parameter setting, only under the guidance of the company's technical

personnel.

After all the above parameters are set, click Save to save the parameters; click [Cancel] to restore the last saved parameters.

Passenger flow statistics

Select channel number, report type and statistics time, and click export to export the corresponding report.

Heat chart statistics

Some models support heat chart statistics. Select channel number, report type and statistics time, and click "Statistics" button to perform heat chart statistics on space or time respectively, and display the imaging chart or line chart. Click "export" to export corresponding pictures or reports.

Face Statistics

Some models support face statistics. Select channel number, report type and statistics time, and click "Statistics" button to perform face statistics on age, gender and number of people respectively, and display statistics list, histogram, line chart or pie chart. Click "export" to export the corresponding XLS file.

5.12.4. Online VCA Log

[Scenario Number]: you can select to view the alarm information of intelligent analysis event in a scenario.

[Event]: you can select to view the alarm information of one or all intelligent analysis events.

[Rule ID]: you can select to view the alarm status of some or all rules.

[Reset]: clear the number of events corresponding to the channel rule. When the event occurs again, start counting from 1.

[Clear]: Clear the alarm information displayed in the current list.

5.12.5. Facial Configuration

Face Detection - > Snapshot

Face Detection

☒ Enabled


Snapshot

Schedule

Linkage...

19-03-2020 11:37:55

Channel 1szd



Picture Push Strategy

Best

▼

Snap Times

1

▼

Capture Mode

Full Snap

▼

Face Exposure Bright...

35

Min Face Size

80

☒ Show Minimal Face Size

☐ Show Alarm Rule

☐ Display Target

Start to Draw

Line Clear

Save

Next

Cancel

[Enable]: enable or disable the face detection function of the current channel.

[Snapshot]: you can set the [Picture Push Strategy], [Snap Times], [Capture Mode], [Face Exposure Brightness] and [Min Face Size]

Description:

- (1) [Picture Push Strategy] = >[Best]: it is necessary to screen out a small face map with the highest comprehensive quality score in this trajectory.
- (2) [Picture Push Strategy] = > [Fastest]: it is necessary to select a small face map that meets the comprehensive quality threshold in a short time to push.
- (3) [Capture Mode] = > [Full Snap]: it means not controlled by the security boundary and not filtered by the security boundary threshold. All pictures are sent to the push module by default.
- (4) [Capture Mode] = >[High Quality]: it refers to filtering according to the default security boundary threshold value of the system, and sending the filtered results to the push graph module.
- (5) [Capture Mode]= > [User Defined]: filter according to the security boundary value set by user-defined, and send the filtered result to the push graph module.

Face Detection - > Schedule

Face Detection

☒ Enabled

Snapshot

Schedule

Linkage...

✖ Delete

🗑 Delete All

Mon	0	2	4	6	8	10	12	14	16	18	20	22	24
Tue	0	2	4	6	8	10	12	14	16	18	20	22	24
Wed	0	2	4	6	8	10	12	14	16	18	20	22	24
Thu	0	2	4	6	8	10	12	14	16	18	20	22	24
Fri	0	2	4	6	8	10	12	14	16	18	20	22	24
Sat	0	2	4	6	8	10	12	14	16	18	20	22	24
Sun	0	2	4	6	8	10	12	14	16	18	20	22	24

Save

Next

Cancel

The user can set the [deployment time] as required, and only detect the alarm within the set date and time period.

Face Detection - > Linkage Mode

Face Detection

☒ Enabled

Snapshot
Schedule
Linkage...

Common Link <input type="checkbox"/> Face ROI <input type="checkbox"/> Face Exposure <div> 1 Ho ▼ </div>	<input type="checkbox"/> Alarm Output <input type="checkbox"/> 1	<input type="checkbox"/> Link Rec <input type="checkbox"/> [1] Channel 1
---	---	---

Save
Cancel

(1) Set [Linkage Mode]: to realize the alarm linkage after triggering the alarm, such as [Common Link], [Alarm Output], [Link Rec], etc.

(2) Click [save] to save the corresponding parameter settings. Click [Cancel] to restore the last saved parameter.

5.13 Storage

5.13.1. Schedule Recording

Schedule Recording - > Schedule Recording

Schedule Recording

Packaging Mode

Recording Location

☒ SD/USB
 ☐ FTP

Record Status

Stop

☐ Manual
 ☐ Schedule

✖ Delete

🗑 Delete All

Mon	0	2	4	6	8	10	12	14	16	18	20	22	24
Tue	0	2	4	6	8	10	12	14	16	18	20	22	24
Wed	0	2	4	6	8	10	12	14	16	18	20	22	24
Thu	0	2	4	6	8	10	12	14	16	18	20	22	24
Fri	0	2	4	6	8	10	12	14	16	18	20	22	24
Sat	0	2	4	6	8	10	12	14	16	18	20	22	24
Sun	0	2	4	6	8	10	12	14	16	18	20	22	24

ANR

OFF

Pre-Event Recording

Enabled

Pre-Event Time (S)

10

Post-Event Time (S)

10

Note:Offline recording will follow timing recording rule.

Save

Cancel

Schedule Recording setting interface

Switch the drop-down box to select the target video recording type, set the deployment time, retention time (days), and select the pre recording time and delay recording time.

[Record Status]: display the current equipment recording status.

[Record Start]: click the device to start recording after the test starts, and click the test stop to stop recording.

[Schedule]: four time periods can be set for timing recording, and the timing recording time period parameters can be set to the selected week.


[ANR]: when the network is disconnected, the video shall be recorded according to the time period of timed video recording.

Click [Save]to save the set[recording strategy] parameters, click [Copy To] copy the

parameters of the current port number to other port numbers, and click [Cancel] to restore the last saved parameters.

Note: the equipment is required to support front-end storage for off network recording, and the timed recording fails after the off network recording is turned on.

Schedule Recording - > Packaging Mode

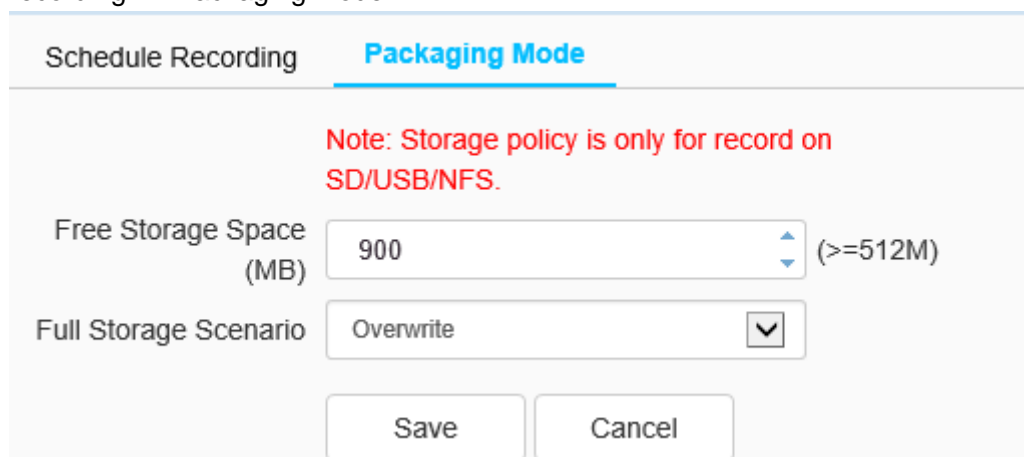


The image shows a web interface for configuring the 'Packaging Mode' for schedule recording. At the top, there are two tabs: 'Schedule Recording' and 'Packaging Mode', with the latter being the active tab. Below the tabs, a red note states: 'Note: Storage policy is only for record on SD/USB/NFS.' There are two main configuration fields: 'Free Storage Space (MB)' with a value of '900' and a note '(>=512M)', and 'Full Storage Scenario' with a dropdown menu set to 'Overwrite'. At the bottom, there are 'Save' and 'Cancel' buttons.

Packaging policy setting interface

- (1) Choose packing method: packing by time and packing by size. NVR will pack the video files according to the set time or size, and then start recording new video files.
- (2) Select the processing mode of the system when the disk space is insufficient, such as "cycle delete", "cycle delete (except for alarm file)" or "stop recording".
- (3) Click [Save] to save the corresponding parameter settings. Click [Cancel] to restore the last saved parameter.

5.13.2. Picture settings

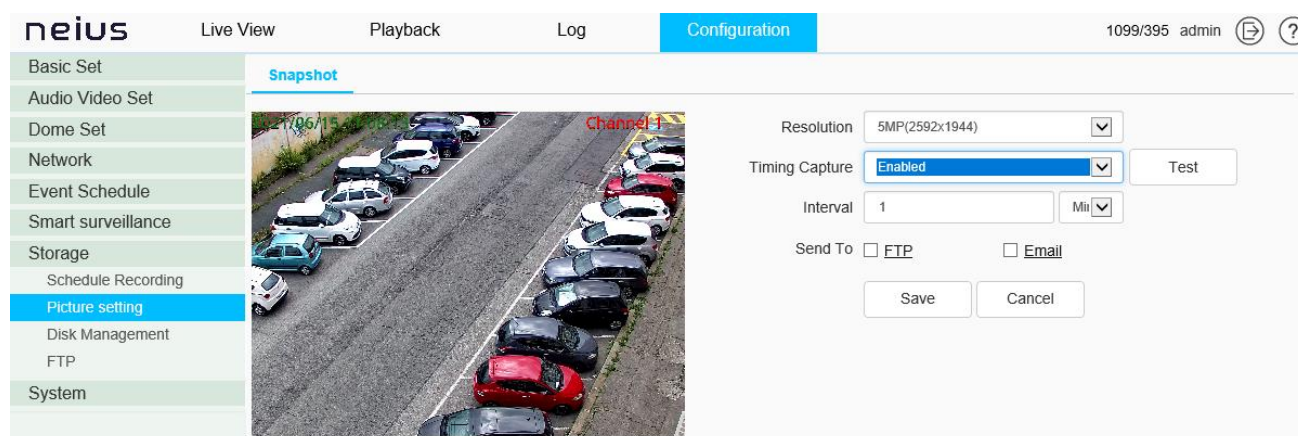

The image shows a web interface for configuring snapshot settings. The top navigation bar includes 'neius', 'Live View', 'Playback', 'Log', and 'Configuration' (which is the active tab). The user is logged in as '1099/395 admin'. On the left, a sidebar menu lists various settings, with 'Picture setting' highlighted. The main area is titled 'Snapshot' and features a live video feed of a parking lot labeled 'Channel 1'. To the right of the video feed, there are configuration options: 'Resolution' set to '5MP(2592x1944)', 'Timing Capture' set to 'Enabled', and 'Interval' set to '1' minute. There are also checkboxes for 'Send To' (FTP and Email) and 'Test' buttons. At the bottom, there are 'Save' and 'Cancel' buttons.

Snapshot setting interface

- (1) After the [Timing Capture] is enabled, set the snapshot [interval] time.
 - (2) [Interval]: enter the time interval in the input box, and switch the drop-down box to select the interval unit.
 - (3) Check [FTP], take a picture and upload it to FTP server.
 - (4) Check [Email], take a picture and send it to the designated email.
- [Test]: perform a snapshot operation to test the snapshot settings.
- [Save]: save the above snapshot settings.
- [Cancel]: restores the last set parameter.

5.13.3. Disk management

Disk Management - > Disk Information

Disk Information								
<input type="checkbox"/>	Device	Total Space	Used Space	Free Space	State	Usage	Operation	

0MB/0MB(Residual Capacity/Total Capacity)

Initialize...

Disk information interface

The remaining capacity and total capacity of the current hard disk and virtual disk can be displayed in the interface, and the purpose of the disk can also be set. There are four options for the purpose of the disk: recording, backup, redundancy and read-only.

[Initialize Disk] select a disk in the disk list and click the "initialize disk" button. The system will pop up a prompt whether to initialize the disk. Click "OK" to initialize the disk.

Disk management -> Disk Policy

Some models support disk policy.

[Video Quota]: set the amount of disk space occupied by video files, in GB. If it is 0, it means that the device dynamically allocates space.

[Image Quota]: set the size of the disk space occupied by the snapshotd image file, unit: GB. If it is 0, it means that the device dynamically allocates space.

[Save]: save the settings.

[Cancel]: restores the last saved settings.

Disk management - > Storage Policy

Some models support storage policies.

Enter the conditions that trigger the [save policy], in the edit box of [remaining disk space].

When the remaining disk space reaches the set value, there are three [save policies] :

- (1) Stop recording: no more video packaging operation;
- (2) Circular deletion: delete the earliest video file to create space for the latest video;
- (3) Cycle delete (except alarm file): delete the earliest video file (except alarm video) to create space for the latest video. Click save after setting to take effect.

5.13.4. NFS

NFS - > NFS

The screenshot shows the Neius camera configuration interface. The top navigation bar includes 'Live View', 'Playback', 'Log', and 'Configuration' (which is highlighted). The user is logged in as 'admin' with ID '1099/721'. On the left, a sidebar menu lists various settings: 'Basic Set', 'Audio Video Set', 'Network', 'Event Schedule', 'Smart surveillance', 'Storage' (expanded), 'NFS' (highlighted), and 'System'. Under 'Storage', there are sub-items: 'Schedule Recording', 'Picture setting', and 'Disk Management'. The main content area is titled 'NFS' and contains two sub-sections: 'FTP basic setting' and 'FTP network storage'. The 'FTP network storage' section is active and shows the 'IP Address' set to '192.168.2.110' and the 'Mapping Path' set to '/volume1/NVR2'. There are 'Save' and 'Cancel' buttons at the bottom of this section.

NFS setting interface

In some camera model you can set NFS function that allows you to store and retrieve data from single or multiple HDD in the network.

NFS -> FTP

The image displays two screenshots of the 'neius' configuration interface. The left screenshot shows the 'FTP basic setting' menu with a dropdown for 'Type of service' showing 'FTP' and 'SFTP' options, with 'Save' and 'Cancel' buttons. The right screenshot shows the 'FTP network storage' menu with fields for 'Server URL' (192.168.2.110), 'Port' (21), 'Path' (/volume1/NVR2), 'User Name' (emico), and 'Password' (masked), with 'Save', 'Test', and 'Cancel' buttons.

FTP setting interface

In some camera model you can choose between FTP and SFTP protocol.

In SFTP or FTP network storage menu you can set [Server URL], [Port], [Path], [User Name] And [Password].

[Save] can set the FTP server information.

[Cancel] restore the last saved parameter.

[Test]: test whether the settings are correct and effective.

5.13.5. Face FTP

The image shows the 'Face FTP' configuration interface. It includes a checkbox for 'Enabled', fields for 'Server URL' (0.0.0.0), 'Port' (21), 'User Name' (admin), 'Password' (masked), and 'Path'. There is a dropdown for 'Directory Structure' set to 'Root directory'. A checkbox for 'Upload background picture' is present, followed by a red note: 'Note: Enabling "Upload Background Map" requires opening the "Capture Background Map" function in intelligent analysis first.' At the bottom are 'Save', 'Test', and 'Cancel' buttons.

Face FTP setting interface

After changing [Server URL], [Port], [Path], [User Name], and [Password], [Path], [Directory Structure], [Save] can set FTP server information. [Cancel] restore the last saved parameter.

[Upload background picture]: when checked, two images, one large image and one small

face image will be uploaded for each alarm; if not checked, only the small face image will be uploaded for each alarm.

[Test]: test whether the settings are correct and effective.

5.14 System

5.14.1. System

System - > Allocation of resources

The screenshot shows the 'neius' web interface. At the top, there are tabs for 'Live View', 'Playback', 'Log', and 'Configuration' (which is active). To the right of the tabs, it displays '1099/721 admin' and two circular icons: one with a right-pointing arrow and one with a question mark. On the left side, there is a vertical menu with the following items: 'Basic Set', 'Audio Video Set', 'Network', 'Event Schedule', 'Smart surveillance', 'Storage', 'System', 'System' (highlighted in blue), 'Users', 'Maintenance', and 'Local PC Setting'. The main content area is titled 'Allocation of resources' and contains two radio buttons: 'Capture facial im...' (unselected) and 'Smart surveillance' (selected). Below the radio buttons are two buttons: 'Save' and 'Cancel'.

Allocation of resources setting interface

In this menu you can set the camera in “Capture facial image” mode or in “Smart surveillance” mode.

The first one allows you to manage the facial detection functionalities, the second one allows you to manage the smart intelligent functions. Every time you change the camera working mode it will be rebooted.

System - > Time

Time Serial Port

Region (GMT+08:00)Beijing, Urumchi, Singap

Synchronization time ☒ Manual ☐ NTP

Local Time 2020-03-19 10:36:51 Set

Daylight-Saving Time ☐ Enabled

Start Time January Last 00 O'clock

End Time January Last 00 O'clock

DST Bias 30min

Save Cancel

Time setting interface

Time zone: set the time zone information.

[Local Time]: real time display of local time.

[Synchronization Time]: the synchronization equipment time is the same as the local time.

[Daylight-Saving Time]: set whether daylight saving time is enabled. Set the time range and offset time for daylight saving time.

Region (GMT+01:00)Amsterdam, Berlin, Rom

Synchronization time ☐ Manual ☒ NTP

NTP Server time.windows.com

Port 123

Time Interval(minute) 60 Test

☒ Onvif timing allowed

[NTP server]: enter the legal IP address of the server or the URL.

[Port]: enter the corresponding port number.

[Time Interval]: enter the interval of automatic time calibration.

[Test]: Test NTP automatic timing.

Click [save] to save the currently set parameters. Click[Cancel] to restore the last saved parameter.

System - > Serial Port

Time
Serial Port

Serial Port Set

Port Name
COM2

Baud Rate
9600

Parity Bit
None

Byte Size
8

Stop Bit
1

Work Mode
Transparent Channel

Protocol Set

Port Name
COM2

Protocol
DOME_PELCO_P

Address
1

Save
Cancel

Serial port setting interface

Some models support serial port settings. It is divided into [serial port setting] and [protocol setting].

[Serial Port Set] requires the user to select [serial port number], [baud rate], [check bit], [data bit], [stop bit] and [working mode].

For [Protocol Set], you need to select [channel number], [serial port number], [protocol] and [address].

Note:

- (1) Because the functions of different models are different, please refer to the actual interface.
- (2) Some models support the baud rate option.

Users

Connection

Connection

▼

Refresh

Channel	Network Mode	Client IP	User Name	

Connection information interface

Display the detailed list of connecting / logging in the device, including channel type, network mode, client IP and user name. Click [Refresh] to update the list.

5.14.3. Maintenance

Maintenance - > Maintenance

Device Control

Basic Reset

Factory Reset

Reboot

Lens Reset

Open Telnet

Configuration In/Out

Files (*.box)

Browse

Import

Export

Note: User need to manually input new IP to login again when IP address changed.

System maintenance interface

[Device Control]: depending on the camera capabilities it allows customers to perform [restore default], [simple restore], [restore factory], [restart equipment], [aperture correction],

[lens reset], [disable / enable ABF], [Open Telnet] and other operations. Because the functions of different models are different, please refer to the actual interface.

[Import] / [Export]: used for equipment maintenance, mainly divided into three categories:

(1) [Event Server] options include alarm time period and linkage item setting information, excluding intelligent analysis.

(2) [Smart Analytics] options include settings related to intelligent analysis, including rules, time periods, etc.

(3) [System Setting] options include all setting information except the above alarm, intelligent analysis, logo, storage strategy and local setting, including video parameters, HD parameters, character superposition, video recording strategy, network setting and other information.

Maintenance - > Upgrade

Maintaince

Upgrade

Version Information

Factory ID

ID0150150150150150090

MAC

0f:0f:0f:0f:0f:0f

Hardware Version

1024

Kernel Version

NVSS_V20.0.1.20200108

Web Version

6.1.19.808

28181 Version

28181_V3.0.0.20190524

cgi Version

CGI_V3.0.0.20190731

gb1400 Version

GB1400_V3.0.0.20190731

onvif Version

ONVIF_V3.0.0.20200103

p2p Version

P2P_V3.0.0.20190103

rtmp Version

RTMP_V3.0.0.20190524

rtsp Version

RTSP_V3.0.0.20190524

ytlf Version

YTLF_V3.0.0.20200103

app Version

APP_V3.0.0.20190524

Firmware Upgrade

Upgrade File

(*.box,*.bin)

Browse

Upgrade

System upgrade interface

[Version Information]: it includes equipment information such as [factory ID], [MAC], [Hardware Version],[Kernel Version] and [Web Version].

[Firmware Upgrade]: the user can select a local legal. Box or. Bin file to upgrade the device remotely. The upgrade operation of the kernel program shall be conducted under the guidance of the company's technical personnel.

[Browse]: find the upgrade file in the pop-up window.

[Upgrade]: upgrade to the latest version through the network.


5.14.4. Local PC Settings

[Record Videos/Live Snapshots/Playback Snapshots/Video Clips/Downloaded Files/VCA
DS1099-115A

Snapshots/Protocol Type]: the storage path can be set.

[Local Capture Format]: select [JPG], [BMP]. To send the snapshot pictures to FTP and email, JPG must be selected.

5.15 EW

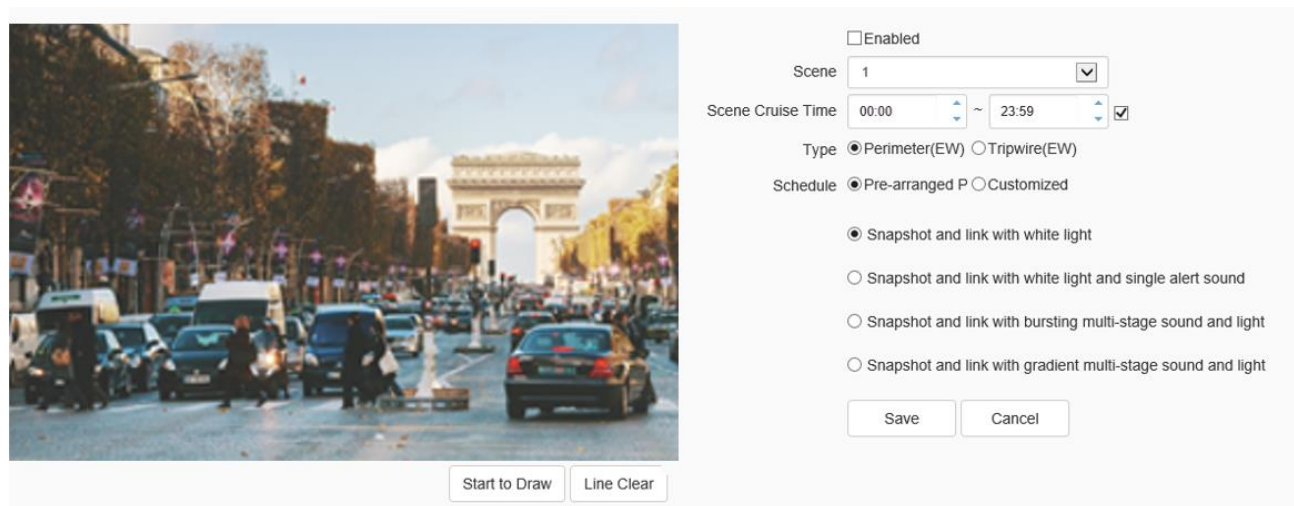

Alert setting interface

In the alert setting interface, the user can set alert parameters according to the actual situation or preference of the site.

Plan setting:

Step 1 check enable effective alert algorithm.

Step 2 select [Type], set perimeter alert or trip line alert, and set the effective time of alert scene.

Step 3 adjust the scene and draw warning area or warning line. Perimeter alert default full screen is alert area. If you need to adjust, you need to clear the line and draw again.

Step 4 select a preset alert plan.

Step 5 click the "save" button to complete the algorithm setting and exit the alert setting interface to take effect.

User-defined settings:

Step 1 check enable effective alert algorithm.

Step 2 select alert type: perimeter alert or trip line alert, and set the effective time of alert scene.

Step 3 adjust the scene and draw warning area or warning line.

Step 4 select custom alert template.

Step 5 set linkage item or advanced parameter. Among them, linkage items can be set with three levels of warning at most, and each level of warning effect can be set separately.

Step 6 click the "save" button to complete the algorithm setting and exit the alert setting interface to take effect.

Description:

(1) The device supports setting up multiple scenes. You can set up different scenes through the above steps.

(2) In the perimeter alert, the plan of "explosive multi-level acoustooptic alert" is: after the target intrudes into the alert area, the white light flashes strongly and the voice calls.

(3) "Progressive multi-level acoustooptic alert" plan is: it is divided into three levels by default, and the warning effect is enhanced step by step. When the retention time in the upper level is greater than the set value, it will enter the next level.

(4) The linkage settings in the user-defined template can set up to three levels of linkage, and the linkage items can be set separately in each level of settings.

(5) In linkage setting, the constant light option of linkage white light indicates that the white light will be turned on in case of alarm, and will be turned off automatically after the alarm is cancelled.

(6) Advanced parameters in the user-defined template include: Defense week, detection mode, trigger alarm target, trigger sensitivity, maximum tracking time, display rule and target box setting, etc.

(7) The alert types are divided into perimeter alert and trip line alert, aiming at the intrusion area, departure area and cross-border behavior. The perimeter alert is the intrusion zone alert by default. Users can modify the detection mode in the advanced settings of the user-defined template.

(8) The warning detection target defaults to person and vehicle. Users can user-defined advanced settings according to specific needs.

(9) The longest tracking time takes effect when the linkage tracking, which means that when

the time is reached, the tracking action will stop and return to the alert monitoring scene.

(10) The user-defined alert tone can be set in the following two ways: 1. Download audiomaker.exe software, record the warning tone according to the help document of the software, make an upgrade package, and then download it to the camera through the camera's web page upgrade mode. 2. Download the mobile client through the QR code button in the preview interface, and record and upload the warning tone for the devices connected to the Internet that support custom warning tone.

6 Simple Troubleshooting

6.1 System Failure

6.1.1 unidentified USB flash disk or micro SD card

Possible causes:

- (1) Plug and unplug the U disk or micro SD card, and operate in case of power failure;
- (2) There is a problem with the partition information of the disk, which causes the device to be unrecognized and needs to be reformatted;
- (3) The card is loose, unplug it again after power failure, and then start the equipment;

6.1.2 unrecognized wireless network card

Possible causes:

- (1) Plug and unplug the wireless network card, which needs to be operated in case of power failure;
- (2) The static electricity causes the network card to enter the protection state, so the equipment needs to be powered on again;
- (3) The working state of the wireless network card is unstable, and the hardware of the wireless network card is faulty, which needs to be replaced; it is necessary to obtain the latest list of wireless network cards supported from the company.

6.2 Network Failure

6.2.1 the device is powered on and cannot be searched in the IP searcher

Troubleshooting steps:

- (1) Confirm whether the camera is powered on normally, whether the host network card and driver are normal, whether the network cable connection is normal, and whether the network topology connection is smooth;
- (2) Connect the host computer and HD network camera directly with the cross network cable. If it still fails, reset and retest the camera;
- (3) Restart the searcher software, or select the IP in the same network segment with the device;
- (4) Restart the computer;
- (5) If there are spare hosts and HD network cameras, they can be replaced for testing;
- (6) Check whether the equipment has passed the 4G card networking;
- (7) If you still have any questions, please contact us;

6.2.2 image cannot be connected normally in IE

- (1) Download and install IE control for the first login;
- (2) Add the device IP to the trusted address;
- (3) Re install IE control;

6.2.3 after logging in the network front-end product, it is found that the video is not the video of the front-end product

Possible causes: there are network devices with the same IP and MAC addresses in the network;

Troubleshooting steps:

- (1) Disconnect the network connection of the current device, Ping the corresponding IP, and check whether there is a return packet;
- (2) Use a searcher to search for devices with duplicate IP addresses, disconnect the device network, and then search for verification;
- (3) For public network connection, the port selected during login is the port mapped to other devices;

6.2.4 the camera can be pinged but cannot log in normally

Possible causes:

- (1) Port 3001 is blocked by firewall;
- (2) The port number used for login is incorrect;
- (3) Incorrect user name and password for login;
- (4) Too many clients connected, the number of device connections is full;
- (5) The camera has set up a black and white list, and is forbidden to log in from the current computer. You need to modify the settings first;
- (6) Check whether the listening port of the device is the same as the port connected and used on the software through the searcher;

6.2.5 UDP cannot connect to video

Possible causes:

- (1) Other clients on the same machine have connected to the video;
- (2) The port of UDP conflicts with that of other application programs of the computer.
Modify the device IP to test;

6.2.6 the videos of two network front-end products are alternately connected or disconnected

Possible causes:

- (1) IP address conflict can be viewed by Searcher;
- (2) MAC address conflict can be checked by Searcher;
- (3) The IP address conflicts with the IP address of other computers;

6.3 Operation Failure

6.3.1 video cannot be connected normally in IE

Troubleshooting steps:

- (1) Confirm that the host IP address and the network camera address are set in the same network segment, if not in the same network segment, change to the same network segment;

Note: for example, in different network segments, the routing of these two network segments must be ensured.

- (2) Confirm the version of IE, it is recommended to install IE 6 and above;

- (3) Confirm the normal installation of the video card driver and DirectX, it is recommended to install the latest video card driver and DirectX;
- (4) Temporarily shut down the anti-virus software and software firewall for further testing; temporarily shut down the system's own firewall for further testing;
- (5) Delete the previously downloaded control when connecting, reconnect and download the installation control test;
- (6) Replace the main engine for test;
- (7) If you still have any questions, please contact us;

6.3.2 unable to connect sub code stream

Possible causes: there are too many other clients connected, and the number of connections is full;

6.4 Control Failure

6.4.1 in ie, it can normally control the PTZ with 485 connection, but it cannot be controlled in the software

Troubleshooting steps: please confirm that the correct protocol, address and baud rate have been selected in the software;

Possible causes:

- (1) Please confirm that the address setting in the software is correct;
- (2) If easy7 software is used, ensure that "system settings -[host] interface - Video Channel - Equipment [address and protocol] content settings are correct";
- (3) If there are still problems, please contact our after-sales technical personnel;

6.5 Video Failure

6.5.1 the software can connect the video normally, but the image is unstable, intermittent, frame loss and other phenomena

Troubleshooting steps:

- (1) Exit the software, check the CPU utilization of the machine, and eliminate the cause of insufficient configuration of the machine itself or whether the host is poisoned;

- (2) Ping the device to see if there is packet loss;
- (3) Use the bandwidth test software to test the network bandwidth. If the bandwidth is insufficient or unstable, please contact the network operator;
- (4) When the network bandwidth is insufficient and the video fluency is guaranteed, we first consider reducing the resolution of the image; in the case of not changing the resolution, in the IE image quality setting, change to the variable bit rate mode, and increase the values of the best quality and the worst quality in the image quality, so as to appropriately reduce the video quality;
- (5) Whether the system performance is insufficient due to too many functions being turned on, such as character stacking, key area, intelligent analysis and other functions occupying the performance, first turn off some functions and then verify whether the video is normal again;

6.5.2 If the video connection display is normal, but the image is black screen or seriously distorted

Other features: no character superimposition, or the image is seriously distorted but can display normally after zooming in

Possible causes:

- (1) DirectX version is lower than 9.0c;
- (2) The video card driver is incorrect, resulting in the DirectX acceleration function not starting, windows The performance of Server 2003 is more obvious;
- (3) Full screen occlusion is set;

6.5.3 If the video can be connected under IE, but the display in the software is abnormal

Troubleshooting steps:

- (1) Confirm whether the software version is correct;
- (2) Confirm the correctness of "IP address" and "server type" of "server edit information" in the software; it is recommended to adopt "main code stream + TCP" mode in LAN, and WAN can adopt "bystream + TCP" mode;
- (3) Confirm that the video is connected to the main interface of the software;
- (4) Restart the software and connect;

6.6 Audio Failure

6.6.1 If video browsing and control are normal, but there is no front-end audio

Troubleshooting steps:

- (1) Confirm that the driver and wiring of the corresponding sound card of the host are correct, and you can play music to test whether it works;
- (2) Confirm that "audio and video stream" is selected instead of "video stream";
- (3) Verify the correctness of front-end pickup equipment and wiring;
- (4) Refer to 6.6.2 audio signal weak solution;

6.6.2 weak audio signal

Troubleshooting steps:

- (1) Check whether the audio input type is selected correctly. The default audio input of the external passive mic model is MicIn. If the external active audio is used, it needs to be set to LineIn;
- (2) Adjust the audio input volume value through IE, and check whether it is too low;
- (3) The back-end sound playing unit must be an active speaker;

6.7 Alarm Failure

6.7.1 no alarm output

Troubleshooting steps:

- (1) Confirm that the input and output signal wiring mode of the alarm is correct, ensure that the signal is the switch signal, and do not connect the wiring wrongly or falsely;
- (2) Check whether the port setting of the network video server is correct and whether the enabling setting of the input and output ports is correct through IE;
- (3) Confirm whether the alarm input and output equipment is normal;

6.8 Parameters does not take effect after settings

6.8.1 abnormal power off after parameter setting

Possible cause: parameters can be saved normally only after 1 minute of setting, unless

DS1099-115A

automatic restart or IE click [system restart], abnormal power failure, etc. may cause parameters not to be saved normally.

6.8.2 failure to restart the system as required

Possible cause: some parameters have been changed. You need to restart the system, otherwise it may not take effect.

6.9 Others

6.9.1 the capacity of the used U disk computer on the camera becomes smaller

Possible cause: when the camera formats the U disk and micro SD card, special partition operations are carried out, resulting in part of the capacity cannot be recognized on the computer. If you want to continue to use ordinary storage media, you need to reformat it on your computer.

Solution:


- (1) Download the installation software BOOTICE.EXE;
- (2) Insert the USB stick or micro SD card to be formatted into the computer. Open the software, select the corresponding U disk in the target disk, and then select partition management - > repartition and format - > select USB-FDD mode - > select FAT32 or NTFS system format - > input volume label, such as "U disk" - > finally click OK to finish the U disk repartition.

Appendix I Lightning Protection and Surge Protection

Lightning and surge protection shall be considered for outdoor cameras. On the premise of ensuring electrical safety, the following lightning protection measures can be taken:

- The signal transmission line must be kept at least 50 meters away from the high-voltage equipment or high-voltage cable;
- Outdoor wiring shall be routed under the eaves as much as possible;
- For the open area, the sealed steel pipe must be buried for wiring, and the steel pipe shall be grounded at one point, and the overhead wiring is absolutely prohibited;
- In strong thunderstorm area or high induced voltage area (such as high-voltage substation), additional high-power lightning protection equipment and lightning rod must be installed;
- The lightning protection and grounding design of outdoor devices and lines must be considered in combination with the lightning protection requirements of buildings, and meet the requirements of relevant national standards and industry standards;
- The system must be equipotential grounded. The grounding device must meet the double requirements of system anti-interference and electrical safety, and shall not be short circuited or mixed connected with the zero line of the strong current network.

When the system is grounded separately, the grounding impedance shall not be greater than $4\ \Omega$, and the cross-sectional area of the grounding conductor shall not be less than 25mm^2 .

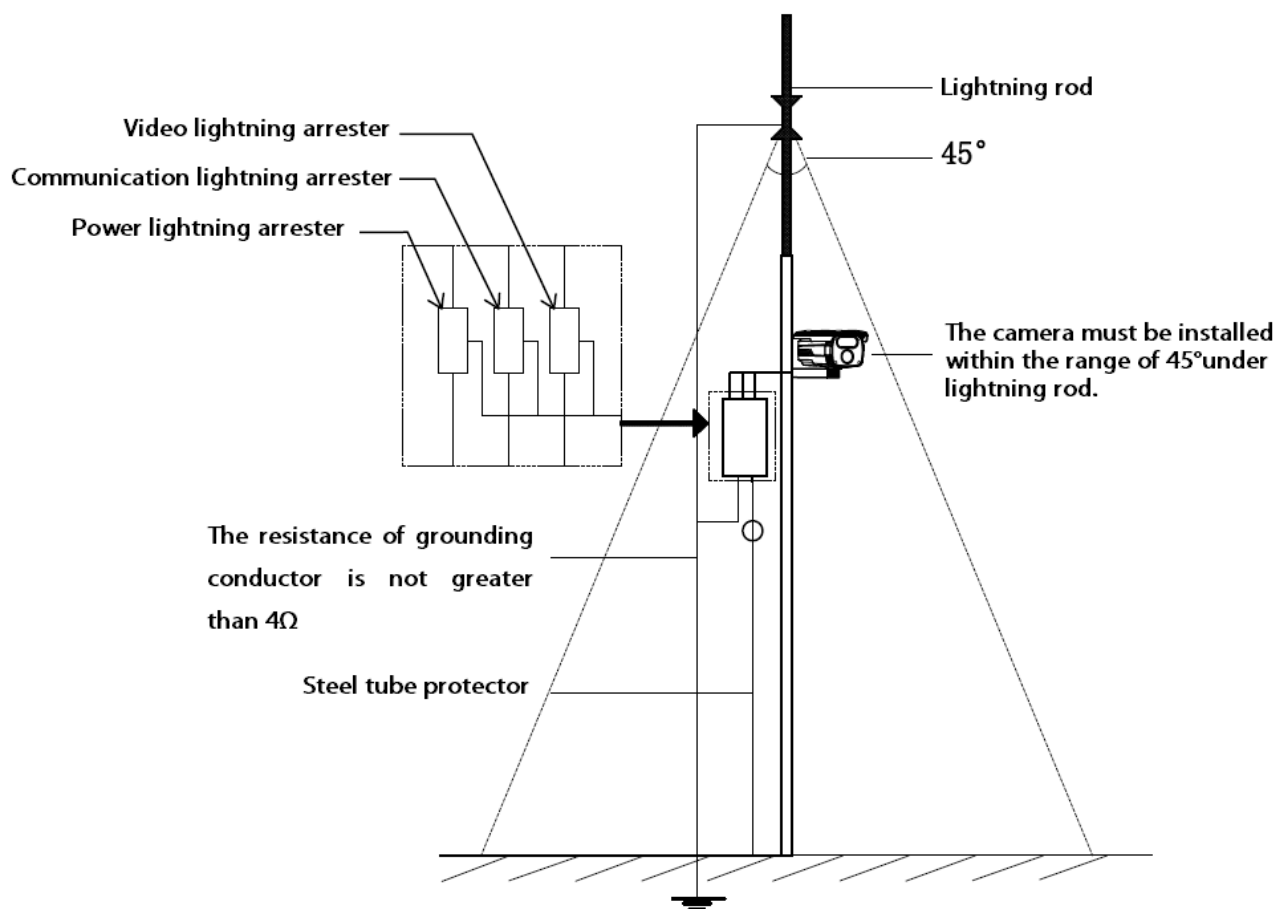

Appendix 2: default parameters and recommended configuration

Default parameters of HD series webcam

[default IP parameters] IP address: 192.168.1.2; subnet mask: 255.255.255.0;

Gateway: 192.168.1.1; DNS: 192.168.1.1

User name: admin Password: admin

[onvif protocol connection] VLC connection address: rtsp://192.168.1.2:554

User name: admin Password: admin

Recommended system configuration

Type	Recommended computer configuration
CPU	Intel Core i7 2600 quad core and above
Memory bar	4G and above
Hard disk space	>250G
operating system	Windows 7 and above
Browser	IE 8 and later
Direct X	10.X
Resolution	1920 × 1080 or higher
Network card	10 / 100 / 1000 Base-T Ethernet
Graphics card	Independent video card / video memory 512M

DS1099-115A

URMET S.p.A.
10154 TORINO (ITALY)
VIA BOLOGNA 188/C
Tel. +39 011.24.00.000 (RIC.AUT.)
Fax +39 011.24.00.300 - 323

urmet



Area tecnica
servizio clienti+39 011.23.39.810
<http://www.urmet.com>
e-mail: info@urmet.com
MADE IN CHINA